



Quick Start Guide

Table of Contents:

- 1 - To bring car onto lift
- 2 - Enter a new vehicle
- 3 - To find a vehicle
- 4 - OBD-II functions
- 5 - RPM configuration
- 6 - Tests
- 7 - Calibration verification/maintenance

Key:

 - PowerDyne function

Bold/Underline - PowerDyne Menu selection

Bold - PowerDyne Button / Popup Selection

 - Helpful tip

 - Extremely important!

To Bring Car Onto Lift

Turn on shop vent fan

 **Lift**

 **Up** (this locks roller brake)

- Bring wheel just behind roller

TIP You want the wheel to be “climbing” the roller during operation

- Chock both sides of one wheel
- Use 4 tiedowns
- Tighten straps (somewhat loose)

 **Lift**

 **Down** (this unlocks roller brake)

- Roll to 10 MPH to center the car  **Keep hands on the steering wheel!**
- Tighten straps fully
- Lock handles

TIP crisscross straps on front wheel drive cars

- Place engine cooling fan in front of car
- Open shop doors
- Mount AFR Sensor
- Mount exhaust vent hoses
- Open Window
- Turn on vehicle exhaust vent fan

 **DO NOT USE BRAKES!**

Enter a New Vehicle

 **File**

 **Load Configuration**

 select **2WD** or **AWD**

 **Database**

 **Customer Vehicles**

 select **New Search**

- Enter the First and Last name

 select **Save**

 select **Vehicles**

- Enter the:
- Plate
 - Year
 - Make
 - Model
 - Weight
 - HP @ 50
 - Cylinders
 - Displacement

 select **Save**

 select **Select**

 select **Exit**

 select **Exit**

To Find a Vehicle

 **Database**

 **Pick Vehicle For Testing**

- Enter the name

 select **Search**

 select the desired vehicle

 select **OK**

OBD-II Functions

 You must reload OBD-II whenever you restart the program or turn the car ON/OFF

 Calibration

 Scan Tool Setup

 OBD-II

- Select the channel to edit
- Pick parameter by scrolling down

To view parameters on PowerDyne:

 Double click the window you want changed

- Scroll down
- Select parameter

 select **OK**

RPM Configuration

 Calibration

 SmartTach Setup

 Download Inductive Configuration (verify "Remote" on SmartTach)

To change the RPM Source from **Spark Plug** to **OBD-II** or **VS/VS**:

 Calibration

 Dyno Parameters

- Locate the **Engine RPM Input Source** area (top right corner)

 select **OBD-II** or **Analog** (Spark Plug for Inductive) (TS1) (OPT)

TIP *make sure the switch box is at the correct position, A or B*

- Rev the engine to 3,000 RPM for inductive

TIP *If the RPM drops off, change the threshold voltage with the following instructions:*

 Calibration

 SmartTach Setup

 Set Threshold Voltage

- The **Default** is **1.760** (The range is **0-5 V**)

 Change the **Default** to **.95**

- Rev the engine to 3,000 RPM

- If it still drops off,  change the **Default** to **2.15**

TIP *If RPM is different between the Car Tach and the Computer, calibrate with the following instructions:*

 Calibration

 SmartTach Setup

 Set Pulse/Rev

- Set so that SmartTach and the computer/screen RPMs match.

Tests

TIP For a cleaner view, use “Graph by Time” on the View Trace Function.

Basic Horsepower Test

 Tests

 Performance

 Power Curve

- Set the **Start Speed** to **50 MPH**
- Set the **Stop Speed** to **80-130 MPH** (depending on HP)

 click **Start Test**

- Be in 4th gear @ 40 MPH (or closest 1:1 ratio), then launch.

 **Check tie-down straps after run!**

Basic 1/4 Mile Test

 Tests

 Timing

 1/4 Mile

 click **Start Test**

 **Check tie-down straps after run!**

TIP PowerDyne auto-saves results when “**Save Trace**” and “**Save Result**” is highlighted (not grayed-out)

 **DO NOT USE BRAKES!**

Calibration Verification / Maintenance

Calibration

 Calibration

 Load Cell Calibration

 Load Cell 1

- Verify that the **Current (in)** and **Current (zero)** are within 0.04 of each other

To Recalibrate:

 click **Zero** with no weight

- Place a 50 lb. cal weight on the load cell

 click **Span**

 click **OK**

Maintenance (Lubrication)

Every 6 months:

- Grease pillow blocks with Mobile Synthetic Grease (High Temp)
- PAU (1 place) Remove Allen screw opposite zerk fitting