

POWER DYNE PC

Mustang Dynamometer

Operator Manual

MUSTANG DYNAMOMETER

Power Dyne PC Operators Manual

© 2005-2022 Mustang Dynamometer
2300 Pinnacle Parkway
Twinsburg, Ohio 44087
Phone 330.963.5400 • Fax 330.425.3310

REVISION HISTORY

Revision	Description Of The Modification	Date	Initials
13.01.01.1	<ul style="list-style-type: none"> Added Pull Down Window Editor Tool Added *.INI File modification monitor Added Embedded Vehicle Look-up Table utility up-dated to 2012 Added Embedded Motorcycle, ATV, Scooter Look-up Table Utility up-dated to 2012 Modified Light Gray/Dark Gray Button Colors to Gray and Green Buttons Added Wheel Slip Monitoring Modified graph overlay runs to show capability from 3 to 20 runs Added "Power Curve Test (Comparative)" Modified Name on original "Power Curve" Test to "Power Curve (Precision)" Added Android Smart device interface Added Tabular Result Table to Performance Test Results Display Added Tabular Result Table to Performance Test Print Outs Added Peak Power and Force @ Speed on the Performance Test Print Outs Added Communications and Calibration to V-Mass for Transient Emissions Documented position (Open Loop/Close Loop) for brake PID values screen. Documented position (Open Loop/Close Loop) for throttle PID values screen. Documented Mustang Andros 6241/1606 Analyzer Bench screen. 	10/30/2012	GJH
17.05.22.1	<ul style="list-style-type: none"> Separated the system channel list into its own subject Added throttle and brake specific PID parameter descriptions Added throttle and brake actuator linearization routine descriptions Added driver's trace test throttle and brake controller options Added grade and throttle/brake target column descriptions for driver's trace files Added several vehicle loading and power calculation parameters Added menu-hiding logic Added vehicle losses characterization routine Added vehicle simulation coast-down check routine Added CAN export ability Added ability to use frequency type torque disks via speed inputs 	5/22/2017	RJK
2022.09.22.1	<ul style="list-style-type: none"> Added filtering on digital inputs for noise reduction Fixed display bugs related to weather station inputs Added "JBox" support for RPM, MAP, EGT, analog and weather station inputs Added wheel-speed, slip, and related channels Added distance-error trim on speed-follower logic Added option to driver's trace screen to enable vehicle brake before starting a test Added support for 1 or 2 DAC32 I/O boards to be used for generic data acquisition boards Added VMAS-2 support for live monitoring and driver's trace testing Added static brake support to hold zero speed in the driver's trace test Added support for the EMSGas5003 gas analyzer Added a database with European vehicle testing parameters Small bug fixes to power curve test when using end-of-test vehicle losses data Bug fix for DAC32 hardware related to accumulated distance on the machine Added logic to trip the driver's trace test if the OBDII or JBox interfaces fail Added support for (10) generic CAN channels via the CANUSB device and .DBC files Added support for the DPA-XL scan tool Added support for the Bridge Analyzers 5-gas bench Miscellaneous small bug fixes 	09/22/2022	RJK

Revision Numbering: aa.bb.cc.dd

aa = first two digits of the year

bb = month revision was released

cc = day of the month the revision was released

dd = revision level on the day of release.

Table of Contents

INTRODUCTION	3	PASSING ACCELERATION	173
SAFETY INFORMATION	5	200-YARD ROLL-ON	175
DYNAMOMETER INFORMATION	7	DRIVERS TRACE (IM240/FTP/ETC).....	177
INSTALLATION	10	ASM 50/15	186
SETUP WIZARD	12	ASM 25/25	188
START UP	18	LOADED MODE.....	190
THE MAIN SCREEN	19	IDLE / 2500 RPM	192
VALUE DISPLAY CONFIGURATION.....	21	LUGDOWN	194
RESET POPUP MENU	23	DYNO PID VALUES – PID VALUES	198
SYSTEM CHANNELS	24	DYNO PID VALUES – RAMPING CONTROL VALUES	200
LIST OF SYSTEM CHANNELS.....	24	DYNO PID VALUES – STEP SIZE VALUES	202
CASES WHERE SYSTEM CHANNEL VALUES ARE		SPEED FOLLOWER PID VALUES – PID VALUES	
OVER-WRITTEN WITH OTHER VALUES	31	(ETC.)	203
THE FILE MENU	32	THROTTLE CONTROLLER PID VALUES – PID VALUES	204
THE DATABASE MENU	34	THROTTLE CONTROLLER PID VALUES – RAMPING	
PICK VEHICLE FOR TESTING	35	CONTROL VALUES	207
EDIT CURRENT VEHICLE	37	THROTTLE CONTROLLER PID VALUES – STEP SIZE	
CUSTOMER/VEHICLES	38	VALUES	209
CUSTOMERS/VEHICLES (VEHICLES)	40	BRAKE CONTROLLER PID VALUES – PID VALUES	
COMPANIES	51	(ETC.)	210
TRACE GRAPH VIEWER	54	AUGMENTED BRAKING	211
DRIVER’S TRACE TEST RESULTS VIEWER	78	ISE PARAMETERS	212
TRACE DATA COLLECTION SPEED	87	CHARACTERIZE VEHICLE LOSSES	213
DATABASE UTILITIES AND OPTIONS	93	CHECK VEHICLE SIMULATION LOADING	215
TEST MENU	112	CALIBRATION MENU	217
SPECIAL NOTES FOR EACH TEST MODE	117	LOAD CELL #1 CALIBRATION (LOAD CELLS #2, #3,	
MANUAL LOADING TEST	118	AND #4 ARE IDENTICAL).....	227
CONSTANT FORCE TEST	120	ANALOG RPM INPUT CALIBRATION	230
CONSTANT SPEED TEST	122	SMARTTACH SETUP	232
CONSTANT HORSEPOWER TEST	124	OPACITY METER CALIBRATION	241
VEHICLE SIMULATION TEST.....	126	GAS ANALYZER BENCH – BENCH CALIBRATION..	243
PRO TEST.....	128	ECOM ANALYZER	245
SPEEDOMETER CHECK TEST	131	VMAS MASS EMISSIONS SETUP.....	251
POWER CURVE (CONTROLLED SWEEP RATE/		5-GAS LAMBDA/AFR SETUP.....	252
VEHICLE SIMULATION MODE)	133	VEHICLE CONTROLLER SETUP – BRAKE/THROTTLE	
PROGRAMMED FORCE	137	CONTROLLER SETUP	254
PROGRAMMED FORCE EDITOR.....	139	VEHICLE CONTROLLER SETUP – AUTOMATIC	
PROGRAMMED SPEED.....	146	THROTTLE LINEARIZATION	262
PROGRAMMED SPEED EDITOR	148	VEHICLE CONTROLLER SETUP – AUTOMATIC BRAKE	
PRO SCRIPT TEST	149	LINEARIZATION	264
PRO SCRIPT EDITOR	151	AUXILIARY I/O SETUP - AUXILIARY ANALOG	
QUARTER MILE SPRINT.....	168	SETUP	265
STANDING START ACCELERATION.....	171	AUXILIARY I/O SETUP - AUXILIARY ANALOG	
		OUTPUT SETUP.....	268
		AUXILIARY I/O SETUP - EXTERNAL DAC BOARD	
		SETUP	271
		AUXILIARY I/O SETUP - EXTERNAL DAC CHANNEL	
		SETUP	273

AUXILIARY I/O SETUP - AUXILIARY DIGITAL OUTPUT SETUP	277	DIAGNOSTICS MENU – I/O BOARD DRIVER SETUP	344
AUXILIARY I/O SETUP - EXTENDED ANALOG INPUT SETUP	279	I/O BOARD DIAGNOSTICS	356
AUXILIARY I/O SETUP - EXTENDED ANALOG INPUT CALIBRATIONS	280	GAS BENCH DIAGNOSTICS	360
AUXILIARY I/O SETUP - EXTENDED ANALOG INPUT DIAGNOSTICS	283	INI FILE EDITOR	388
AUXILIARY I/O SETUP - PDAQ3000 INPUT CALIBRATIONS	285	TOGGLE DEBUG WINDOW	390
AUXILIARY I/O SETUP - PDAQ3000 INPUT DIAGNOSTICS	288	LIFT	391
AUXILIARY I/O SETUP - JBOX	289	REAR LIFT	392
AUXILIARY I/O SETUP - JBOX – RPM OPTIONS	289	DRAG BRAKE	393
AUXILIARY I/O SETUP - JBOX - ENABLE	289	FAN	394
AUXILIARY I/O SETUP - JBOX - DISABLE	289	AWD CLUTCH	395
AUXILIARY I/O SETUP - JBOX – COM PORT	289	AWD GEARBOX	396
AUXILIARY I/O SETUP - JBOX - DIAGNOSTICS	289	VEHICLE DIRECTION	397
AUXILIARY I/O SETUP – MD-DAC32 DATA ACQUISITION	290	PAU MODE	398
AWD BASE SETUP	290	SCAN TOOLS	399
AWD SPEED FOLLOWER MODES	295	OBD-II	400
TIMING LIGHT TREE SETUP	297	DPA-III-PLUS	403
VARIOUS WAYS TO TURN THE LIGHTS ON THE TREE		RP1210	404
OFF.SCAN TOOL SETUP	298	GENERIC CAN	406
CAN EXPORT SETUP	302	EFI LIVE FLASHSCAN V2	407
CALIBRATION / VERIFICATION ROUTINES - WARMUP	304	DISPLAY	409
CALIBRATION / VERIFICATION ROUTINES - PARASITICS MEASUREMENT	305	SELECT DISPLAY PANEL	411
CALIBRATION / VERIFICATION ROUTINES - PARASITIC VIEWER	307	EDIT DISPLAY CONFIGURATION	413
CALIBRATION / VERIFICATION ROUTINES - COASTDOWN CHECK	308	PLAYBACK TEST DATA	415
CALIBRATION / VERIFICATION ROUTINES - INERTIA CHECK TEST	309	CHANNEL FAULT OPTIONS	416
CALIBRATION / VERIFICATION ROUTINES - AUTOMATIC PID CALCULATOR	310	DYNO LOAD CONTROLLER STATUS	417
CALIBRATION / VERIFICATION ROUTINES - MAP SPEED ENCODER	313	THROTTLE CONTROLLER STATUS	419
DYNO PARAMETERS	315	BRAKE CONTROLLER STATUS	421
BELT TENSION CONTROL	334	SPEED FOLLOWER STATUS	423
SYSTEM PARAMETERS	335	THROTTLE CONTROLLER	424
WEATHER STATION PARAMETERS	336	BRAKE CONTROLLER	425
MATH CHANNEL PARAMETERS	338	AUXILIARY DIGITAL OUTPUT CONTROL	426
DISPLAY UNITS	340	HELP	427
LANGUAGES	342	RESET FAULT	428
VIEW CHANGE LOG	343	FOLDERS AND FILES USED BY THE SYSTEM	429

Introduction

This document provides the operating instructions for Mustang Dynamometer's Power Dyne PC control software.

Before operating your dynamometer, please read and understand the following section titled “**Safety Information**”, along with any and all other safety information provided with your dynamometer.

Based on our own experience with various software packages, we recommend that the reader of this manual follow the following procedure for learning about our software:

1. **Before trying to operate your dynamometer**, you should quickly review this document in its entirety, in order to gain an overall idea of the capabilities of the software
 2. The following sections require that you actually use the software, so you should have this manual handy for reference.
 3. Since your system should arrive with the software preinstalled, we suggest that you start working with the software by navigating through the various menus, again to gain an overall impression of how the software works, and how to get to the various functions provided.
 4. Next, we suggest that you add your company information, the screen for which can be found under the “Database” menu.
 5. Now you can add a customer and vehicle definition, so that you can save the results of any tests that you will run.
 6. On the “Calibration” menu, **make sure that all the physical parameters (roll diameter, etc) of your dynamometer are set to the correct values**, and calibrate the load cell inputs of your system.
-

7. You are now ready to start performing vehicle tests, which will generate test data that you can use to learn about the various test reports, graphing and data exporting facilities.

Operators of this software have frequently reported that the Power Dyne PC software takes longer to master than some other dynamometer control packages, but that the initial effort yields significant long-term benefits. The better you understand your dynamometer, the better your dynamometer will serve you.

Instructions for all database, calibration and testing routines are provided, along with screen images to help the reader identify the correct screen for performing the described actions.

Unlike some other dynamometer control systems, our Power Dyne PC series software has been designed to work with many different types of dynamometers. Thus, there are many, many configurable parameters in the software. For most applications, only a handful of parameters will require changes. However, in some cases other parameters will require changes, and this document does not describe every parameter used in the software. In the event of unusual system requirements, every parameter that the software uses is available in the standard Windows “Ini” file that the application uses for parameter storage. Before attempting any manual modifications to values in the application’s “Ini” file, please contact Mustang Dynamometer for technical assistance.

While this document has been carefully written and verified, errors may still exist. In the event that you find any information in this document that appears to be incorrect, please contact Mustang Dynamometer using the contact information provided below:

Mustang Dynamometer
2300 Pinnacle Parkway
Twinsburg, Ohio 44087
Phone: 330-963-5400
Fax: 330-425-3310
Toll Free: 888-468-7826
Web: <http://www.mustangdyne.com>
E-mail: service@mustangdyne.com

Safety Information

Dynamometers are dangerous! *The following list of safety precautions is not exhaustive, but represents a minimum level of safety precautions to be used.*

KEEP PEOPLE AWAY FROM THE DYNAMOMETER TESTING AREA WHILE TESTS ARE IN PROGRESS. ONLY THE VEHICLE OPERATOR SHOULD BE IN THE VICINITY OF THE DYNAMOMETER/VEHICLE-UNDER-TEST WHEN A TEST IS BEING PERFORMED.

ALWAYS SECURELY RESTRAIN A VEHICLE BEFORE TESTING ON A DYNAMOMETER. FRONT-DRIVE VEHICLES IN PARTICULAR MUST BE RESTRAINED NOT ONLY AGAINST FORWARDS/BACKWARDS MOVEMENT, BUT ALSO AGAINST SIDE-TO-SIDE MOVEMENT.

DO NOT WEAR LOOSE FITTING CLOTHING AROUND A DYNAMOMETER. TIES, SLEEVES, SCARVES, CHAINS, ETC. CAN BECOME WRAPPED THE ROLLS, SHAFTS, ETC. AND CAUSE SERIOUS OR FATAL INJURIES.

DO NOT LEAVE TOOLS, ROPES, CHAINS, PARTS OR ANY OTHER OBJECTS LOOSE AROUND THE DYNAMOMETER. THESE OBJECTS MAY BE THROWN, CRUSHED, TWISTED, ETC. IF THEY VIBRATE INTO CONTACT WITH THE DYNAMOMETER OR THE VEHICLE UNDER TEST.

DO NOT APPLY SUDDEN THROTTLE OR BRAKE CHANGES WHILE ON THE DYNAMOMETER, AS THIS MAY CAUSE THE VEHICLE UNDER TEST TO SUDDENLY CHANGE POSITION ON THE DYNAMOMETER CAUSING A LOSS OF CONTROL OF THE VEHICLE.

DYNAMOMETERS CONTAIN VERY HEAVY COMPONENTS OPERATING AT HIGH SPEEDS WITH HIGH FORCES. DO NOT TOUCH OR COME INTO CONTACT WITH ANY PART OF THE DYNAMOMETER WHEN IT IS IN OPERATION, PARTICULARLY THE ROLLS, SHAFTS AND BELTS.

DYNAMOMETERS CAN THROW FOREIGN OBJECTS AT VERY HIGH VELOCITY. ALWAYS WEAR APPROVED EYE PROTECTION WHEN WORKING AROUND A DYNAMOMETER.

THE CONTROL BOX CONTAINS DANGEROUS VOLTAGES. ONLY QUALIFIED PERSONELL SHOULD EVER WORK ON A CONTROL BOX, PAU (POWER ABSORBING UNIT), MOTOR, OR ANY OTHER ELECTRICAL COMPONENT OF A DYNAMOMETER. FURTHERMORE, SOME CONTROL BOXES CONTAIN MULTIPLE POWER SOURCES; ANYONE WORKING ON A CONTROL BOX MUST BE CERTAIN THAT ALL POWER SOURCES HAVE BEEN DISCONNECTED PRIOR TO WORKING ON THE EQUIPMENT.

DYNAMOMETERS CONTAIN POWER ABSORBING UNITS (PAU'S OR MOTORS) THAT BECOME VERY HOT. DO NOT TOUCH ANY PART OF A PAU OR MOTOR TO AVOID POTENTIALLY SEVERE BURNS.

HIGH PRESSURE AIR IS USED IN VARIOUS ELEMENTS OF A DYNAMOMETER. OBSERVE ALL PRECAUTIONS REQUIRED FOR SAFELY WORKING AROUND COMPRESSED AIR WHEN WORKING ON A DYNAMOMETER.

THE LIFT/ROLL-LOCK OF A DYNAMOMETER CAN LIFT A CAR! DO NOT ALLOW ANY PART OF YOUR BODY TO FALL INTO THE LIFT/ROLL-LOCK AREA OF THE DYNAMOMETER TO AVOID POTENTIALLY FATAL CRUSHING WOUNDS.

VEHICLE EXHAUST GASSES, AS WELL AS EXHAUST GAS SENSOR CALIBRATION GASSES, ARE POISONOUS AND CAN BE FATAL. MAKE SURE THAT ADEQUATE VENTILATION IS PROVIDED BEFORE OPERATING A VEHICLE OR EXHAUST GAS ANALYZER IN AN ENCLOSED SPACE.

Dynamometer Information

*A dynamometer or "**dyno**" for short is a device used to measure power and torque produced by an engine. There are two types of dynos; One that gets bolted directly to an engine, known as an engine dyno, or a dyno that can measure power and torque without removing the engine from the frame of the vehicle, this is known as a chassis dyno.*

The Power Dyne PC uses a Chassis dynamometer that performs the two following functions:

1. Measures the power output of a vehicle
2. Applies a specific load to a vehicle

Chassis dynamometers are capable of very accurately measuring the speed, torque and power that is delivered to them. With the appropriate hardware and software, they are also capable of applying a well-controlled loading to the vehicle under test. The typical loading modes used with a chassis dynamometer are constant force, constant speed, or a vehicle-simulation value.

Values Reported by a Chassis Dynamometer

A chassis dynamometer can directly measure the following values:

1. Roll shaft RPM/speed.
2. Torque/force applied to the dynamometer's roll shaft(s).

All other values are based on these original 2 values. For example, acceleration is computed from 2 successive speed measurements, power are calculated based on the measured speed and torque of the dynamometer's rolls shaft(s), etc.

When a chassis dynamometer reports a "torque" value, the value reported is the torque measured on the dynamometer's rolls shaft(s), not on the vehicle's drive axle or engine crankshaft.

A chassis dynamometer and the vehicle that is being tested on it effectively form a geared power transfer system. While force is obviously not an engine-crankshaft relative term, and power values

do not scale (ignoring transmission losses) from shaft to shaft in a geared system, torque values do scale from shaft to shaft in a geared system. So, in order for a chassis dynamometer to report engine crankshaft relative torque values, the control software must know:

1. Dynamometer roll shaft torque.
2. Dynamometer roll shaft RPM.
3. Engine crankshaft RPM.

Using these 3 values, the control software can calculate the engine crankshaft torque that the engine must be producing, using the formula below:

$$\text{EngineTorque} = ((\text{DynoShaftTorque} * \text{DynoShaftRPM}) / \text{EngineRPM})$$

When engine RPM is not available, there is no way to report an engine crankshaft relative torque value.

In Mustang Dynamometer chassis dynamometer software, when an engine-crankshaft relative torque value is reported, it is simply a calculated value as described above. No “correction” factor has been applied to account for drive-train losses. The overall gearing between the vehicle’s engine and the

Dynamometer’s rolls has been calculated and used to scale the measured torque from a dynamometer roll shaft value to an engine crankshaft value. So, just as power values will be lower on a chassis dynamometer than on a test-stand dynamometer, any reported engine torque values will be similarly lower.

Differences Between Chassis and Test-Stand Dynamometers

It is important to remember that a chassis dynamometer reports the power, force, and speed experienced by the dynamometer’s roll shaft(s). A power figure obtained for an engine using a test stand dynamometer will (and should) inevitably be higher than the power figure obtained using a chassis dynamometer, for (among others) the following reasons:

1. On a test stand, there are no torque-converter/clutch, transmission, driveshaft, differential or axle bearing losses.
2. On a test stand, there are no losses between the tires of the vehicle and the rolls of the dynamometer.
3. On a test stand, some or all of the engine accessories may be disconnected.
4. On a test stand, the engine intake air, water and oil supplies may be externally controlled.
5. On a test stand, the exhaust may be different than the exhaust system used on the vehicle.

Differences in Reported Power Between Dynamometers

All of the following factors can influence the power measured by a chassis dynamometer:

1. Tire compound, pressure and temperature.
2. Engine, transmission and differential temperatures.
3. Lubricant types.
4. Method of vehicle restraint (downward pressure will waste power).
5. Type of testing performed: fast decelerating sweeps will generate the highest values, steady state tests will generate intermediate values, and fast accelerating sweeps will generate the lowest values, due to the internal power requirements of the engine and drive-train in the vehicle under test.
6. Atmospheric condition corrections to different “standard” conditions.
7. Operator driving differences (can be very significant!).
8. Data acquisition options, particularly smoothing/averaging and clipping functions.

While all chassis dynamometers should report the same power output for the same vehicle, this is seldom the case. Most commonly, the difference in reported power values for the same vehicle on different dynamometers can be traced to one or more of the factors listed above.

Installation

The installation software for Mustang Dynamometer's Power Dyne PC software is provided on CD. This section describes the installation procedure to use with our standard CD distribution.

In order to install the software, follow these steps:

1. Insert the CD into the CD drive.
2. Click on the start button located at the lower left hand corner of the screen.

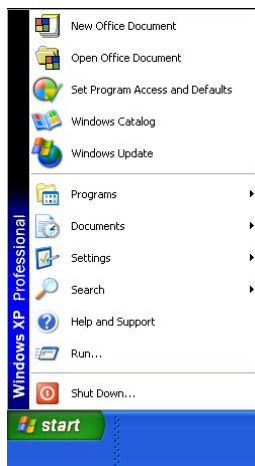


FIGURE 4.1 the above illustration shows the menu items that appear when the operator clicks on the Start button.

3. Select the Run menu item


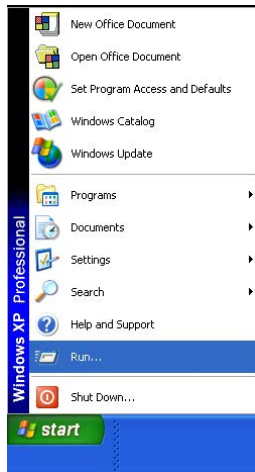


FIGURE 4.2 the above illustration shows what the Run menu item will look like when it is selected and highlighted in blue.

4. When the Run menu item is selected then the following dialog box will display prompting the operator for the name of the installation to run.

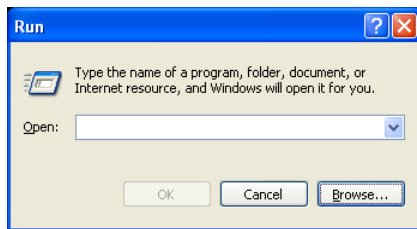

5. The operator will then type in `D:\PowerDynePC v100 No Docs.EXE` at the dialog prompt. (Note: The exact install program name will vary depending on the software version number and whether or not various documentation files will be installed.)

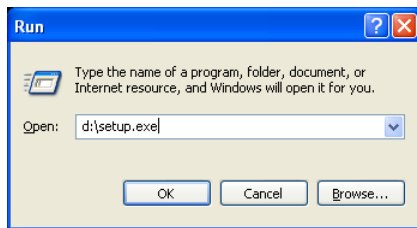


FIGURE 4.3 the actual drive letter for the CD drive will vary.

6. The installation will then walk the operator through the installation process.


Setup Wizard

The first time the software is run on a new installation, the Setup Wizard will execute before the software is run. This wizard is intended to help the operator properly configure the software for the particular model of dynamometer that they have.

Note

There are numerous systems in the field that have non-standard configurations; the default values provided by this wizard, based on the selected dynamometer type, will not work with every dynamometer. If you are unsure as to the status of your dynamometer (standard or non-standard configuration), try the standard configuration first; if the standard configuration doesn't appear to operate correctly, contact Mustang Dynamometer for further assistance.

Step #1: Select Dynamometer Type

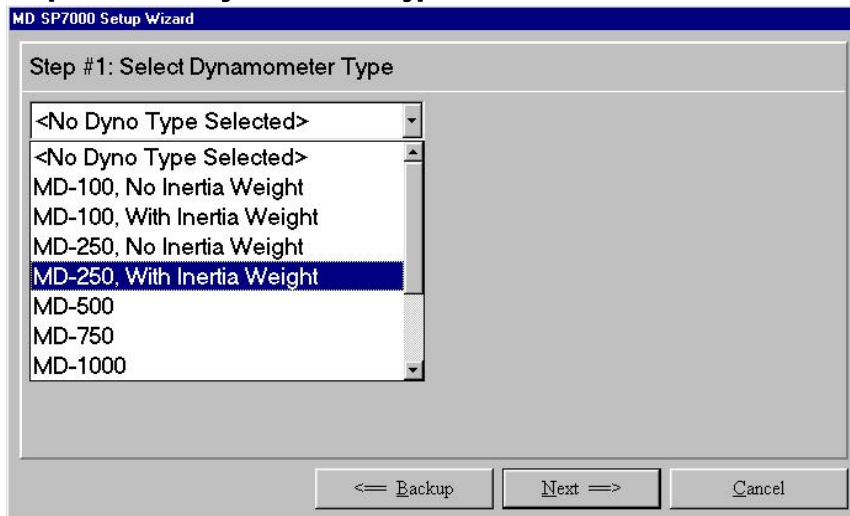


The screenshot shows a dialog box titled "MD SP7000 Setup Wizard" with a sub-header "Step #1: Select Dynamometer Type". It features a list box with the following options: "<No Dyno Type Selected>", "<No Dyno Type Selected>", "MD-100, No Inertia Weight", "MD-100, With Inertia Weight", "MD-250, No Inertia Weight", "MD-250, With Inertia Weight" (which is highlighted), "MD-500", "MD-750", and "MD-1000". At the bottom, there are three buttons: "<=< Backup", "Next ==>", and "Cancel".

This page allows the operator to select the type of dynamometer that they have. This value is used to set the default values for several operating parameters, and must be set correctly.

The operator will press the button labeled “**Next →**” to proceed to the next step of the Setup Wizard. The operator can also press the button labeled “**←Backup**” to return to the previous step of the Setup Wizard.

FIGURE 5.1 The above illustration shows how easy it is for the operator to select from the list of dynamometers simply by pointing with the mouse and clicking with the left mouse button on the dynamometer that they have.

Step #2: Edit Default Values

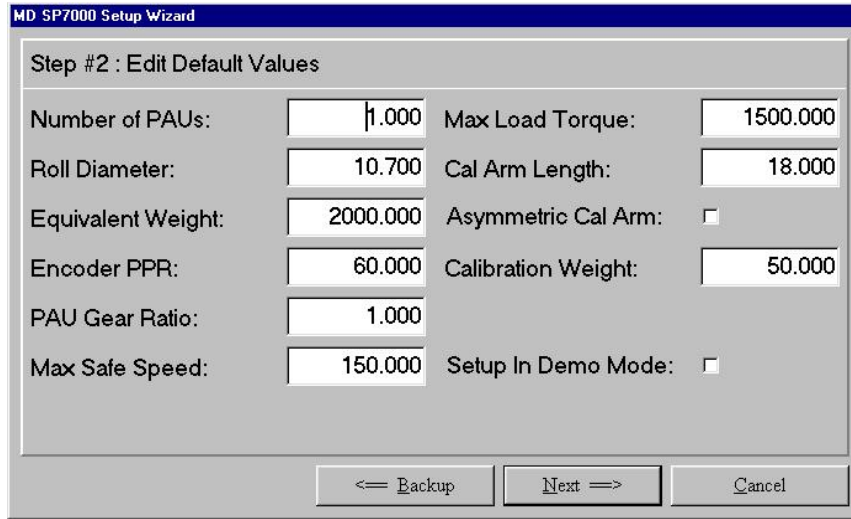

This page allows the operator to review and/or modify the following default configuration values for their dynamometer.

Number of PAUs:	The number of eddy-current Power Absorber Units in the dynamometer.
Roll Diameter:	The diameter of the tire rollers, in inches.
Equivalent Weight:	The equivalent vehicle weight of the dynamometer, in pounds.
Encoder PPR:	The number of pulses generated by the speed encoder per revolution of the tire rollers.
PAU Gear Ratio:	The gear ratio between the tire rollers and the PAU(s) of the dynamometer. If the PAU(s) will turn faster than the tire rollers, this number will be greater than 1. If the PAU(s) will turn slower than the tire rollers, this number will be less than 1.
Max Safe Speed:	The maximum safe operating speed of the dynamometer, in MPH.

Max Load Torque:	The maximum tire roller-shaft torque that the dynamometer's PAU(s) can generate.
Cal Arm Length:	The length of the PAU load cell calibration arm, in inches. More specifically, the distance between the center of the calibration weight and the PAU shaft center when the calibration arm is installed on the PAU.
Asymmetric Cal Arm:	This option MUST be left UN-CHECKED if you have a dynamometer with a built-in calibration arm, eg older MD-100's, MD-250's, etc. If you have a separate calibration arm, the setting of this value is determined this way: If the calibration arm for your dynamometer is symmetrical (sticks out the same length on each side of the PAU), leave this option un-checked. If the calibration arm for your dynamometer is asymmetrical (sticks out further on one side of the PAU than on the other side), check this option.
Calibration Weight:	The PAU load cell calibration weight, in pounds. This value is stamped into the calibration weight itself.
Setup In Demo Mode:	<div style="background-color: #cccccc; padding: 5px;">WARNING:</div> <p>If this option is selected, no dynamometer control will be possible. This option is provided for operators who wish to run the software on PCs that are not connected to a dynamometer. This may be done for evaluation or training purposes. This may also be done by operators who wish to view/print test results (generated on the dynamometer control PC) on another PC.</p>

Step #3: Select Dynamometer Options

The screenshot shows a dialog box titled "MD SP7000 Setup Wizard" with the subtitle "Step #3 : Select Dynamometer Options". The dialog contains several input fields and checkboxes:

- I/O Board IRQ #:
- # of 1100 Boards:
- 1100 1/2 Addr:
- Gas Analyzer (Bench): Ch:
- Warmup Motor: Ch:
- Drag Brake: Ch:
- Cooling Fan: Ch:
- Rear (2nd) Lift: Ch:
- FWD Base Clutch: Ch:


At the bottom of the dialog are three buttons: "<=< Backup", "Next ==>", and "Cancel".

This page allows the operator to review and/or modify the following dynamometer option values.

I/O Board IRQ #:	The PC hardware interrupt number in use by the dynamometer controller board in the PC. This number is most commonly 5, but may be 7 (on Compaq PCs) or 2 (on older systems). Note that systems older than 1996 may have the controller board configured to use (2) interrupts; if you have a system of that vintage, you will need to have Mustang Dynamometer modify your controller board for use with this software.
B97 Engine RPM:	If you have the B97 engine RPM board installed in your PC, check this option.
Use SAE Corrections:	If you wish to have all data corrected per SAE J1349 (Jun90) (or your own custom standards), check this option.
Use Binary Data Files:	Checking this (recommended) option causes all trace (strip-chart) data for tests to be stored in binary files, rather than in the system database. Binary file storage is ~1000 times faster than database storage, and minimizes the load on the database facility, leading to a more stable database. If this option is not checked, all test data will be stored in the database (not recommended). If you are updating an existing system, you will probably want to use the "Export To Binary Files" utility located under the "Database" menu.
Gas Analyzer (Bench):	If you have an Andros 5-gas bench, check this box, and specify the serial communications port it is connected to.

Warmup Motor:	If you have a warmup motor on your dynamometer, check this box, and specify the digital output channel it is connected to.
Drag Brake:	If you have a drag brake on your dynamometer, check this box, and specify the digital output channel it is connected to.
Cooling Fan:	If you have a vehicle cooling fan on your dynamometer, check this box, and specify the digital output channel it is connected to.
Rear (2 nd) Lift:	If you have a rear (2 nd) lift on your dynamometer, check this box, and specify the digital output channel it is connected to.


Step #4: Write Settings To INI File

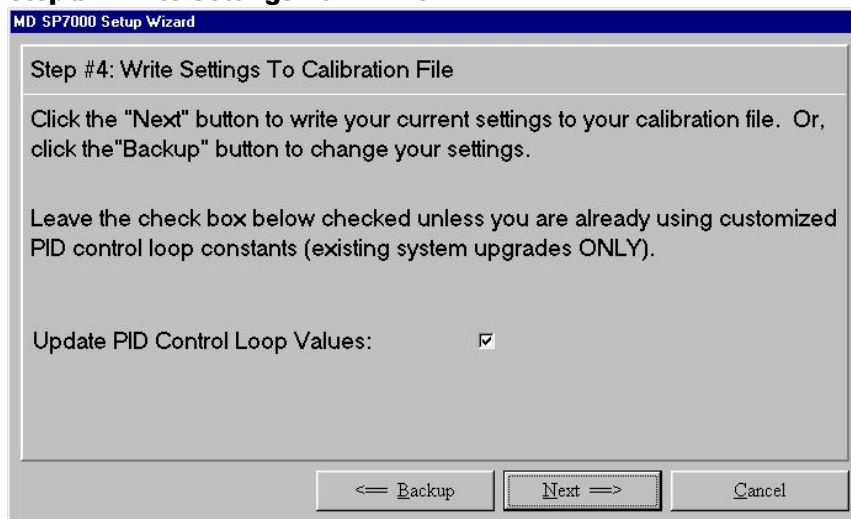

This page allows the operator to save their dynamometer configuration to a application's INI file and specify whether PID control loop values should be updated.

Update PID Control Loop Values:	If this option is checked (recommended), the PID control loop values will be updated. This option should always be checked, UNLESS you have developed a set of custom PID values that you wish to keep.
---------------------------------	--


Step #5: Ready To Run Your Software!

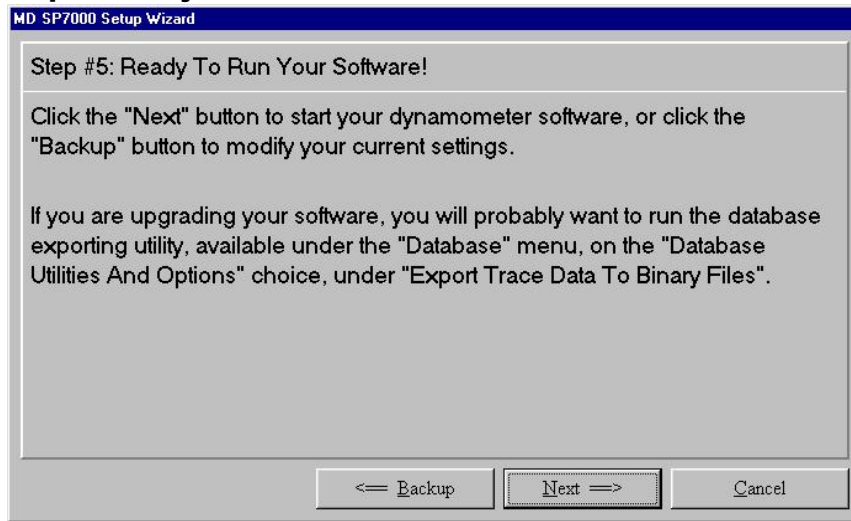

This page allows the operator to confirm that the current settings are correct, and launch the dynamometer control software.

Start Up

The application will display the following welcome screen to the operator when it is first starts up:

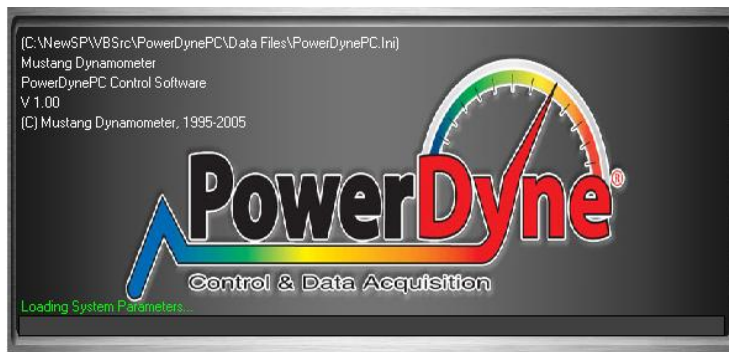

As this screen is being displayed, the application will start loading pertinent system and database parameters vital for the proper functioning of the application.


If the application was able to start up successfully then the following message will be displayed to the operator, if the dynamometer has been setup to accommodate various hardware configurations – otherwise this reminder will not be displayed.





The Main Screen

This is the main screen of the dynamometer control software. The screen is broken up into two sections. The upper section displays various circular and angular gauges as well as graphs for displaying real time data from the dynamometer and is always visible during testing.

The lower section initially displays a Power Dyne PC logo, but when a test is being run the interface for that test will be displayed in the lower section.

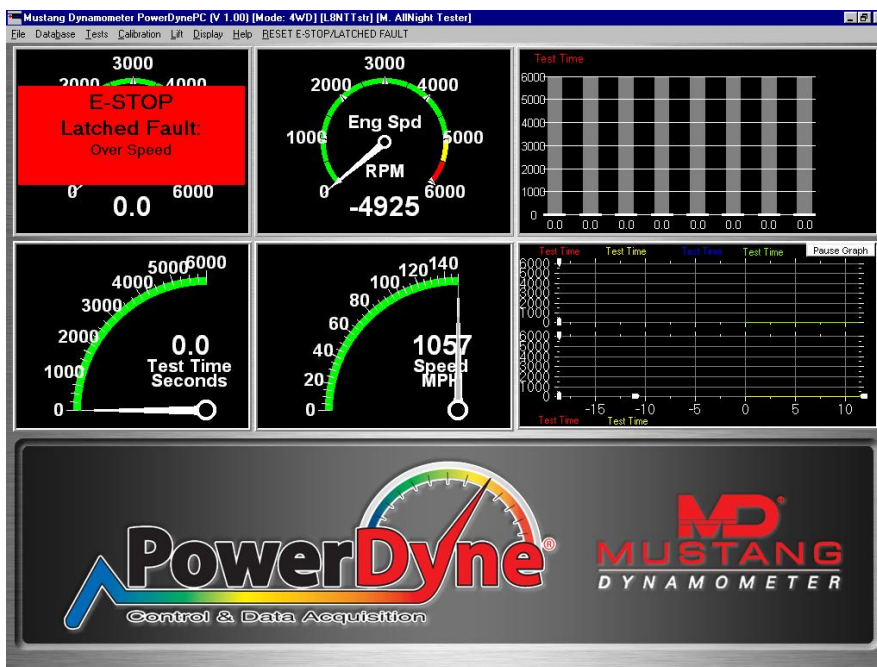

Two alternative views that are currently available are:

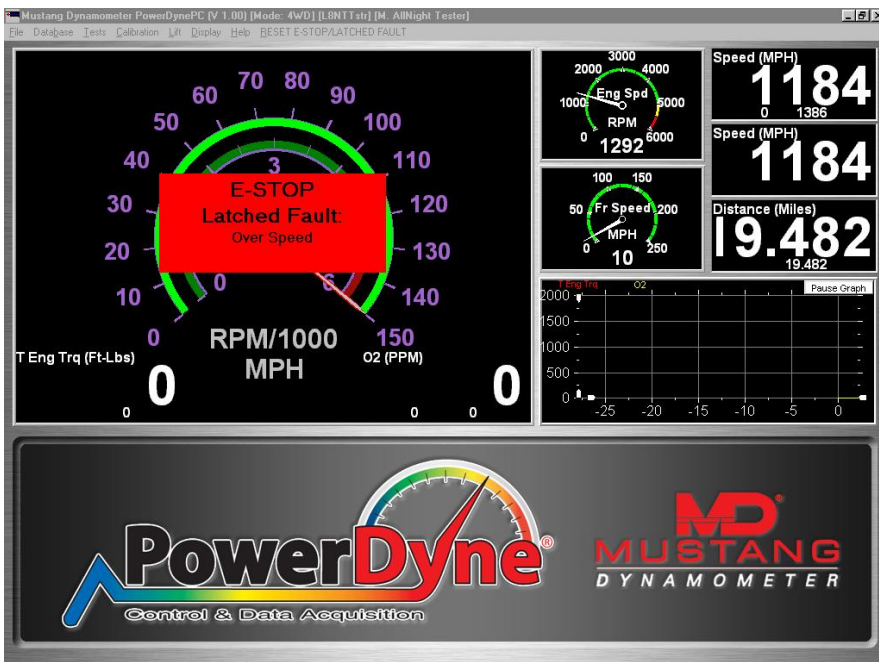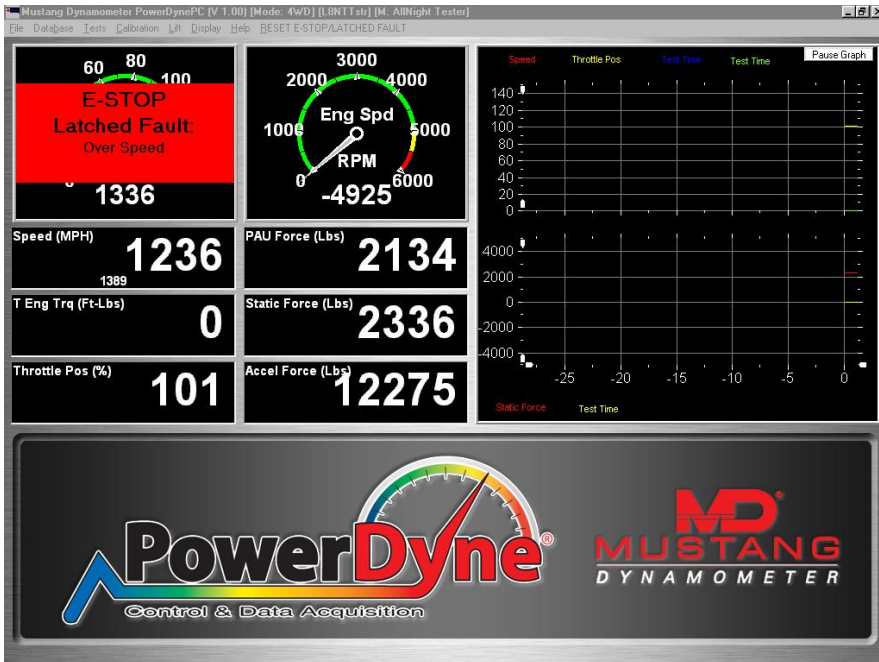

The gauges and graphs may be configured as to the value displayed, format used, and safe/warning/danger limit values and colors.

Value Display Configuration

The operator can configure each gauge or graph to display a specific value by simply **double-clicking** on it. The following prompt will appear allowing the operator to specify a value to be displayed:

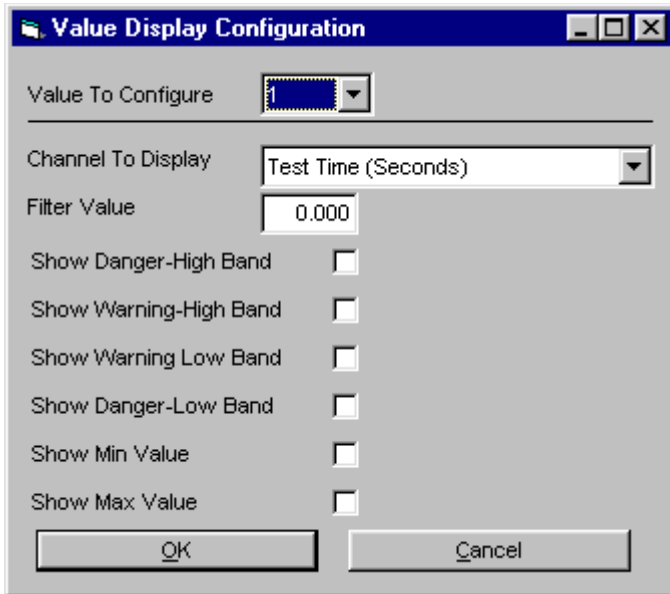


FIGURE 7.1 this is the screen that gets displayed when the operator double clicks on any gauge or graph in the upper section of the screen.

The operator can also specify the minimum and maximum values that get displayed as well as bands that represent input channel values that are OK (green), somewhat low (yellow), very low (red), somewhat high (yellow) and very high (red).

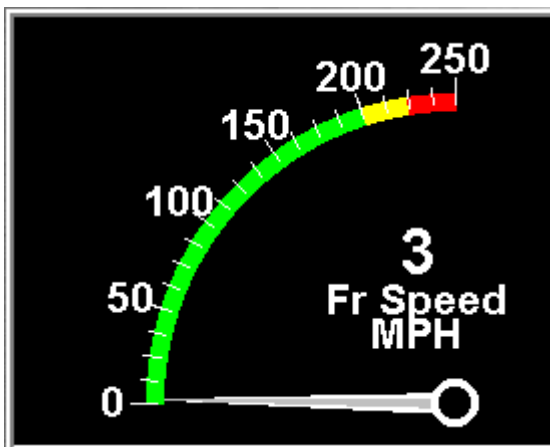


FIGURE 7.2 please note the green, yellow and red bands displayed on this gauge

The fields of the Value Display Configuration screen	Description

Value To Configure	Specifies which displayed value to configure. While numeric indicators can only show one value, clusters of bar graphs can show several different channels values simultaneously.
Channel To Display	Specifies which system channel should be displayed on the gauge or graph. The operator can select a channel to use from a drop-down list box. See the “ System Channels ” section for the complete list of input channels that the operator can select from.
Filter Value	An IIR filter constant used to filter the associated input values. This value must be in the range 0 to .999. 0 represents no filtering, while 0.999 represents a very heavy filter. These values should normally be left at 0, although values up to approximately 0.95 can be used to smooth measured values.
Show Danger-High Band	Used to display a RED band on a gauge to represent input channel values that are above the danger display limit.
Show Warning-High Band	Used to display a YELLOW band on a gauge to represent input channel values that are between the warning and danger display limits.
Show Danger-Low Band	Used to display a RED band on a gauge to represent input channel values that are below the danger display limit.
Show Warning -Low Band	Used to display a YELLOW band on a gauge to represent input channel values that are between the warning and danger display limits.
Show Min Value	Enables the display of the minimum value encountered for the selected channel since the last reset of the min/max values.
Show Max Value	Enables the display of the maximum value encountered for the selected channel since the last reset of the min/max values.

Reset Popup Menu

The reset popup menu gets displayed whenever the operator right clicks the mouse button on any gauge or graph located in the upper section of the screen.



Menu item	Description
Reset Min/Max Values	Resets the minimum and maximum values encountered during a test run for a particular gauge or graph.
Reset ALL Min/Max Values	Resets the minimum and maximum values encountered during a test run for ALL gauges or graphs.
Reset Graph X Axis Values	Resets the X-axis for a particular graph (to make time start at 0).

System Channels

The PowerDynePC software uses a fixed list of system channels for display, recording, graphing and exporting. Any channel can be used on any display, recorded, graphed, exported to text files, or exported via an analog I/O board or CAN interface to an external data acquisition system. Please refer to this list as required when using any of these facilities. In some cases, various system channels are over-written with other values (see below).

List of System Channels

Channel Name	Description
Test Time	Elapsed time into the current test, in seconds.
Distance	Distance traveled in the current test.
Speed	Current speed – may be an average of front and rear speeds.
Fr Speed	Current speed from front (or only) roll encoder. For 2-axle systems used in 1-axle mode on the rear axle, this input will be called “Rear Speed” (since with only one (active) speed input, the active input is called the “Front” speed).
Rr Speed	Current speed from rear roll encoder. May be called “Front” speed, see “Fr Speed” above.
Accel	Current acceleration– may be an average of front and rear acceleration.
Front Accel	Current acceleration from front roll encoder. May be called “Rear” accel, see “Fr Speed” above.
Rear Accel	Current acceleration from rear roll encoder. May be called “Front” accel, see “Fr Speed” above.
Dyno Cmd	Commanded loading value for the dyno – units will vary depending on loading mode.

Dyno Target	Ramped target for load controller – approaches Dyno Cmd at specified ramp rate – units will vary depending on loading mode.
Dyno Feedback	Current feedback for load controller – should equal Dyno Target – units will vary depending on loading mode.
Dyno Output	The control signal output by the load controller, in volts.
Throttle Cmd	Commanded loading value for the throttle controller – units will vary depending on loading mode.
Throttle Target	Ramped target for throttle controller – approaches Throttle Cmd at specified ramp rate – units will vary depending on loading mode.
Throttle Feedback	Current feedback for throttle controller – should equal Throttle Target – units will vary depending on loading mode.
Throttle Output	The control signal output by the throttle controller, in volts.
Throttle Pos	The current feedback position of the throttle controller, in percent.
Brake Cmd	Commanded loading value for the brake controller – units will vary depending on loading mode.
Brake Target	Ramped target for brake controller – approaches Brake Cmd at specified ramp rate – units will vary depending on loading mode.
Brake Feedback	Current feedback for brake controller – should equal Brake Target – units will vary depending on loading mode.
Brake Output	The control signal output by the brake controller, in volts.
Brake Pos	The current feedback position of the brake controller, in percent.
FWD WIBs	The current wheelbase for 4-wheel-drive units.
PAU Trq	Roll shaft torque delivered to and measured by the PAU torque sensing load cell.
Para Trq	Roll shaft torque delivered to the parasitic losses of the dynamometer.
Accel Trq	Roll shaft torque delivered to the inertia of the dynamometer during accelerations.
Static Trq	Sum of PAU Trq and Para Trq – only really valid at steady state

	speed, but more stable than Total Trq.
Total Trq	Sum of Static Trq and Accel Trq – always valid, but more noisy than Static Trq.
PAU Force	Linear force delivered to and measured by the PAU torque sensing load cell.
Para Force	Linear force delivered to the parasitic losses of the dynamometer.
Accel Force	Linear force delivered to the inertia of the dynamometer during accelerations.
Static Force	Sum of PAU Force and Para Force – only really valid at steady state speed, but more stable than Total Force.
Total Force	Sum of Static Force and Accel Force – always valid, but more noisy than Static Force.
PAU Pwr	Power delivered to and measured by the PAU torque sensing load cell.
Para Pwr	Power delivered to the parasitic losses of the dynamometer.
Accel Pwr	Power delivered to the inertia of the dynamometer during accelerations.
Static Pwr	Sum of PAU Power and Para Power – only really valid at steady state speed, but more stable than Total Power.
Total Pwr	Sum of Static Power and Accel Power – always valid, but more noisy than Static Power.
Eng Spd	Engine speed, in RPM.
Opacity	Exhaust gas opacity for diesel vehicles, in percent opacity.
Temp	Ambient weather temperature.
Press	Ambient weather pressure, in mmHg.
RH	Ambient weather relative humidity, in percent relative humidity.
WCF	Weather Correction Factor – a multiplier used to correct measured torque, force and power values based on the ambient weather conditions.
CO	Exhaust gas concentration of CO (carbon monoxide).

CO2	Exhaust gas concentration of CO2 (carbon dioxide).
HC	Exhaust gas concentration of HC (various hydrocarbons).
NO	Exhaust gas concentration of NO (nitric oxide, or various NOx varieties).
O2	Exhaust gas concentration of O2 (atmospheric oxygen).
Eng/RI RPM Rt	Engine / Roll RPM ratio – measured ratio of engine RPM to roll shaft RPM – can be used to detect tire slip in manual transmission vehicles, or automatics when in torque converter lockup.
S Wheel Trq	Static engine torque as delivered to the wheel – does not include values from acceleration measurement – more stable for steady state testing. Does not include engine flywheel inertia or drivetrain efficiency effects, does include wheel/tire inertia and tire:roll interface losses.
S Wheel Trq WCF	Same as above, but with the current weather correction factor applied.
T Wheel Trq	Total engine torque as delivered to the wheel – always valid. Does not include engine flywheel inertia or drivetrain efficiency effects, does include wheel/tire inertia and tire:roll interface losses.
T Wheel Trq WCF	Same as above, but with the current weather correction factor applied.
S Wheel Pwr	Static engine power as delivered to the wheel – does not include values from acceleration measurement – more stable for steady state testing. Does not include engine flywheel inertia or drivetrain efficiency effects, does include wheel/tire inertia and tire:roll interface losses.
S Wheel Pwr WCF	Same as above, but with the current weather correction factor applied.
T Wheel Pwr	Total engine power – always valid. Does not include engine flywheel inertia or drivetrain efficiency effects, does include wheel/tire inertia and tire:roll interface losses.
T Wheel Pwr WCF	Same as above, but with the current weather correction factor applied.
Auxiliary analog inputs 1 through 16	The labels for these channels will vary depending on the configuration of your analog inputs, as will the units of measurement.

HD Gear	The selected transmission gear. From the DPA-III+ scan tool interface, on J1708 or J1939.
HD Clnt Temp	Engine coolant temperature. From the DPA-III+ scan tool interface, on J1708 or J1939.
HD Oil Press	Engine oil pressure. From the DPA-III+ scan tool interface, on J1708 or J1939.
HD RPM	Engine RPM. From the DPA-III+ scan tool interface, on J1708 or J1939.
HD Fuel Rate	Fuel flow rate (volumetric, gallons/second). From the DPA-III+ scan tool interface, on J1708 or J1939.
HD Inst Econ	Instantaneous fuel economy (volumetric, miles/gallon). From the DPA-III+ scan tool interface, on J1708 or J1939.
HD Speed	Ground speed. From the DPA-III+ scan tool interface, on J1708 or J1939.
OBD-II values (10)	Values reported via OBD-II, can be any list of 1..10 supported values. The channel names reflect the selected list of values.
Extended analog input values (24)	From 1..3 On-Trak ADR-2000 analog input boards. The channel names, units, etc are user-defined in the Extended Analog Input setup screen.
J1708 channel values (10)	From the RP-1210 interface to DPA-3/4/5 or NetBridge scan tools. The channel names reflect the selected list of values.
J1939 channel values (10)	From the RP-1210 interface to DPA-3/4/5 or NetBridge scan tools. The channel names reflect the selected list of values.
PDAQ3000 differential analog inputs (8)	From the PDAQ3000 USB I/O board. The channel names, units, etc are user-define in the PDAQ3000 Input Calibrations screen.
PDAQ3000 single-ended analog inputs (8)	From the PDAQ3000 USB I/O board. The channel names, units, etc are user-define in the PDAQ3000 Input Calibrations screen.
PDAQ3000 thermocouple	From the PDAQ3000 USB I/O board. The channel names, units,

inputs (16)	etc are user-define in the PDAQ3000 Input Calibrations screen.
PDAQ3000 frequency inputs (4)	From the PDAQ3000 USB I/O board. The channel names, units, etc are user-define in the PDAQ3000 Input Calibrations screen.
Lambda - Gas	Calculated air/fuel ratio lambda value, based on the 5-gas exhaust analyzer values and user-specified fuel values.
AFR – Gas	Calculated air/fuel ratio AFR value, based on the 5-gas exhaust analyzer values and user-specified fuel values.
Inst ISE	An instantaneous Inertia Simulation Error value. Not for customer use.
Avg ISE	An averaged Inertia Simulation Error value. Not for customer use.
Wheel RPM	The calculated wheel (tire) RPM, from roller RPM, roller diameter, and wheel (tire) diameter. Does not account for any tire slip.
Eng/Whl Ratio	The calculated engine to wheel (tire) RPM ratio, i.e. the overall drivetrain gear ratio from crankshaft to axle. This value is used in the “Engine” torque and power calculations that include the engine (flywheel) inertia value.
S Engine Trq	Static engine torque. Does not include dynamometer inertia values, does include engine flywheel values and drivetrain efficiency. More stable than “Total” values, only valid at constant speeds.
S Engine Trq WCF	Static engine torque, with Weather Correction Factor applied.
T Engine Trq	Total engine torque. This includes all dynamometer factors, plus engine flywheel values and drivetrain efficiency. Always valid, but noisier than “Static” values.
T Engine Trq WCF	Total engine torque, with Weather Correction Factor applied.
S Engine Pwr	Static engine power. Does not include dynamometer inertia values, does include engine flywheel values and drivetrain efficiency. More stable than “Total” values, only valid at constant speeds.
S Engine Pwr WCF	Static engine power, with Weather Correction Factor applied.
T Engine Pwr	Total engine power. This includes all dynamometer factors, plus engine flywheel values and drivetrain efficiency. Always valid, but noisier than “Static” values.

T Engine Pwr WCF	Total engine power, with Weather Correction Factor applied.
<End of list>	<End of list>

Cases Where System Channel Values Are Over-Written With Other Values

Some channels are re-used for uncommon purposes, which most users will never encounter. The list below describes the purposes for which various channels may be over-written with other values.

Uncommon Use	Channels Affected	Description
ECOM Gas Analyzer (when active)	Extended Analog Inputs (from ADR-2000 boards), first (21) channels (1..21)	Ambient temperature, gas temperature, cell temperature, draft, sample flow, lambda, ETA, FIDHC, CO PPM, CO PPM corrected, CxHy %, NO PPM, NO PPM corrected, NO2 PPM, NO2 PPM corrected, NOx PPM, NOx PPM corrected, O2 %, SO2 PPM, SO2 PPM corrected
Enerac 7000 Gas Analyzer (when active)	Extended Analog Inputs (from ADR-2000 boards), first (7) channels (1..7)	CO %, CO2 %, HC PPM, NO PPM, NO2 PPM, O2 %, SO2 PPM
Math Channels (as used)	Any	There are no dedicated math channels. Rather, the math operations can write to any system channel. Thus, the math operations normally write values to otherwise unused channels, for example channels for an I/O board that is not installed.
Driver's Trace Test – target speeds (when recording is enabled)	Extended Analog Inputs (from ADR-2000 boards), last (3) channels (22,23,24)	The trace target speed, minimum speed, and maximum speed values.
Driver's Trace Test – VMAS data (when VMAS is active)	Extended Analog Inputs (from ADR-2000 boards), (13) channels (9..21)	CO, CO2, HC, NOx in grams/second CO, CO2, HC, NOx in grams/mile CO, CO2, HC, NOx in grams (total-to-point) Target speed of trace.

The File Menu

This menu item allows the operator to load and save dynamometer configurations for testing 2WD or 4WD vehicles as well as motorcycles.

Menu Items	Description								
Load Configuration	<p>Load the following dynamometer configurations:</p> <p>(Used only for simpler systems, with front/rear couplings and/or bike/car couplings)</p> <table border="1"> <thead> <tr> <th>Menu Items</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2WD Mode</td> <td>Load configuration settings specific for testing a 2 wheel drive vehicle.</td> </tr> <tr> <td>4WD Mode</td> <td>Load configuration settings specific for testing a 4 wheel drive vehicle.</td> </tr> <tr> <td>Bike Mode</td> <td>Load configuration setting specific for testing a motorcycle.</td> </tr> </tbody> </table>	Menu Items	Description	2WD Mode	Load configuration settings specific for testing a 2 wheel drive vehicle.	4WD Mode	Load configuration settings specific for testing a 4 wheel drive vehicle.	Bike Mode	Load configuration setting specific for testing a motorcycle.
Menu Items	Description								
2WD Mode	Load configuration settings specific for testing a 2 wheel drive vehicle.								
4WD Mode	Load configuration settings specific for testing a 4 wheel drive vehicle.								
Bike Mode	Load configuration setting specific for testing a motorcycle.								
Save Configuration	<p>Save the following dynamometer configurations:</p> <p>(Used only for simpler systems, with front/rear couplings and/or bike/car couplings)</p> <table border="1"> <thead> <tr> <th>Menu Items</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>2WD Mode</td> <td>Save configuration settings specific for testing a 2 wheel drive vehicle.</td> </tr> </tbody> </table>	Menu Items	Description	2WD Mode	Save configuration settings specific for testing a 2 wheel drive vehicle.				
Menu Items	Description								
2WD Mode	Save configuration settings specific for testing a 2 wheel drive vehicle.								

	4WD Mode	Save configuration settings specific for testing a 4 wheel drive vehicle.
	Bike Mode	Save configuration setting specific for testing a motorcycle.
Load Extended Configuration	Loads an extended dynamometer configuration, from any valid extended configuration file (*.ExtCfg). (Used for un-coupled 2-axle dynamometers and other more complicated systems)	
Save Extended Configuration	Loads an extended dynamometer configuration, from any valid extended configuration file (*.ExtCfg). (Used for un-coupled 2-axle dynamometers and other more complicated systems)	

These menu items allow the operator to load/store the following dynamometer configurations:

- The inertia value for the Dynamometer.
- Which load cell inputs should be read.
- Which PAU enables should be driven.
- Which PAU control signals should be driven.
- Which parasitic losses file should be loaded.
- Whether the second speed input should be used to derive an averaged speed.

The software must be configured for the desired mechanical configuration, and then the settings must be saved. Later, the “Load” commands can be used to quickly restore the software to the saved configurations whenever the mechanical configuration is changed.

The Database Menu


All company, customer, vehicle and test data can be accessed via the database menu. The database is a hierarchical relational database, wherein the primary relationships are: customers have vehicles, and vehicles have test results. There are also utilities for backing up, restoring, repairing and exporting values from the database, along with several data entry and viewing screens.

Pick Vehicle For Testing

This screen allows the operator to select a vehicle that future test result will be saved under.

Note

The selected vehicle will be in effect until the operator selects a new vehicle.

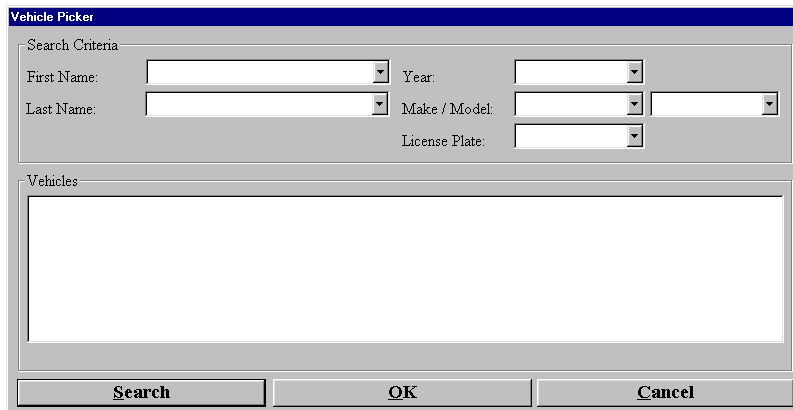

The screenshot shows a dialog box titled "Vehicle Picker". It contains a "Search Criteria" section with the following fields: "First Name:" (a dropdown menu), "Year:" (a dropdown menu), "Last Name:" (a dropdown menu), "Make / Model:" (two dropdown menus), and "License Plate:" (a dropdown menu). Below the search criteria is a large empty rectangular area labeled "Vehicles". At the bottom of the dialog box are three buttons: "Search", "OK", and "Cancel".

Search Criteria

The operator has the ability to search for vehicle based on the following search criteria:

- First Name
- Last Name
- Year
- Make
- Model
- License Plate

The operator can either select a value for the criteria by using the drop-down list box, or they can manually type a value in.

Once the operator fills in the criteria, then they can press the search button and the vehicles matching the criteria will get filled in and the operator can then point and click on a vehicle to select it.

Vehicle Picker

Search Criteria

First Name: Year:

Last Name: Make / Model:

License Plate:

Vehicles

DDH 117	1991	Honda	civic	efi tech	/	/	3 4
fhrng	1984	Honda	CRX	Feher	/	Mike	/ 13 14
Hearne	1984	Honda	CRX	Hearne	/	Scott	/ 9 10
GFORCE1	1991	Honda	CRX	Martin	/	Paul	/ 18 19

Search **OK** **Cancel**

FIGURE 9.1 the operator can specify full or partial values for each field, to narrow the search results.

Edit Current Vehicle

This will open the vehicle information editor, for the currently-selected vehicle (the currently-selected vehicle's ID is shown in the main window title bar). This is more convenient than navigating through the customer list, then the vehicle list of a customer, as described below. See [Customers/Vehicles \(Vehicles\)](#) for information about this screen.

Customer/Vehicles

This screen allows the operator to edit their customer information as well as assign vehicles to their customers.

The screenshot shows a software window titled "Customer Information Records". The interface includes several input fields for customer data: Name (Title) with "mrr", (Last) with "caldwell", (First) with "mike", and (MI) with an empty field. Birthdate and Last Service are both set to "12:00:00 AM". Address fields include "Address 1: 2300 pinnacle Parkway", "Address 2:", and "Address 3:". City is "twinsburg", State is "oh", and Zip is "44087". Phone fields include Home Phone: "330-963-5400", Home Fax, Work Phone, and Work Fax. A "Vehicles..." button is located to the right of the phone fields. Below the input fields is a "Comments (Use Ctrl+Enter To Enter Multiple Lines)" text area. At the bottom, there are two rows of navigation buttons: the first row contains "New/Search", "Find Matches", "Save", "Delete", "Select", and "Exit"; the second row contains "First", "Previous", "Next", and "Last".

To add a new customer

- Left click "**New/Search**" button.
- Enter the information for the new customer.
- Left click "**Save**" button and the new customer will be saved.

To find an existing customer

- Left click "**New/Search**" button.
- If desired, enter any full or partial field values to reduce the number customers that will be found.
- Left click "**Find Matches**".
- The list of all existing customers can now be navigated using the "**Next**", "**Previous**", "**First**" and "**Last**" buttons.

To edit an existing customer

- Find the customer using the method given above.
- Make any desired changes to the current customer information.

- Left click the “**Save**” button.
- The new customer information will be saved.

To delete an existing customer

- Find the customer using the method given above.
- Left click the “**Delete**” button.
- The customer, **ALONG WITH ALL OF THE CUSTOMER’S VEHICLES, AND THE TEST RESULTS FOR THOSE VEHICLES, WILL BE ERASED.**

To add/change/delete/view the current customer’s vehicles and their test results

- Find the customer using the method given above.
- Left click the “**Vehicles...**” button.
- You will be taken to a similar data entry screen where the current customer’s vehicles, and the vehicle’s test results, can be edited and/or viewed.

Customers/Vehicles (Vehicles)

This screen allows the operator to edit vehicles for a customer.


Vehicle Information Records										
Owner:	Demo, Chevy, Chevy									
License Plate:	POWERTRUCK	Lookup Cars / Trucks...		Driven Wheel/Tire Eq Wt	Un-Driven Wheel/Tire Eq Wt					
VIN:		Lookup MCs / ATVs / Other...				Strokes/Cycles:	<input type="radio"/> 2	<input checked="" type="radio"/> 4		
Year:	2017	Weight:	7851.0	0.0	0.0	RPM Pickup:	<input type="radio"/> Coil	<input checked="" type="radio"/> Plug		
Make:	Chevrolet	A	6.103000E+1	0.000000E+0	6.103000E+1	Tire Rolling Rad.	13.000			
Model:	Silverado 2500 HD	B	9.191000E-1	0.000000E+0	9.191000E-1	Wheelbase	0.000			
Last Tested:	10/19/2016 10:55:4	C	5.737000E-2	0.000000E+0	5.737000E-2	Fuel Type	<input checked="" type="radio"/> Gasoline			
Miles	0.0	HP @ 50 MPH	33.39	0.00	33.39		<input type="radio"/> Diesel			
Cylinders:	8	N/V Ratio	0.000	Flywheel Inertia	0.000	Induction Type	<input checked="" type="radio"/> Normal			
Displacement:	6.00	Rnd Adj FE	0.000	Axle Ratio	0.000		<input type="radio"/> Supercharged			
		Vehicle Image File		Test Gear Ratio	0.000		<input type="radio"/> Turbocharged			
				Equivalent Wt	-1.000	Drive Type				
		Select Image File...		Drivetrain Eff (%)	0.000	Transmission				
		Acquire Image...		Rated Power	0.000					
				Rated Torque	0.000					
View/Print Test Results										
Comments (Use Ctrl+Enter To Enter Multiple Lines)										
Next Generation Duramax Diesel 6.6L - 445 Horsepower - 910 Foot-Pounds Torque										
New/Search		Find Matches		Save		Delete		Select		Exit
First			Previous			Next			Last	

Vehicle definitions contain the following fields:

Field	Description
License Plate	Memo field.
VIN	Memo field.
Year	Memo field.
Make	Memo field.
Model	Memo field.
Last Tested	Shows the date/time this vehicle was last tested.
Miles	Memo field.
Cylinders	Memo field.
Displacement	Memo field.
Weight	The vehicle weight to be simulated during vehicle simulation testing modes.
Driven Wheel/Tire Eq(univalent) W(eight)	The equivalent weight of the inertia of the wheels and tires that are spinning on dynamometer rollers. This is typically 1%-2% of the vehicle's weight. You can double-click this field to set it to 2% of the "Weight" field value. This value is used to adjust the dynamometer-measured torque/power values for the "Wheel" and "Engine" torque/power channel.
Un-Driven Wheel/Tire Eq(univalent) W(eight)	The equivalent weight of the inertia of the wheels and tires that are NOT spinning on dynamometer rollers. This is typically 1%-2% of the vehicle's weight. You can double-click this field to set it to 2% of the "Weight" field value. In single-axle testing (2WD), this value is added to the "Weight" field value to get the actual weight to simulate in vehicle simulation mode. In two-axle testing (4WD/AWD), this value is added to the "Driven Wheel/Tire Eq(univalent) W(eight)" value. If you have a computer-controlled front/rear coupling clutch, this is handled automatically. If you have a manual coupling, or an uncoupled dynamometer, you must specify if you are testing in 2WD or 4WD mode via the Test menu, by checking either "Test Mode – 2WD" or "Test Mode – 4WD".
Road Load Curve A, B, C	The coefficients for a force(speed) curve representing the

	<p>force required for the vehicle to maintain a constant speed on the road. These values can only be obtained from on-road testing.</p> <p>Force = (A) + (B*Speed) + (C*Speed^2)</p> <p>“Force” and “Speed” are in the used-selected units.</p>
Vehicle Losses Curve A, B, C	<p>The coefficients for a force(speed) curve representing the extra losses incurred, above the dynamometer’s parasitic losses, from having the vehicle on the dynamometer.</p> <p>These values are normally obtained using the “Characterize Vehicle Losses” function on the “Tests” menu, but they can be entered manually.</p>
Dyno Target A, B, C	<p>The coefficients for a force(speed) curve representing the “Road Load” curve minus the “Vehicle Losses” curve, which is the load that the dynamometer should apply.</p>
HP @ 50 MPH	<p>These (3) values represent the power that the (3) curves above correspond to at a fixed speed of 50 MPH. This is for reference only, for users familiar with the previous “EPA Power Fraction” method of specifying vehicle simulation loading curves.</p>
N/V Ratio	<p>The ratio of engine RPM to MPH in top gear.</p>
Vehicle Image File	<p>The name of a file containing an image of the vehicle. You can directly enter the name, or you can click “Select Image File...” to use a file-open dialog box to pick a file. You can also click “Acquire Image...” to acquire an image from a camera and save that image to a file.</p>
Flywheel Inertia	<p>The inertia of the vehicle’s drivetrain, at the engine/flywheel. This value is in inertia units (slug-feet^2, kg-m^2), and specified at the flywheel, as the impact of this inertia is different in each gear ratio. This value is used in the “Engine” torque/power channel calculations, but not the “Wheel” torque/power channel calculations. You can double-click this field to set it to an estimate based on vehicle weight, but you must specify values for Axle Ratio, Test Gear Ratio, and Tire Rolling Radius first. If you want to leave Axle Ratio and/or Test Gear Ratio = 0 (and so use the live, calculated drivetrain gear ratio), you can set those fields back to 0 after getting the estimated inertia value – the actual values are not important, but you can use “3” and</p>

	<p>“3” for a reasonable estimate.</p>														
Axle Ratio	<p>The drive axle ratio.</p> <p>If “Axle Ratio” or “Test Gear Ratio” is set to “0”, then the software will use the calculated overall drivetrain ratio from engine RPM and wheel RPM during testing – which works in every gear, but is impacted by noise on RPM, etc.</p>														
Test Gear Ratio	<p>The flywheel->axle gear ratio for the gear that will be used in power curve testing.</p> <p>If “Axle Ratio” or “Test Gear Ratio” is set to “0”, then the software will use the calculated overall drivetrain ratio from engine RPM and wheel RPM during testing – which works in every gear, but is impacted by noise on RPM, etc.</p>														
Equivalent W(eight)	<p>The equivalent weight of the drivetrain inertia, given the values of “Axle Ratio”, “Test Gear Ratio” and “Tire Rolling Radius”.</p> <p>This value will be large in 1st gear, and much smaller in top gear, as inertial effects are proportional to the overall gear ratio squared. Transmission gear ratios vary over about a 6:1 range, so squared that is 36:1, so the inertial effect in top gear may only be about 3% of the effect in 1st gear.</p>														
Drivetrain Efficiency (%)	<p>The overall drivetrain efficiency, from crankshaft to tires.</p> <p>Typical current (2017) values for some drivetrain components are given below:</p> <table border="1" data-bbox="680 1304 1382 1791"> <thead> <tr> <th>Item</th> <th>Typical efficiency range</th> </tr> </thead> <tbody> <tr> <td>Manual transmission</td> <td>90% - 97%</td> </tr> <tr> <td>Automatic transmission</td> <td>90% - 95%</td> </tr> <tr> <td>CVT transmission</td> <td>87% - 93%</td> </tr> <tr> <td>Hypoid differential</td> <td>90% - 95%</td> </tr> <tr> <td>Spiral bevel differential</td> <td>95% - 99%</td> </tr> <tr> <td>Straight bevel differential</td> <td>93% - 97%</td> </tr> </tbody> </table> <p>For rear-wheel drive vehicles, you must multiply the</p>	Item	Typical efficiency range	Manual transmission	90% - 97%	Automatic transmission	90% - 95%	CVT transmission	87% - 93%	Hypoid differential	90% - 95%	Spiral bevel differential	95% - 99%	Straight bevel differential	93% - 97%
Item	Typical efficiency range														
Manual transmission	90% - 97%														
Automatic transmission	90% - 95%														
CVT transmission	87% - 93%														
Hypoid differential	90% - 95%														
Spiral bevel differential	95% - 99%														
Straight bevel differential	93% - 97%														

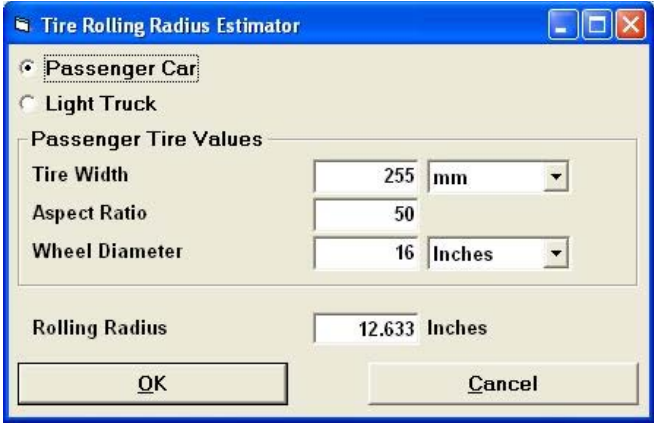	transmission and differential values to get overall efficiency.
Rated Power	The factory claimed engine power.
Rated Torque	The factory claimed engine torque.
Strokes / Cycles	2-stroke or 4-stroke design.
RPM Pickup	Coil or spark-plug sensor location.
Tire Rolling Rad(ius)	<p>The effective rolling radius of the tire.</p> <p>You can double-click this field to open a window where you can enter tire type, width and aspect ratio, plus wheel size. The resulting “Rolling Radius” value includes a small amount of deformation using data from tire manufacturers.</p> 
Wheelbase	<p>The axle-to-axle wheelbase of the vehicle.</p> <p>This value is used to automatically set the wheelbase on dynamometers with computer controlled moveable bases.</p>
Fuel Type	<p>Gasoline (spark ignition) or diesel (compression ignition).</p> <p>Used to select a weather correction factor formula.</p>
Induction Type	<p>Normally aspirated, supercharged, or turbocharged.</p> <p>Used to select a weather correction factor formula.</p>

To add a new vehicle

- Left click the “**New/Search**” button.
- Enter the information for the new vehicle.
- Left click the “**Save**” button.
- The new vehicle information will be saved.

To find existing vehicles

- Left click the “**New/Search**” button.
- If desired, enter any full or partial field value to reduce the number of records that will be found.
- Left click the “**Find Matches**” button.
- The list of all existing vehicles (for the current customer) can now be navigated using the “**Next**”, “**Previous**”, “**First**” and “**Last**” buttons.

To edit an existing vehicle

- Find the vehicle using the method given above.
- Make any desired changes to the current vehicle information.
- Left click the “**Save**” button.
- The new vehicle information will be saved.

To delete an existing vehicle


- Find the vehicle using the method given above.
- Left click the “**Delete**” button.
- The vehicle, ALONG WITH ALL OF THE TEST RESULTS FOR THE VEHICLE, WILL BE ERASED.

To select the current vehicle (so test results will be saved under this vehicle)

- Find the customer using the method given above.
- Left click the “**Select**” button.
- All future test results will be saved under the current vehicle (until another vehicle is selected).

To Lookup cars/trucks from a database of vehicle from 1973 to the currently supported model year

- Left click the "Lookup Cars/Trucks" button, the following screen will appear

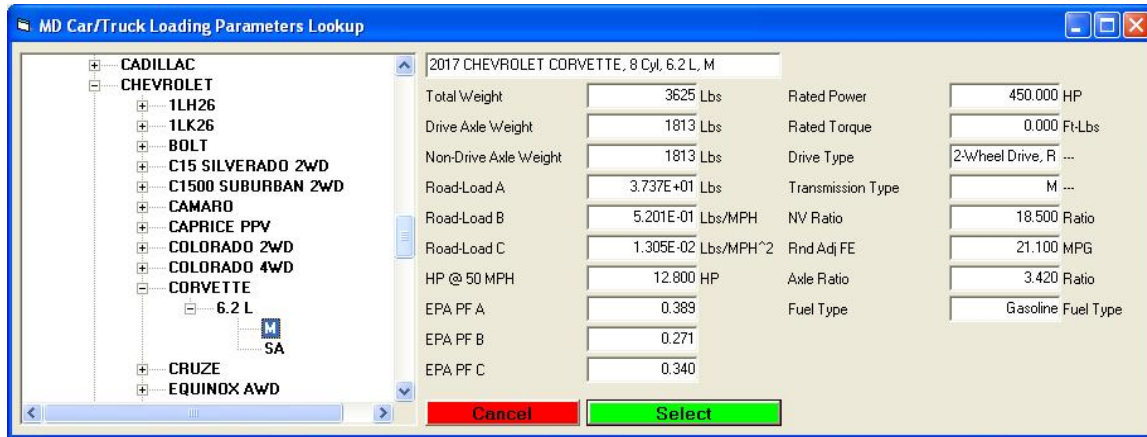

The screen is divided into the following two parts:

- Tree View.
- Description of the selected vehicle.

Tree View.

Displays vehicles starting from 1973 to the currently supported model year. This list box allows the user to drill down to a specific vehicle and select it to bring up the vehicle information that is displayed on the right hand side of this screen.

Description of the selected vehicle.

The description of the selected vehicle that includes the following – note that this is a lookup database, you cannot modify or add records to this database.


Field	Description
Total Weight (LBS)	The total weight of the vehicle.
Drive Axle Weight (LBS)	The weight of just the drive axle.
Non-Drive Axle Weight (LBS)	The total weight of the vehicle minus the weight of the drive axle.
Road Load A (LBS)	The A coefficient of friction as measured in pounds.
Road Load B (LBS/MPH)	The B coefficient of friction as measured in pounds/MPH.
Road Load C (LBS/MPH ²)	The C coefficient of friction as measured in

	pounds/MPH ² .
HP @ 50 MPH	The loading the vehicle would experience when traveling on the road at a speed of 50 MPH.
EPA PF A	The EPA Power Fraction A coefficient of friction.
EPA PF B	The EPA Power Fraction B coefficient of friction.
EPA PF C	The EPA Power Fraction C coefficient of friction.
Rated Power	The factory-claimed maximum engine power.
Rated Torque	The factory-claimed maximum engine torque.
Drive Type	2-wheel drive, 4-wheel drive, all-wheel drive
Transmission Type	M = manual, A = automatic, CVT = CVT
NV Ratio	The ratio of engine RPM to MPH in top gear.
Rnd Adj FE	Rounded Adjusted Fuel Economy, MPG
Axle Ratio	The drive axle ratio.
Fuel Type	The required fuel type, gasoline or diesel.

Once the user has selected the vehicle, they will then left click the "Select" button and the Vehicle Information Records screen will be filled in with the selected vehicle:

To Lookup MCs/ATVs/Other from a database of vehicle from 1973 to the currently supported model year

The procedure here is just the same as for selecting Cars/Trucks except you are selecting motorcycles, all terrain vehicles or other vehicles. Also, not all fields are available for MC/ATV/Other vehicle types.

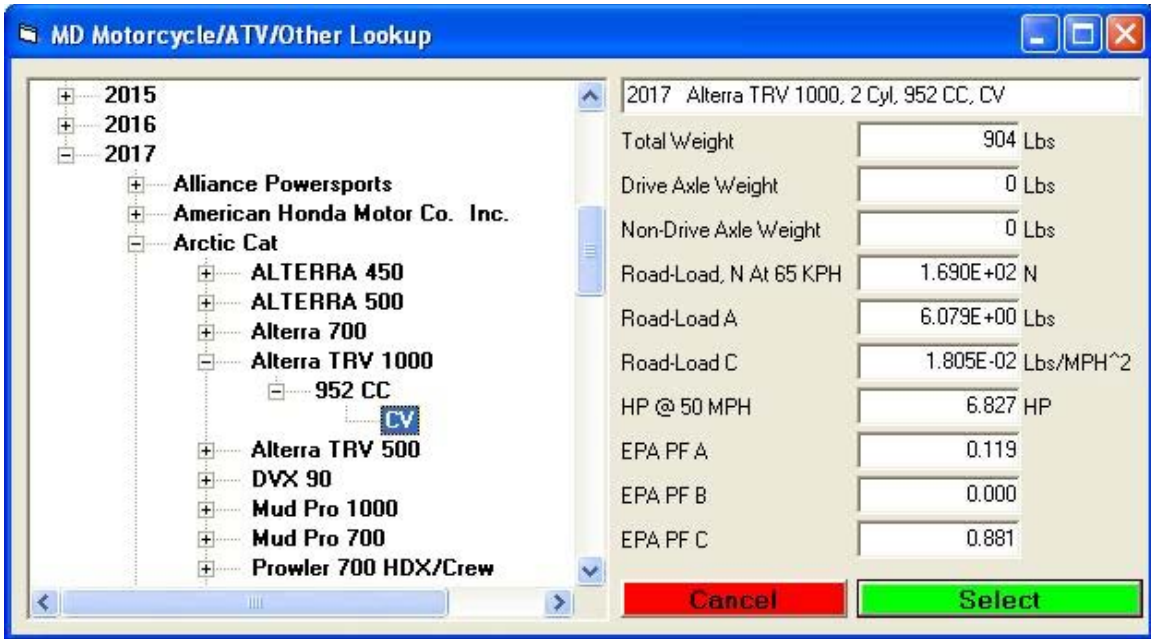

Note that this is a lookup database, you cannot modify or add records to this database.

To view/print the current vehicles test results

- Find the customer using the method given above.
- Left click the “**View/Print Test Results**” button.
- You will be taken to a similar data entry screen where the current vehicle’s test results can be viewed and/or printed.

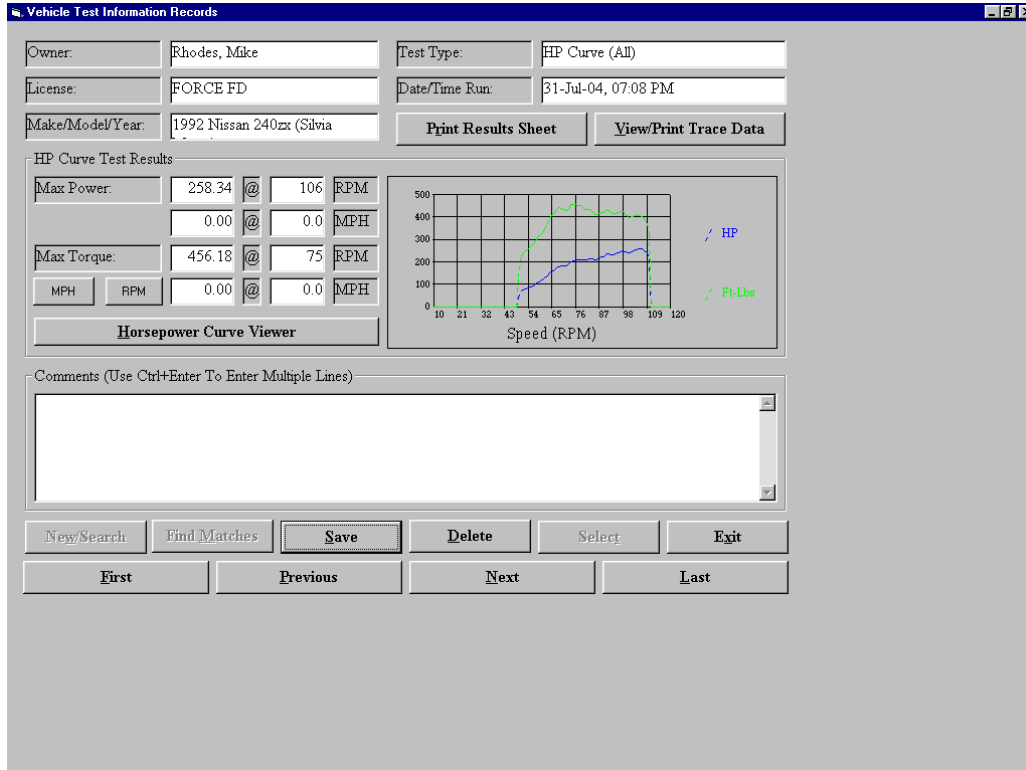


FIGURE 9.2 this is the screen that the operator will see when they press the View/Print Test Results.

To edit an existing test

- The operator can edit a test by typing in comments in the box labeled Comments located just above the buttons. The operator can enter in multiple lines by pressing the **Ctrl + Enter** keys at the same time which will create a new line of comments. The operator can then press the “**Save**” button to save the comments for the test.

To delete an existing test

- The operator can delete a test by pressing the “**Delete**” button, the operator will then be prompted if should want to delete the test record, if they press the “**Yes**” button then the test will be deleted, however if they press the “**No**” button then the test will not be deleted.



FIGURE 9.4 this is the screen that the operator will see when they press the Delete button.

To find a test

- The list of all existing test (for the vehicle) can now be navigated using the “**Next**”, “**Previous**”, “**First**” and “**Last**” buttons.

To print results sheet

- The operator will press this button when they want to print out a test result sheet for the selected test.

To view/print trace data

- The operator will press this button when they want to print trace data for the test.

Companies

This screen allows the operator to edit company information.

Company Information Records

Name: Joe's Midnight Dyno Testing

Address 1: 123 AintHere Lane

Address 2: Wrong Side Of The Tracks

Address 3: Apartment 3D

City: Gotham State: Confusion Zip: 12345-6789

Phone 1: 1-800-Got-Dyno Fax 1: 1-800-Got-Faxx

Phone 2: 2-800-Got-Dyno Fax 2: 2-800-Got-Faxx

Message 1: We do dyno testing

Message 2: Late at night

Message 3: When nobody is looking

Message 4: To make money

Color Logo File: ... B/W Logo File: ...

New/Search Find Matches Save Delete Select Exit

First Previous Next Last

Company records allow the operator to specify their company specific information. This information is used when test results are printed. Multiple company definitions may be entered, to allow for facilities where dynamometer use is shared among multiple companies.

Note

It is important to remember that company information is only used once it has been selected; after you add your company information and save it, make sure to select that company, so that the appropriate company information will be printed on future test report sheets.

To add a new company

- Left click the “**New/Search**” button.
- Enter the information for the new company.
- Left click the “**Save**” button to save the new company information.

To find existing companies


- Left click the “**New/Search**” button.
- If desired, enter any full or partial field value to reduce the number of records that will be found.
- Left click the “**Find Matches**” button.
- The list of all existing company can now be navigated using the “**Next**”, “**Previous**”, “**First**” and “**Last**” buttons.

To edit an existing company

- Find the company using the method given above.
- Make any desired changes to the current company information.
- Left click the “**Save**” button.
- The new company information will be saved.

To delete an existing company

- Find the company using the method given above.
- Left click the “**Delete**” button.
- The operator will be prompted to confirm delete.

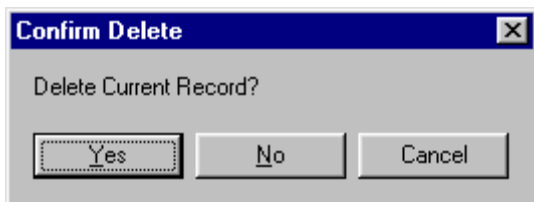

Note


If the left clicks the “**Yes**” button then the company information will be deleted. If on the other hand the operator left clicks the “**No**” button then the company information will not be deleted.

To select the current company (so test reports will print this company's information)

- Find the company using the method given above.
- Left click the “**Select**” button.
- All future test reports will include the current company's information (until another company is selected).

Trace Graph Viewer

The trace graph viewer allows the operator to perform multiple functions on test results. The operator has the ability of loading up to three test runs. Modifying the colors of each test run as well as what channel is displayed on the Y-axis. The operator also has the ability to change the color used to display a channel, enter specific X-axis or Y-axis scale limits, zoom in and out of the graph area, show specific values for each data point in the graph, perform smoothing, display the minimum/maximum/average values for all loaded tests. The operator can also specify Time, MPH or RPM as the X-axis channel to display. Once the operator has configured the Trace Graph Viewer to their specific needs, then they can save the settings away as defaults.

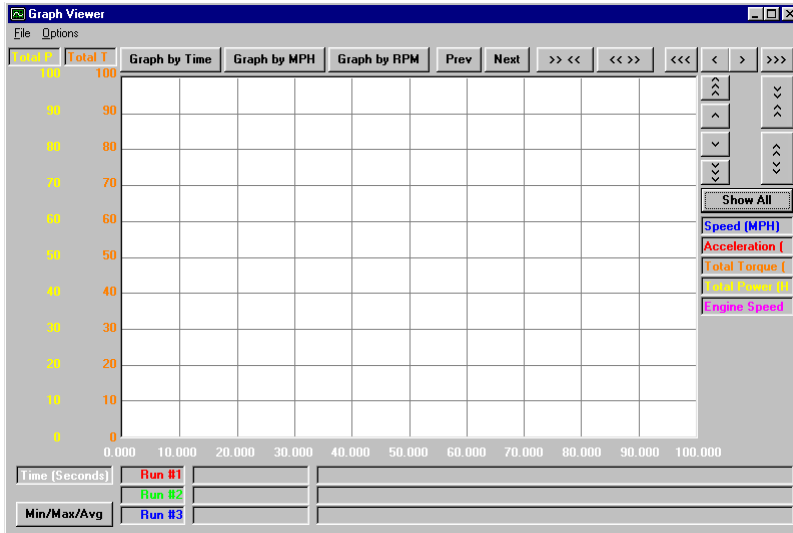

To open a test run

Left double-click on the “**Run #1**”, “**Run #2**” or “**Run #3**” panels located at the bottom of the screen. The operator can also load test runs from the File menu.

To load the test runs from the File Menu, the operator will do the following:

To load “**Run #1**”, select “**Baseline Test**” from the File Menu, then select the “**Load**” menu item

To load “**Run #2**”, select “**Second Test**” from the File Menu, then select the “**Load**” menu item

To load “**Run #3**”, select “**Third Test**” from the File Menu, then select the “**Load**” menu item

To “hide” or “un-hide” a loaded test run

Right double-click on the “**Run #1**”, “**Run #2**” or “**Run #3**” panels.

Note

Loaded but hidden test runs will have a red background.

To unload a test run

Left double-click on the “Run #1”, “Run #2” or “Run #3” panels while holding down the shift keyboard button. The operator can also unload test runs from the file menu.

To Unload test runs from the File Menu, the operator will do the following:

To Unload “Run #2”, select “Second Test” from the File Menu, then select the “UnLoad” menu item

To Unload “Run #3”, select “Third Test” from the File Menu, then select the “UnLoad” menu item

Note

The baseline test cannot be unloaded

To set the color for any test run (when in per-test coloring mode)

Left double click on the vehicle description box just to the right of the “Run #1”, “Run #2”, “Run #3” boxes, a dialog box will display allowing the operator to point and click on the colors that they would like to assign to a test run:



FIGURE 9.3 this is the dialog box that appears when the operator left double clicks on the vehicle description box..

To edit the comments for a test run

Left double click on the test comments box for the test run you wish to edit.

Changing Y-axis channels

To change channels used in the Y-axis scales, click on the Y-axis scale headers (“Acceleration” and “Acceleration”); a menu of channels will be displayed which you can use to select the channels used for each of the two (2) Y-axis scales. Alternatively, simply click on the channel in the legend area to set one of the Y-axis scale channels, or <Ctrl>+Click to set the other Y-axis scale channel.

Changing a Channel color

To change the color used to display a channel, left double click on the channels legend (on the right side of the graph), and a color-selecting window will be displayed as shown in Figure 9.3 above, which you can use to change the color of the channel you clicked on.

Entering specific X-axis or T-axis scale limits

To enter specific X- or Y-axis scale limits, left click on the minimum or maximum value that you would like to change (Y-axis minimum and maximum values are located on the left side of the screen at the bottom and top of the Y-axis scales, X-axis minimum and maximum values are located at the bottom of the graphing area at the left and right of the X-axis scale.) The following dialog box will display, allowing the operator to enter in the scale limits.

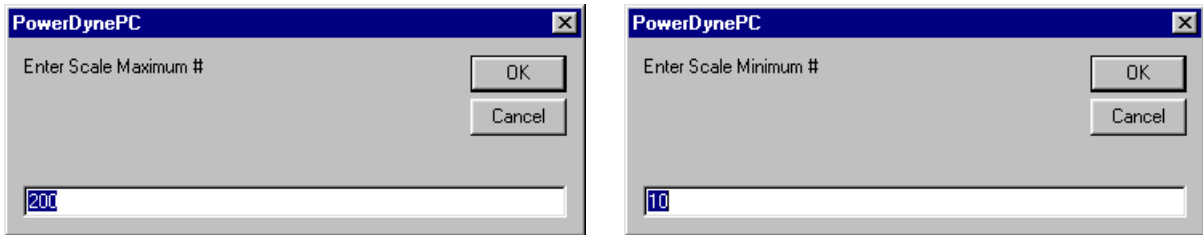


FIGURE 9.5 these are screen snap shots of what the dialogs look like when the operator left click the min and max scale limits.

Zooming in on the graph

To zoom in on the displayed graph area, use your mouse to draw a box around the area you would like to zoom in to; click down with the left mouse button, and hold that button down while dragging the mouse to draw a box. When you let go of the mouse button, the display will zoom in to the area inside the box you have drawn. The box you draw must be at least 20% of the width/height of the graphing area, or nothing will happen. If you draw a very “thin” box (20+% vertically or horizontally, but very small in the other direction), the display will zoom in on the axis that your box is larger in **only**.

Display data point values

To show specific values for each data point in the graph, click down on the graph area using the right mouse button. What happens next will depend on the setting of “**Free-Ranging Cursor**” / “**Point-Locked Cursor**” under the “**Options**” menu.

If “**Free-Ranging Cursor**” is checked: An X/Y crosshair will be shown on the graphing area, and the corresponding X-scale and Y-scale values will be displayed in sliding value boxes aligned with the crosshair lines.

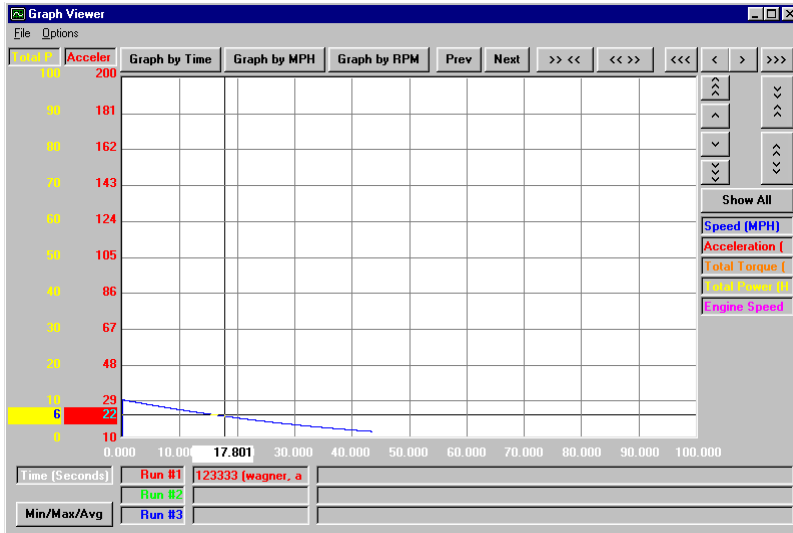


FIGURE 9.6 note the X/Y crosshair displayed in the graph.

If “**Point-Locked Cursor**” is checked: An X/Y crosshair will be shown on the graphing area, but with two (2) horizontal lines. The vertical line will “snap” to the nearest actual data point, and the horizontal lines will snap to the nearest actual data point for each of the two (2) Y-axis scales. The sliding value boxes will be aligned with the crosshair lines, and will show the actual point values. Additionally, the graph legend on the right side of the graphing area will show the actual point values for all channels.

Smoothing

The Graph Smoothing function is used to eliminate any spikes in the data that may occur during or testing.

By setting the smoothing values under the “**Options**” menu, you can make the displayed values more or less smoothed looking. The “**FIR**” (Finite Impulse Response) mode is generally superior to the “**IIR**” (Infinite Impulse Response) mode.

Note

Heavy smoothing values (>50 in “**FIR**” mode, > 90 in “**IIR**” mode) can hide transient values that may be important indicators of your vehicle’s performance.

Getting Min/Max/Avg Values

The operator has the ability to show the minimum, maximum and average values for all loaded test runs, for all selected channels, as currently smoothed and displayed.

Min / Max / Avg Values			
MIN	MAX		AVG
Channel	Run #1	Run #2	Run #3
Speed (MPH)	3.516		
Acceleration (M)	0.000		
Total Torque (Ft)	0.000		
Total Power (H)	0.000		
Engine Speed (I)	0.000		

FIGURE 9.7 this is the screen that will appear when the operator presses the button labeled “Min/Max/Avg”.

Per-channel - vs. - per-test coloring

The operator can select either per-channel or per-test coloring of the traces displayed. When examining many channels from a single test run, per-channel coloring will be easier to see. When examining the same channels from several test runs, per-test coloring will be easier to see. When examining multiple channels from multiple test runs, it is easiest to see with per-channel coloring, with patterned lines enabled. The first run lines will be solid, the second run lines will be dashed, the third run lines will be dashed, but more off than on.

Graph by Time / MPH / RPM

The operator can select any of these three common X-axis channels using the buttons on the screen.

Note

This screen maintains X-axis limit values for all three of these channels.

The operator has the ability to graph data by some other channel (possibly intake manifold pressure, if you do constant speed/RPM tests while varying boost levels); by left double clicking on the X-axis caption (“Time (Seconds)” above) to pick any channel from a list as defined in FIGURE 9.4.

Note

The X-axis limit values are not stored for other channels.

Saving Default Display Settings

The operator can save their configuration setting to disk as defaults for future sessions.

Saving/Restoring Custom Display Settings

The operator can save their custom display settings to whatever file they want, and then load up the saved file to restore those custom display the settings.

Note

This can save significant time when using 2 or more significantly different viewing setups.

Exporting Data

The operator can export the values currently displayed to a text file or as text to a printer. If the operator exports test data from one specific test, the values exported will be the exact values from the dataset – however many are displayed. If the operator exports test data from all of the loaded tests (which can be just one test if desired), they are prompted to enter the number of X-axis units per data point exported (since you want one value for each test run per line, but the raw test data will not have exact X-axis matches for multiple test runs).

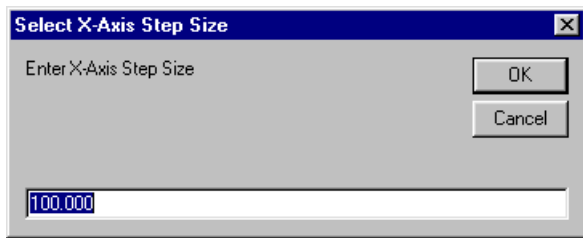



FIGURE 9.8 this is the prompt that the operator will see if they export test data from all of the loaded tests.

For example, if the display is showing 2000 through 7000 RPM, and you specify 100 X-axis units per exported data point, you would get lines in the exported data for 2000, 2100, 2200, ... 6900, 7000 RPM.

Note

The exported data EXACTLY matches the displayed data, including the current smoothing settings. Only channels that are currently displayed will be exported.

The following screen will display to the operator prompting them for the name and location of the export file.

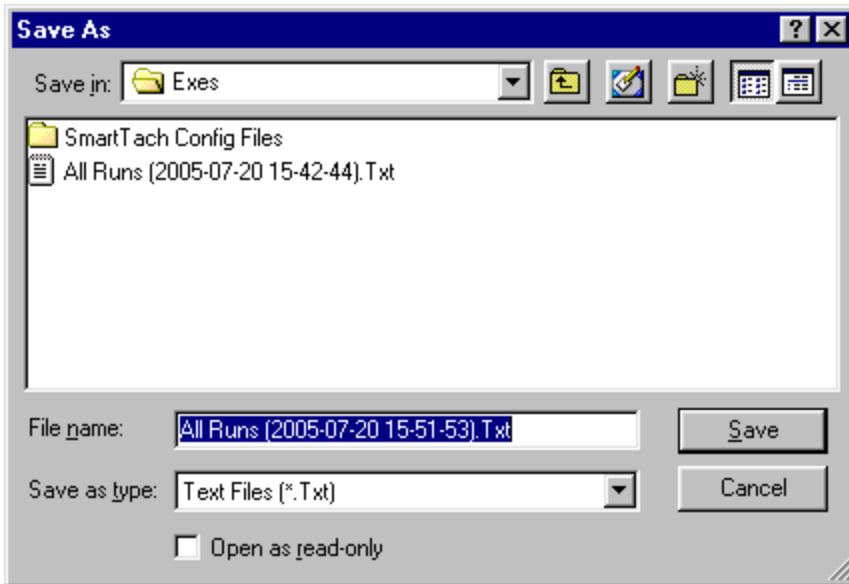

Note

The name of the export file will be in the following format:

All Runs (YYYY-MM-DD HH:MM:SS).txt

Where YYYY-MM-DD HH:MM:SS is the current date and time.

Graph Viewer Menu System

File Menu

The following table is a description of each menu and corresponding menu-item along with a description of its function:

Menu Item	Description				
Baseline Test	<p>This option gives the operator the ability to load, export, print and enter comments for a baseline test, which is a test from which all other tests are measured.</p> <table border="1" data-bbox="634 1612 1378 1856"> <thead> <tr> <th data-bbox="634 1612 1008 1680">Menu Item</th> <th data-bbox="1008 1612 1378 1680">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="634 1680 1008 1856">Load</td> <td data-bbox="1008 1680 1378 1856">This option displays the Test Result Picker so that the operator can load a baseline test.</td> </tr> </tbody> </table>	Menu Item	Description	Load	This option displays the Test Result Picker so that the operator can load a baseline test.
Menu Item	Description				
Load	This option displays the Test Result Picker so that the operator can load a baseline test.				

	Export To Text File	This option prompts the operator to save the baseline test data to a file.										
	Print As Text	This option prints the baseline test data to the printer.										
	Edit Comments	This option prompts the operator for comments.										
Second Test	This option gives the operator the ability to load, export, print and enter comments for a second test.											
	<table border="1"> <thead> <tr> <th data-bbox="634 688 1008 751">Menu Item</th> <th data-bbox="1008 688 1382 751">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="634 751 1008 930">Load</td> <td data-bbox="1008 751 1382 930">This option displays the Test Result Picker so that the operator can load a second test.</td> </tr> <tr> <td data-bbox="634 930 1008 1066">Export To Text File</td> <td data-bbox="1008 930 1382 1066">This option prompts the operator to save the second test data to a file.</td> </tr> <tr> <td data-bbox="634 1066 1008 1203">Print As Text</td> <td data-bbox="1008 1066 1382 1203">This option prints the second test data to the printer.</td> </tr> <tr> <td data-bbox="634 1203 1008 1306">Edit Comments</td> <td data-bbox="1008 1203 1382 1306">This option prompts the operator for comments.</td> </tr> </tbody> </table>		Menu Item	Description	Load	This option displays the Test Result Picker so that the operator can load a second test.	Export To Text File	This option prompts the operator to save the second test data to a file.	Print As Text	This option prints the second test data to the printer.	Edit Comments	This option prompts the operator for comments.
Menu Item	Description											
Load	This option displays the Test Result Picker so that the operator can load a second test.											
Export To Text File	This option prompts the operator to save the second test data to a file.											
Print As Text	This option prints the second test data to the printer.											
Edit Comments	This option prompts the operator for comments.											
Third Test	This option gives the operator the ability to load, export, print and enter comments for a third test.											
	<table border="1"> <thead> <tr> <th data-bbox="634 1423 1008 1486">Menu Item</th> <th data-bbox="1008 1423 1382 1486">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="634 1486 1008 1623">Load</td> <td data-bbox="1008 1486 1382 1623">This option displays the Test Result Picker so that the operator can load a third test.</td> </tr> <tr> <td data-bbox="634 1623 1008 1770">Export To Text File</td> <td data-bbox="1008 1623 1382 1770">This option prompts the operator to save the third test data to a file.</td> </tr> <tr> <td data-bbox="634 1770 1008 1873">Print As Text</td> <td data-bbox="1008 1770 1382 1873">This option prints the third test data to the printer.</td> </tr> </tbody> </table>		Menu Item	Description	Load	This option displays the Test Result Picker so that the operator can load a third test.	Export To Text File	This option prompts the operator to save the third test data to a file.	Print As Text	This option prints the third test data to the printer.		
Menu Item	Description											
Load	This option displays the Test Result Picker so that the operator can load a third test.											
Export To Text File	This option prompts the operator to save the third test data to a file.											
Print As Text	This option prints the third test data to the printer.											

	Edit Comments	This option prompts the operator for comments.
Print Graph	Print the graph – original format	
Print Graph V2	Prints the same graph, but with additional information on the lower part of the printed sheet.	
Print Graph V2 – With Averages	Prints the same graph, but with additional information on the lower part of the printed sheet, including average values.	
Export all by X-axis step	<p>This option prompts the operator for the name and location of a text file that will hold the currently displayed test values.</p> <p>If the operator exports test data from all of the loaded tests, they are prompted to enter the number of X-axis units per data point exported (since you want one value for each test run per line, but the raw test data will not have exact X-axis matches for multiple test runs).</p>	
Print all as text by X-axis step	<p>Allows the operator to print the test values currently displayed.</p> <p>If the operator exports test data from all of the loaded tests, they are prompted to enter the number of X-axis units per data point exported (since you want one value for each test run per line, but the raw test data will not have exact X-axis matches for multiple test runs).</p>	
Save configurations as defaults	This option will save the current configuration settings as defaults for future sessions.	
Save configuration as file	<p>This option prompts the operator for the name and location of a file that will hold custom display settings. The operator can save as many files that they want.</p> <p>Note</p> <p>This can save significant time when using 2 or more significantly different viewing setups.</p>	
Read Configuration from file	<p>This option prompts the operator for the name and location of a file that holds the custom display settings to display.</p> <p>Note</p>	

	<p>This can save significant time when using 2 or more significantly different viewing setups.</p>
Exit	Exit the Graph Viewer

Test Results Picker

The operator can load a test result by selecting this option from the baseline test, second test, or third test menus. The following prompt will display where the operator can specify what test to load based on a search criteria.

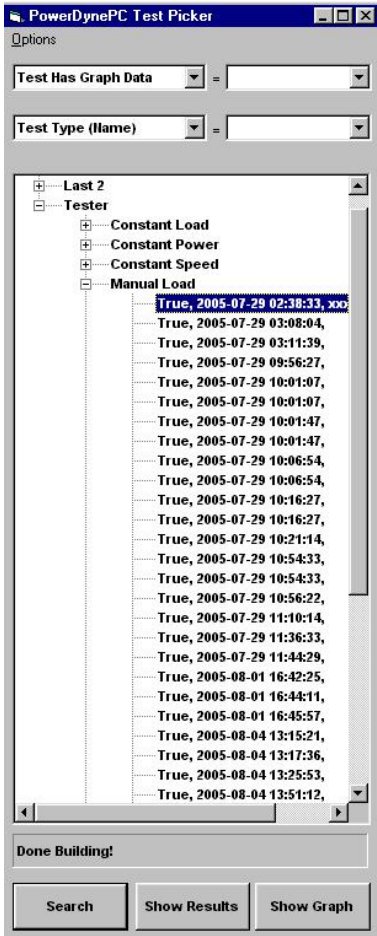


FIGURE 9.9 this is the prompt that the operator will see when they choose to load a baseline, second or third test and allows them to load a test based on a search criteria.

The list of tests displayed is defined by the following:

- Test results fields used for levels in the tree (0-4 levels may be used)
- Test results fields displayed for test records (0-4 fields may be displayed)
- Search criteria used to limit the set of test results displayed (0-2 fields may be restricted)

When a test record is clicked on, this display may:

- Do nothing
- Automatically show a test results summary form

- Automatically display the test results in a graphing window

Configuration of this form is done through the “Options” menu, which has the following options:

Auto-Show Graph

If this option is checked a test results summary form will automatically be displayed when a test record is clicked on.

Auto-Show Results

If this option is checked the test’s graph data will automatically be displayed when a test record is clicked on.

Tree Levels

This option will open a form used to specify which test results fields should be used to create the levels in the results tree.

Displayed Values

This option will open a form used to specify which test results fields should be displayed for each matching test record.

Searching For Specific Test Records

The two drop-down list boxes at the top of the form are used to restrict the number of test records displayed. If these boxes are blank, no restriction is applied. If a test results field is selected, then only test records with values in the specified field that match the value entered in the text box to the right of the drop-down list box will be displayed. If both restriction drop-down list boxes are non-blank (ie a field name is selected in each box), then the list of test records displayed will be restricted based on both fields in an “AND” meaning (test record fields for Field-1 AND Field-2 must match the restriction (search) values entered in the text boxes).

The list of field names available in the drop-down lists is below:

Test Type (Code)

The numeric value associated with each test type – normally not used by end-users of this software.

Test Type (Name)

The name of each test type – the available values are available in the text boxes to the right of the list boxes in the drop-down list of the text box.

Test Date/Time

The year/month/day that the tests were run – the search value is in the format mm/dd/yyyy, and all tests performed on that day will be displayed.

Test Has Graph Data

Either “True” or “False” (available in the list for the matching-value text boxes). If this field is restricted to “True”, the list will not show any tests that do not have graph data, which is handy when picking tests to graph.

Test Data File

The name of the data file that the test’s results are stored in. Can be used to determine exactly what test results are in a given disk file.

Test Comments

Any comments entered for the test. You can then search for tests with comments like “Good pull...”, or any strings you may enter for comments.

Owner First Name

The vehicle owner’s first name.

Owner Last Name

The vehicle owner’s last name.

Vehicle VIN

The vehicle’s VIN number.

Vehicle License

The vehicle’s license plate number (WAY2QIK).

Vehicle Make

The make of the vehicle tested (Eagle).

Vehicle Model


The model of the vehicle tested (Talon TSi).

Vehicle Year

The model year of the vehicle tested.

Specifying Fields for Tree Levels


The form shown below is used to specify which test results fields should be used to create each level in the test results tree.

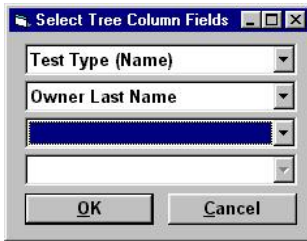

The first field specified will be used to create the left-most level (column) in the list of test results displayed. With 2 fields specified as shown above (Test Type (Name), Owner Last Name), you will see a list of all the test types you have performed, and under each test type, a list of all the customers (Last Name) that each test type has been performed for.

Specifying Fields to be Displayed for Each Test Record

The form shown below is used to specify which test results fields should be displayed for each test record in the list displayed.

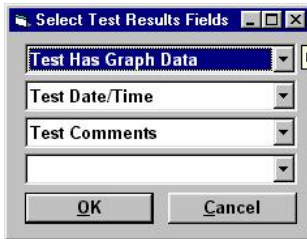

Each field that is selected will be displayed for each test record in the list.

Fields that are used to create the columns in the tree should generally not be displayed for each test record, since that information is already available by looking at the column values of the tree.

With 3 fields specified as shown above (Test Has Graph Data, Test Date/Time, Test Comments), you will see entries like that shown below for each test record displayed:

“True, 7/23/2005, Wastegate feedback tube blew off, huge power, blown engine”

Generally, fields with shorter values (like the True/False displayed for Test Has Graph Data) should be selected for display before longer fields, so the displayed values can be read more easily.

Export To Text File

This option prompts the operator for a name and location of a file to save either baseline, second or third test data to.

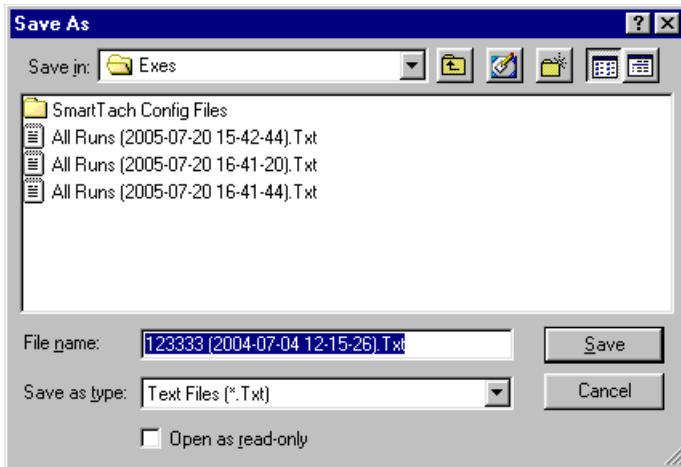


FIGURE 9.11 this is the dialog that the operator will see when they select “Export To Text File”.

Note

The name of the export file will be in the following format:

All Runs (YYYY-MM-DD HH:MM:SS).txt

Where YYYY-MM-DD HH:MM:SS is the current date and time.

Edit Comments Prompt

This option prompts the operator for comments for either baseline, second, or third tests.

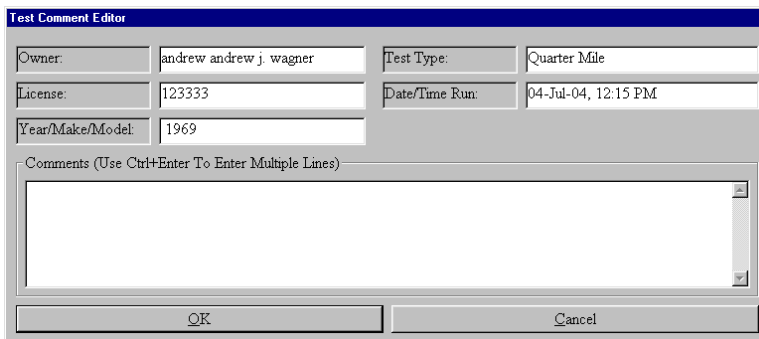


FIGURE 9.12 this is the dialog that the operator will see when they select “Edit Comments”.

The operator can enter multiple lines by press the Ctrl and Enter keys at the same time, and then press the OK button to save them away.

Export all by X-axis step prompt

This option prompts the operator for the name and location of a text file that will hold the currently displayed test values.

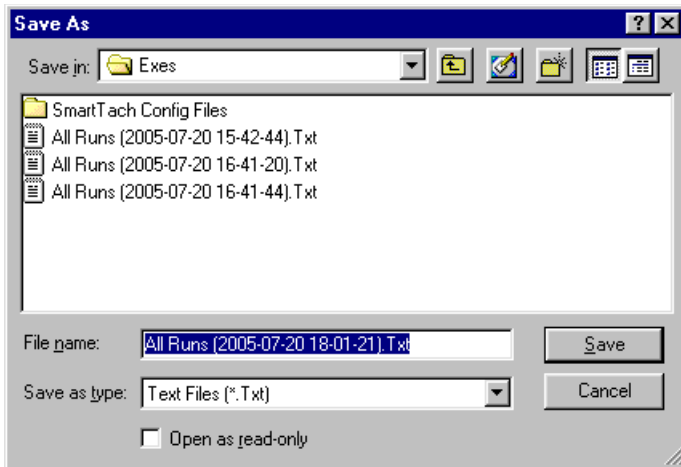


FIGURE 9.13 this is the dialog that the operator will see when they select “Export all by X-axis”.

Note

The name of the export file will be in the following format:

All Runs (YYYY-MM-DD HH:MM:SS).txt

Where YYYY-MM-DD HH:MM:SS is the current date and time.

If the operator exports test data from all of the loaded tests, they are prompted to enter the number of X-axis units per data point exported (since you want one value for each test run per line, but the raw test data will not have exact X-axis matches for multiple test runs).

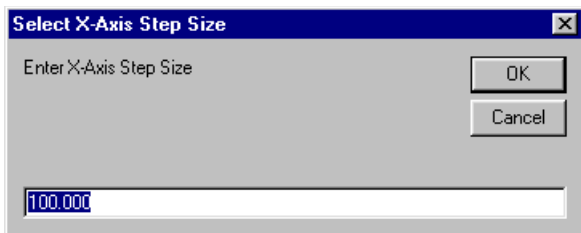


FIGURE 9.14 this is the dialog that the operator will see when prompted to enter the number of X-axis units per data point exported.

Save configuration as file prompt

This option prompts the operator for the name and location of a file that will hold custom display settings. The operator can save as many files that they want.

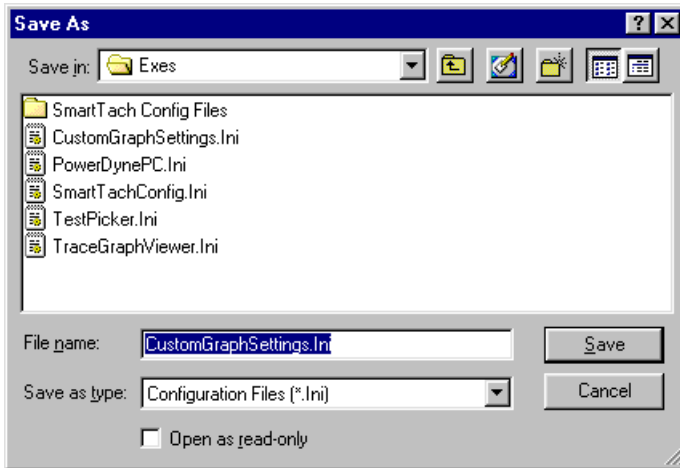


FIGURE 9.15 this is the dialog that the operator will see when they select the menu item “Save Configuration As File”.

Note

This can save significant time when using 2 or more significantly different viewing setups.

Read Configuration from file prompt

This option prompts the operator for the name and location of a file that holds the custom display settings to display.

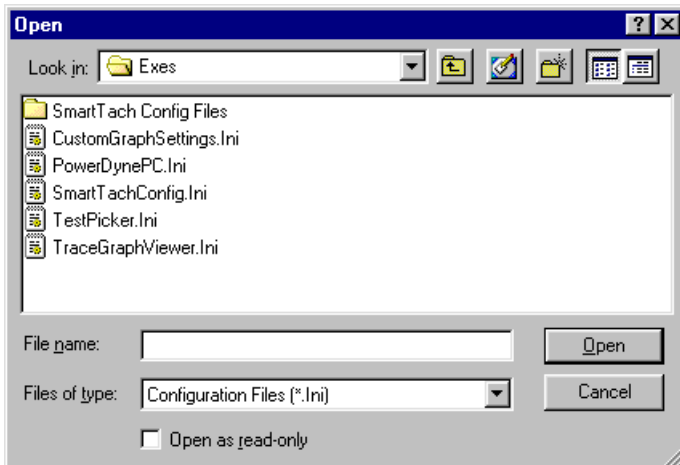


FIGURE 9.16 this is the dialog that the operator will see when they select the menu item “Read Configuration From File”.

Note

This can save significant time when using 2 or more significantly different viewing setups.

Options Menu

Menu Item	Description
Channels To Show	Displays a list of channels that the operator can select from, for a list of channels, please refer to Figure 9.4.
Y-Axes To Show(#)	Lets the operator select display of 1..4 Y-Axis scales.
Smoothing (##)	The Graph Smoothing function is used to eliminate any spikes in the data that may occur during calibration or testing. The operator will be prompted for a number between 0 and 99. The higher the number the more smoothing there is.
Use IIR Filter	Infinite Impulse Response (IIR) filters have an impulse response function, which is non-zero over an infinite length of time.
Use FIR Filter	Finite Impulse Response filters (FIR) which have fixed-duration impulse responses.
Don't Smooth Unseen Data	speeds up re-draws by not smoothing (filtering) any channels that are not getting displayed
Line Graph	A diagram of lines, connecting points on a graph, representing the successive changes in the value of a variable quantity or quantities.
Scatter Graph	A scatter graph is a graph used in statistics to visually display and compare two sets of related quantitative, or numerical, data by displaying only finitely many points, each having a coordinate on a horizontal and a vertical axis.
Use Thick Lines	Makes the graphed lines for each test run thicker.
Use Patterned Lines	Draws the graphed lines for each test run in a different pattern.
Free-Ranging Cursor	An X/Y crosshair will be shown on the graphing area, and the corresponding X-scale and Y-scale values will be displayed in sliding value boxes aligned with the crosshair lines.
Point-Locked Cursor	An X/Y crosshair will be shown on the graphing area, but with two (2) horizontal lines. The vertical line will “snap” to the nearest actual data point, and the horizontal lines will snap to

	<p>the nearest actual data point for each of the two (2) Y-axis scales. The sliding value boxes will be aligned with the crosshair lines, and will show the actual point values. Additionally, the graph legend on the right side of the graphing area will show the actual point values for all channels.</p>
Force Identical Scales	Makes the Y-axis scale the same for all channels - lets them enter min and max values.
Use Per-Channel Colors	<p>When examining many channels from a single test run, per-channel coloring will be easier to see.</p> <div style="border: 1px solid gray; padding: 10px; margin: 10px 0;"> <p>Note</p> <p>When examining multiple channels from multiple test runs, it is easiest to see with per-channel coloring, with patterned lines enabled. The first run lines will be solid, the second run lines will be dashed, the third run lines will be dashed, but more off than on.</p> </div>
Use Per-Run Colors	When examining the same channels from several test runs, per-test coloring will be easier to see.
Limit Number Of Lines	If this option is checked, the display time for large datasets (>20,000 points) will be significantly improved, as the number of line segments displayed will be reduced to 2,000 through point-skipping. In this mode, additional detail will become apparent as you zoom in on the X-axis.

Smoothing (##) prompt


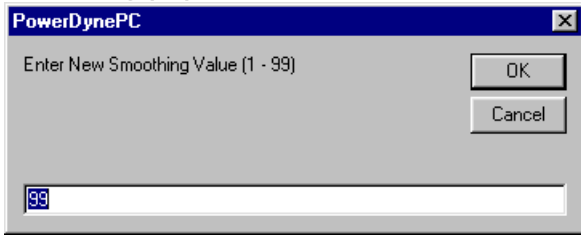


FIGURE 9.17 this is the dialog that the operator will see when they select the menu item “Smoothing (##)”.

Use Thick Lines Prompt




This is how the test runs will appear when the “Use Thick Line” menu item is **not** selected.

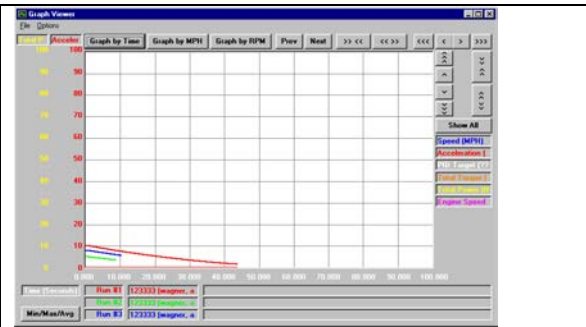


This is how the test runs will appear when the “Use Thick Line” menu item is **selected**. Note how much thicker the lines of the test run are.

Use Patterned Lines Prompt

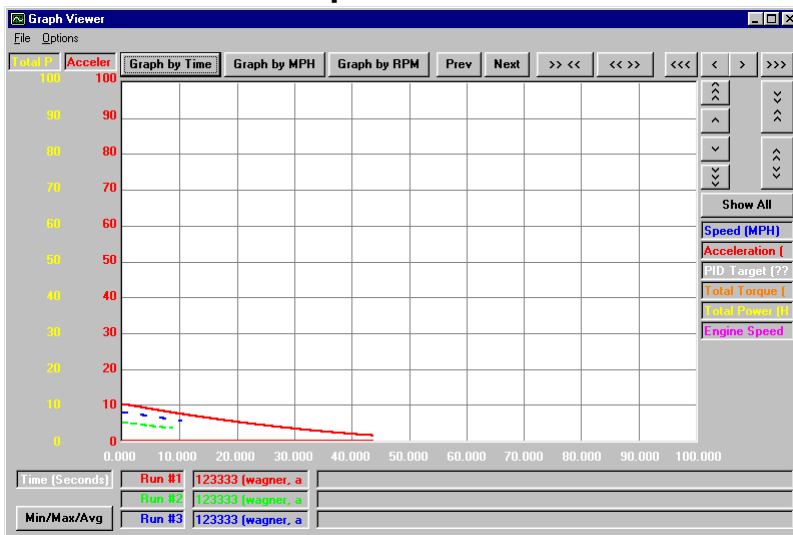


The “Use Patterned Line” menu item displays the lines of the test runs in different patterns. Please note from the above example that test run #1 is a solid line, run #2 is a dotted line, and test run #3 is a dashed line.

Free-Ranging Cursor Prompt

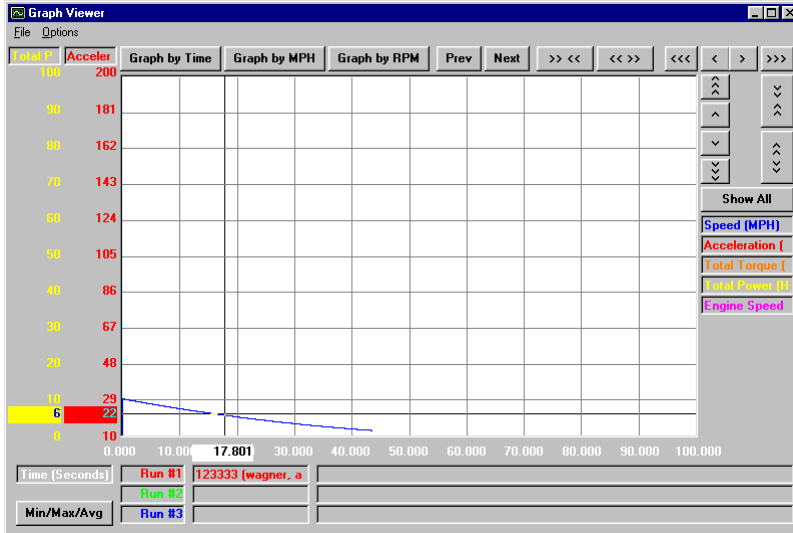

The “**Free-Ranging Cursor**” displays an X-axis and Y-axis cross hairs that are updated in real time as the cross hairs are moved by holding down the right mouse button. Please note that the X-scale and Y-scale values are displayed in real time in sliding boxes that are aligned with the cross hairs. This mode lets the operator see the value for each Y-axis scale at any point in the graphing area, but does not show the values actually recorded during testing.


Point-Locked Cursor Prompt

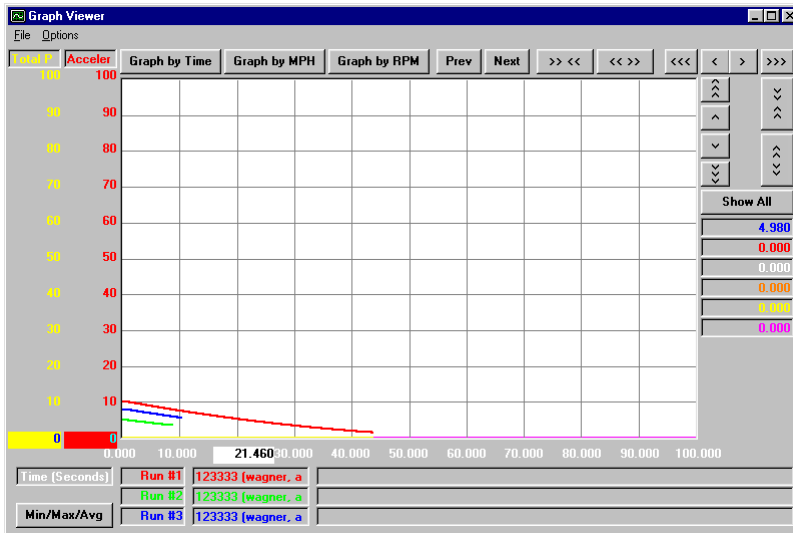








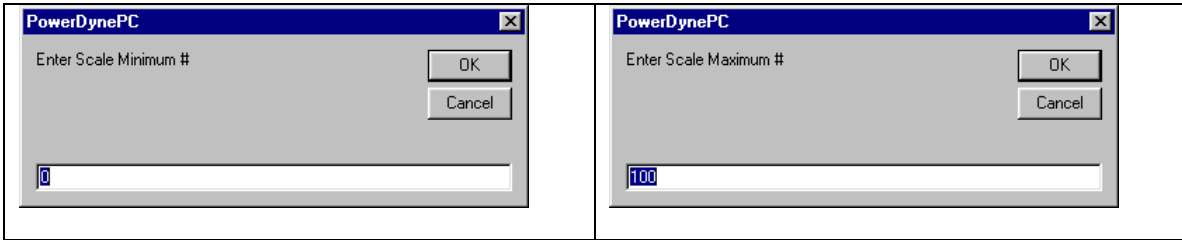


The “**Point-Locked Cursor**” displays in real time the X-scale value as the operator holds down the right mouse button. Please note that the X-scale value is displayed in real time in a sliding box. This mode shows only values that were recorded during testing – the cursor is locked onto actual sample point values.

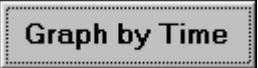







Force Identical Scales Prompt

The “**Force Identical Scales**” prompts the operator for the minimum and maximum scale values in order to make the Y-axis scale the same for all channels.




Buttons and their function

Buttons	Description
	Displays the Time channel on the X-axis.
	Displays Speed (MPH) channel on the X-axis.
	Displays Engine Speed (RPM) on the X-axis.
	Puts all display settings back to how they were previous to the last change - undoes whatever you just did, like a zoom or color change or whatever.
	Moves through the list of saved display options sets.
	Zoom in on the X-axis.
	Zoom out on the X-axis.
	Scroll the graph left three divisions.
	Scroll the graph left one division.
	Scroll the graph right one division.

		Scroll the graph right three divisions.
		Scroll the graph up three divisions.
		Scroll the graph up one division.
		Scroll the graph down one division.
		Scroll the graph down three divisions.
		Zoom in on the X-axis.
		Zoom out on the X-axis.
		Makes the X- and Y-axis scales just big enough to show all the data points in the current data set.

Min/Max/Avg

Displays the minimum, maximum, and average values for all selected channels.

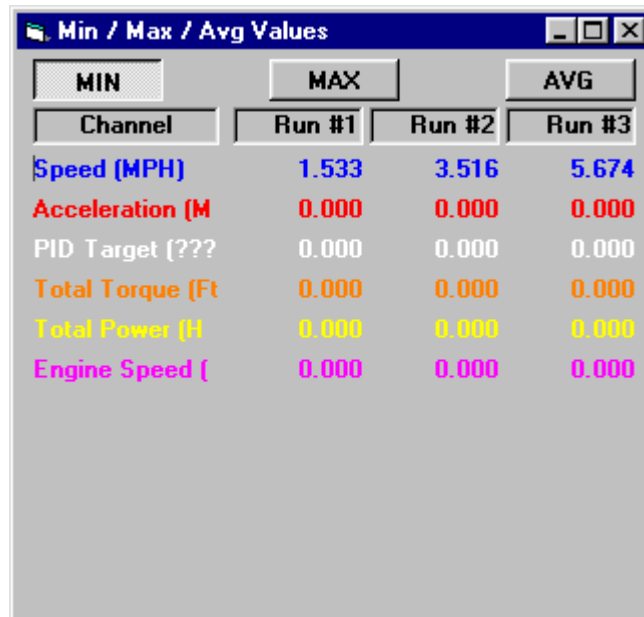

The screenshot shows a window titled "Min / Max / Avg Values" with three buttons: "MIN", "MAX", and "AVG". Below the buttons is a table with the following data:


Channel	Run #1	Run #2	Run #3
Speed (MPH)	1.533	3.516	5.674
Acceleration (M)	0.000	0.000	0.000
PID Target (???)	0.000	0.000	0.000
Total Torque (Ft)	0.000	0.000	0.000
Total Power (H)	0.000	0.000	0.000
Engine Speed (RPM)	0.000	0.000	0.000

This allows the operator to display:

- The minimum values for all channels by pressing the “**MIN**” button.
- The maximum values for all channels by pressing the “**MAX**” button.
- The average values for all channels by pressing the “**AVG**” button.



Driver's Trace Test Results Viewer

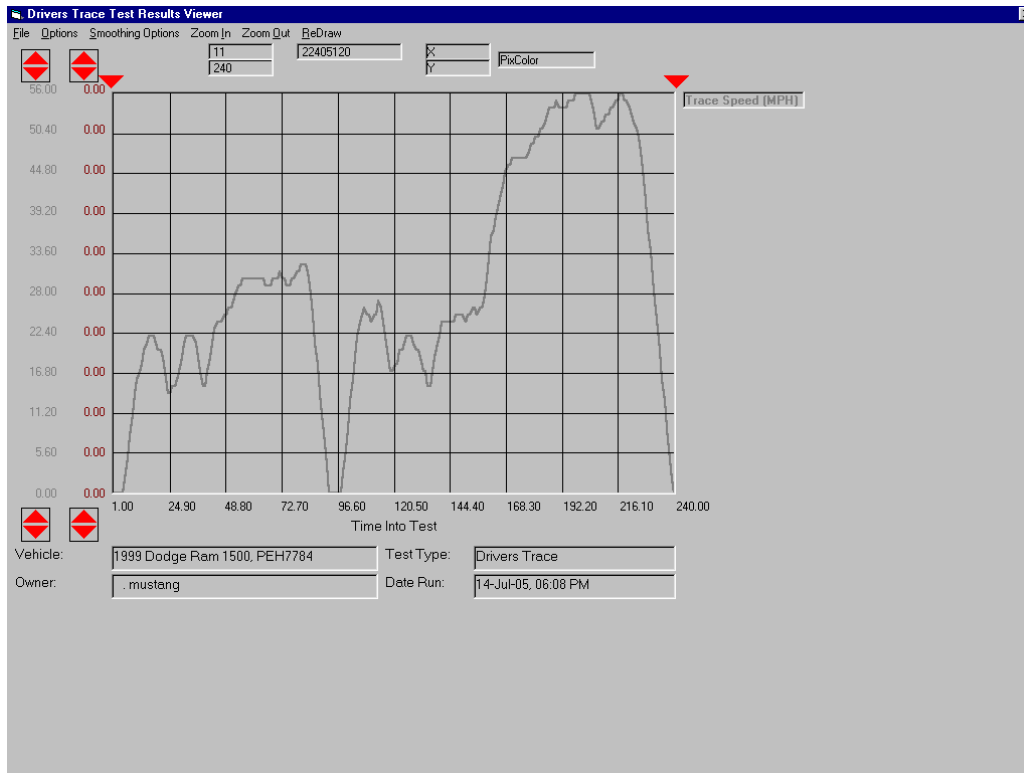This screen allows the operator to view the results of an IM-240 type emissions test.



The Main Screen Interface

The main interface of the Driver Trace Result Viewer allows the operator to view the graph in different ways by adjusting the minimum and maximum scale values for both of the Y-axis. Adjusting the minimum and maximum value allows the operator to see more of the data from other channels. The operator also has the ability of zooming in on the data by adjusting the minimum and maximum X-pointer limits.

Buttons	Description
	<p>This is a spinner that the operator can use for adjusting the minimum and maximum Y-axis scale values for a particular channel, to achieve a “panning” effect.</p>
	<p>This is a pointer that the operator can use to zoom in and out of the graph for a single channel in the Y-axis.</p>



The File Menu


The following is a list of menu items for the File Menu and their corresponding description.

Menu Item	Description
Open	Opens the Test Result Picker, so that the operator can select a test to graph, please refer to FIGURE 9.9 for an example.
View Detail	This screen allows the operator to view specific test run parameters, please refer to FIGURE 9.18 for an example.
Edit Comments	This screen allows the operator displays the edit comments dialog box so that the operator can enter in comments, please refer to FIGURE 9.18 for an example.
Print Test Report	This allows the operator to print out a test report.
Print Graph	This allows the operator to print out the graph.
Print Text	This allows the operator to print out the test results in a text format.
Export To Text File	This allows the operator to export the test result to a file, please refer to FIGURE 9.11 for an example.
Close	Exit the screen.

The Options Menu


The following is a list of menu items for the Option Menu and their corresponding description.

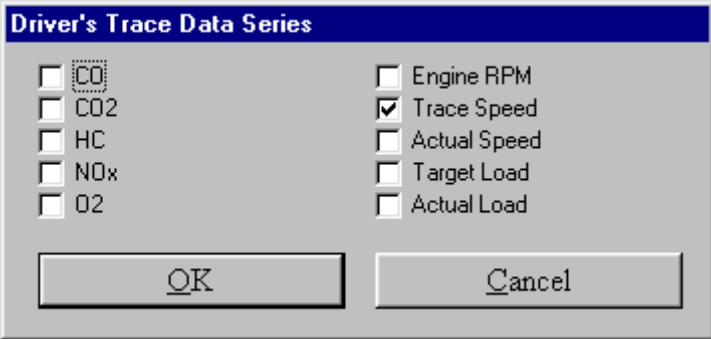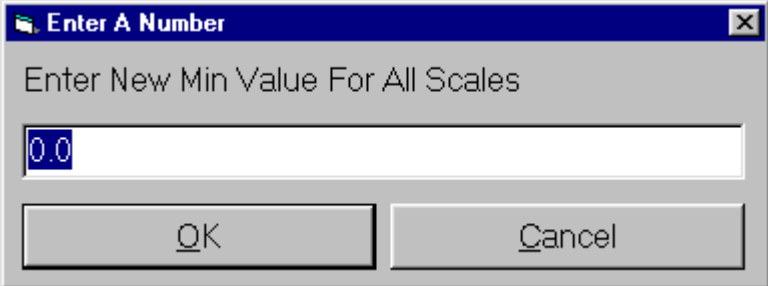Menu Item	Description
Input Channels	<p>Displays the following input channels that the operator can select from:</p>  <p>From this screen the operator will check which input channels they want to display. A legend will be displayed for each channel the operator selects and will be displayed to the right of the graph.</p>
Show Grid	This will toggle the grid lines on/off.
Thick Lines	Makes the graphed lines for each input channel thicker.
Force Identical Scales	<p>Makes the Y-axis scale the same for all channels - lets them enter min and max values.</p> 

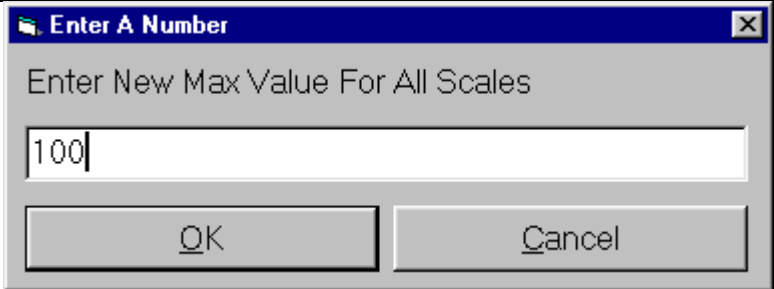	
Force Full Scales	Makes the X- and Y-axis scales just big enough to show all the data points in the current data set.
Force Custom Scales	Makes the display use the stored custom scaling values instead of whatever values it is using now
Default To Custom Scale	Makes the display default to the custom scaling values when the window is opened

Smoothing Options Menu

The following is a list of menu items for the Smoothing Options Menu and their corresponding description.

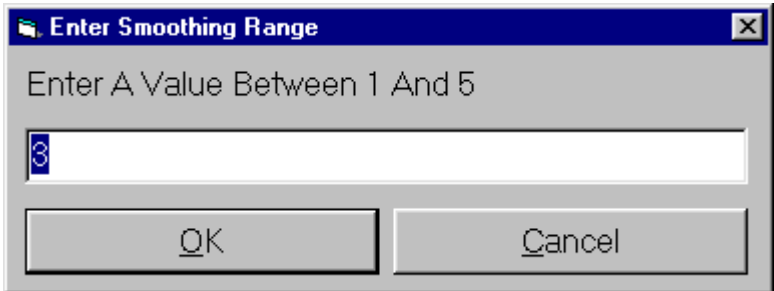Menu Item	Description
Smooth Data	<p>This allows the operator to eliminate any spikes in the data that may occur during calibration or testing.</p> <p>The operator will be prompted to enter a filter value that will be used to smooth the data.</p>  <p>The higher the value, the more smoothing there is.</p>
Revert Data	This allows the operator to revert the data back to no smoothing.

Zoom In Menu

This menu item allows the operator to closely examine the graph.

Zoom Out Menu

This menu item allows the operator to get more of an overall view of the graph.

Redraw Menu

This menu item causes the graph to be redrawn. This is useful when the display is over-written or for any reason is not reflecting the current display settings.

Drivers Trace Test Results Details Viewer

This screen allows the operator to view test parameters for a selected test.

Drivers Trace Test Results Details Viewer

File

General Information		Testing Conditions	
Trace Name:	IM-240	Ambient Temp.:	0
Running Time:	240	Ambient Pressure:	0
Testing HP:	17.8	Ambient Humidity:	0
Testing Wt:	4750	HP Integration Window Values	
Dyno Wt:	3333	Window 1	Window 2
Wt. Simulated:	0	Start:	55 189
Speed Error Limit:	2	Stop:	81 201
Speed Time Range:	1	Limit:	0.5 0.5
Max Warning Time:	2	Error:	0 0

Limit Values								
Linear Regression Check Values								
	SE	m	R2	b	Distance	Purge	ISE%	Violations
Max	2	1.01	1	2	1.980554		1	0
Actual	0	0	0	0	0	0	0	1
Min	0	0.96	0.97	-2	1.880554	1		

FIGURE 9.18 this is the prompt that the operator will see when they select the view detail menu item.

The screen is broken down into the following four sections:

- General Information
- Testing Conditions
- HP Integration Window Value
- Limit Values

General Information

The following is a list of fields in the general information section along with a corresponding description:

Field	Description
Trace Name	The name of the trace.
Running Time	The total time of the trace.
Testing HP	The amount of horsepower applied during the test.
Testing Weight	The weight of the vehicle.
Dyne Weight	The equivalent weight of the dynamometer.
Wt. Simulated	Tells the vehicle weight simulated during the test.
Speed Error Limit	MPH error allowed on top of time based error limits.
Speed Time Range	Seconds on each time of current time to use in error limits calculations.
Max Warning Time	Number of seconds before a warning becomes a violation.

Testing Conditions

The following is a list of fields in the Testing Conditions section along with a corresponding description:

Field	Description
Ambient Temperature	Current weather station temperature.
Ambient Pressure	Current weather station pressure.
Ambient Humidity	Current weather station humidity

HP Window Integration Values

The following is a list of fields in the HP Window Integration Values section along with a corresponding description:

Field	Description
Window 1 Start	Starting time, in seconds, for the first HP integration window.
Window 1 Stop	Ending time, in seconds, for the first HP integration window.
Window 1 Limit	Max HP deviation in this window without generating an error.
Window 1 Error	Max HP deviation must be less than or equal to this to pass.
Window 2 Start	Starting time, in seconds, for the second HP integration window.
Window 2 Stop	Ending time, in seconds, for the second HP integration window.
Window 2 Limit	Max HP deviation in this window without generating an error.
Window 2 Error	Max HP deviation must be less than or equal to this to pass.

Limit Values

The following is a list of fields in the Limit Values section along with a corresponding description:

Field	Description
SE Max	Max SE value from linear regression before generating an error.
SE Actual	The actual standard error.
SE Min	Min SE value from linear regression before generating an error.
M Max	Max value of "m" from linear regressions before generating an error.
M Actual	The slope of the line.
M Min	Min value of "m" from linear regressions before generating an error.
R ² Max	Max value of "r ² " from linear regressions before generating an error.

R ² Actual	Coefficient determination.
R ² Min	Min value of "r ² " from linear regressions before generating an error.
B Max	Max value of "b" from linear regression before generating an error.
B Actual	The Y-intercept of the sloped line.
B Min	Min value of "b" from linear regression before generating an error.
Distance Max	Maximum distance a valid trace can cover.
Distance Actual	The actual distance a trace covered.
Distance Min	Minimum distance a valid trace can cover.
Purge Actual	The actual purge volume (in liters) measured during testing.
Purge Min	The minimum purge volume (in liters) a valid trace can produce.
ISE% Max	Max ISE% (Inertia Simulation Error) before generating an error.
ISE% Actual	The actual ISE% (Inertia Simulation Error) measured during a test.
Violations Max	The maximum number of driving violations allowed during a valid test.
Violations Actual	The actual number of driving violations generated during a test.

Driver Trace Test Results Detail Viewer Menu System

File Menu

The operator can access the following menu item:

Menu Item	Description
Select Text	This menu item displays the "Test Result Picker" (please see FIGURE 9.9) so that the operator can select a test to view details for.
Edit Comments	This menu item displays the "Test Comment Editor" (please see FIGURE 9.12) so that the operator can view or edit the

	comments for the test.
Exit	Close out of the Drivers Trace Test Result Viewer.

Trace Data Collection Speed

This screen allows the operator to specify how frequently data points will be recorded during testing, if trace data collection is enabled.

Trace Data Collection Speeds			Max Data Points
Test	Seconds/Save	Max Record Time	
Manual Control	0.01	00:00:10:00	60000
Constant Torque	0.01	00:00:10:00	OK
Constant Speed	0.01	00:00:10:00	Cancel
Constant Power	0.01	00:00:10:00	
Vehicle Simulation	0.01	00:00:10:00	
Speedometer Check	0.01	00:00:10:00	
HP Curve	0.01	00:00:10:00	
200 Yard Roll-On	0.01	00:00:10:00	
Programmed Torque	0.01	00:00:10:00	
Programmed Speed	0.01	00:00:10:00	
1/4 Mile Sprint	0.01	00:00:10:00	
Standing Accel	0.01	00:00:10:00	
Passing Accel	0.01	00:00:10:00	
ASM 50/15	0.01	00:00:10:00	
ASM 25/25	0.01	00:00:10:00	
Lugdown	0.01	00:00:10:00	
Drivers Trace	0.01	00:00:10:00	
Idle / 2500 RPM	0.01	00:00:10:00	
Loaded Mode	0.01	00:00:10:00	
PRD Test	0.01	00:00:10:00	
PRD Script Test	0.01	00:00:10:00	

For each test routine that the software supports, the operator may specify a recording rate for trace data collection, in terms of seconds per save. Based on the specified recording rate, the maximum trace data recording time is shown just to the right of the recording rate values. The maximum recording time also depends upon the maximum number of data points specified. This allows the operator to collect data at high speed during highly transient testing, while recording at much slower rates in durability type testing.

NOTE: The value for each test can be specified from the test form itself by pressing “<Ctrl>S”.


Fields	Description
Test	All the tests that the software supports.
Seconds/Save	The time between trace data points. This value can range from 0.01 (100 samples/second) up to 3600 (1 sample / hour).
Max Record Time	The maximum trace data recording time available, based on the specified recording rate and the specified maximum number of data points.

Max Data Points	The maximum number of data points that can/will be recorded. The operator may modify this value, although 6000 data points is normally more than enough. If a value that cannot be supported by the available memory (RAM) is entered, an error message will be displayed.
-----------------	--

Channels To Record

This screen allows the operator to specify which trace data channels will be RECORDED in the trace data for each test performed in the future.

NOTE: This is different from the MD-7000 software package – the MD-7000 software always recorded every channel. PowerDynePC records ONLY the channels selected for recording using this form.

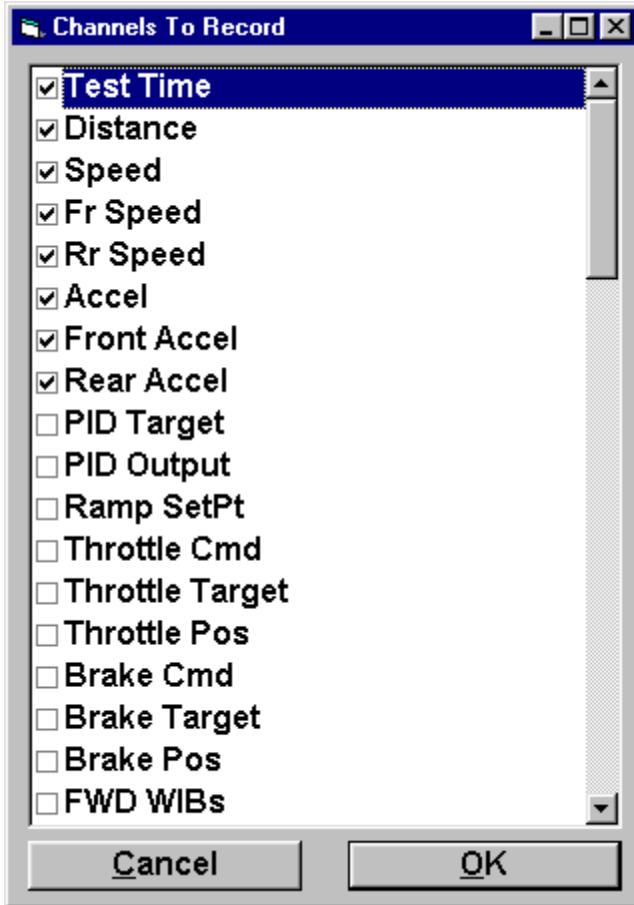

Note

This screen is accessible from the trace graph viewer screen; access to this screen from the Database menu is incidental and not recommended, also the channels displayed on this screen represent the left-mouse-button and right-mouse-button menus that can be used to select value for display on the main screen.

Report Page Layout

This screen allows the operator to specify certain formatting parameters for printed reports.

Report Configuration

Print Quality

Draft

Low Resolution

Med. Resolution

High Resolution

Print Margins

Left:

Right:

Top:

Bottom:

Print Options

Use Color Printer Features

Use Gray-Scale Printer Features


Print Borders On Reports


Font For Printed Text Files

Printer To Use

The following is a list of functions that the operator can perform from this screen:


Function	Description
Print Quality	The operator can select from several print quality settings. Higher print quality usually results in slower printing, whereas reduced print quality usually results in faster printing.
Print Margins	The Left, Right, Top and Bottom print margins can be set to correctly center printed reports on the paper.
Print Options	These options allow the operator to customize the printing of all test reports.

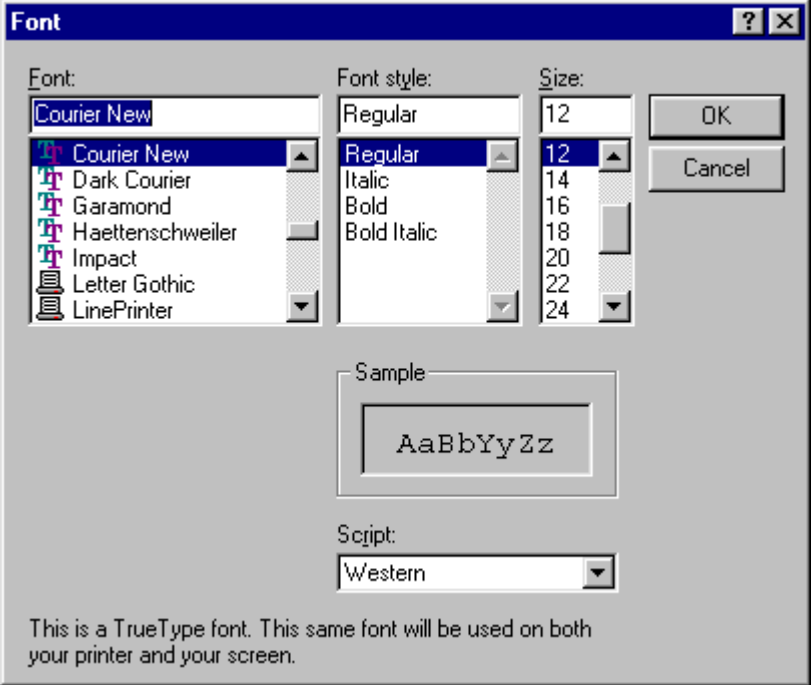	<table border="1"> <thead> <tr> <th data-bbox="565 191 959 262">Print Options</th> <th data-bbox="959 191 1398 262">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="565 262 959 401">Color Printer Features</td> <td data-bbox="959 262 1398 401">If enabled, reports will print with various elements in color.</td> </tr> <tr> <td data-bbox="565 401 959 539">Use Gray-Scale Printer Features</td> <td data-bbox="959 401 1398 539">If enabled, reports will print with various elements gray-scaled.</td> </tr> <tr> <td data-bbox="565 539 959 682">Print Borders On Reports</td> <td data-bbox="959 539 1398 682">If enabled, a border box will be printed around all test reports.</td> </tr> </tbody> </table>	Print Options	Description	Color Printer Features	If enabled, reports will print with various elements in color.	Use Gray-Scale Printer Features	If enabled, reports will print with various elements gray-scaled.	Print Borders On Reports	If enabled, a border box will be printed around all test reports.
Print Options	Description								
Color Printer Features	If enabled, reports will print with various elements in color.								
Use Gray-Scale Printer Features	If enabled, reports will print with various elements gray-scaled.								
Print Borders On Reports	If enabled, a border box will be printed around all test reports.								
Font For Printed Text Files	<p>The operator can specify the font used when printing simple text files. The following dialog box will display when the operator presses the button “Pick A New Font”:</p>  <p>The operator can use this dialog box to select from all the possible fonts that are on the computer.</p>								
Printer To Use	<p>This button displays the following dialog box that allows the operator to select which printer to use when printing reports, test reports or text files.</p>								

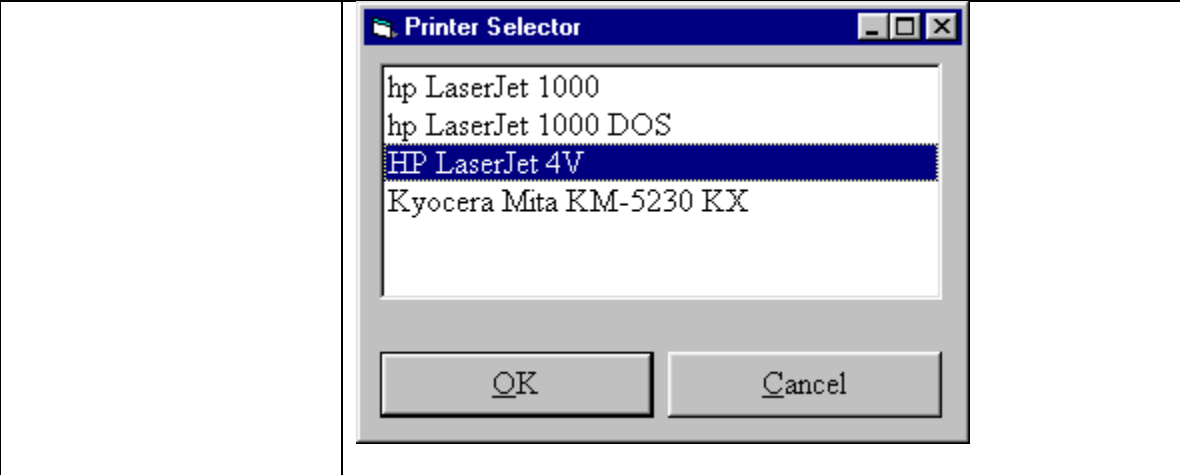


Database Utilities and Options

This screen allows the operator access to the various database related utilities and options.

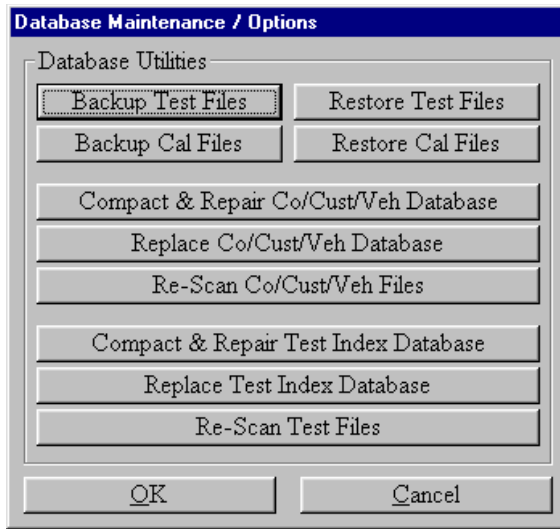

Backup Test Files

The operator can select this option when they want to backup test files, when they do this the following screen will display:

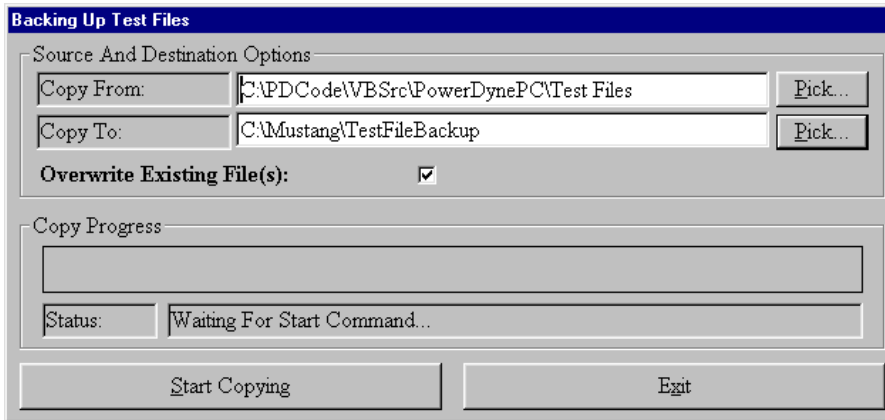

Note

Regular use of this utility will protect your vehicle test data from hardware failure, power outages, virus attacks, etc.


The operator will press the “**Start Copying**” button after they have setup their source and destination options to start the backup. Once the operator has finished, and then they will press the “**Exit**” button to close out of this screen.

Source And Destination Options

Option	Description
Copy From	The location where you test results files are stored. This will normally be "C:\Mustang\Chassis\PowerDynePC\Test Files", but can be something else if the software was not installed to the default location.
Copy To	The directory to which your test files will be backed-up. This can be any directory that is NOT located under the “Copy From” directory – a file server, a FLASH USB key, etc.
Overwrite Existing Files	If set, any existing files in the backup-to directory will be overwritten with newer versions. If not set, the operator will be prompted before any files are overwritten.

Pick Button

The operator will press this button to display the following dialog box:

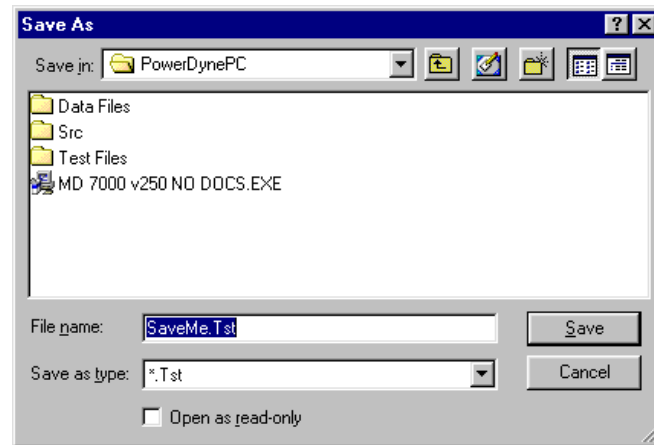

The operator can use this dialog box to “**point and click**” on a folder to backup test files to.

Copy Progress

Option	Description
Status Bar	The status bar indicates to the operator the status of the copy process.
Status	Indicates the status of the copy process, by default the status will say “ Waiting For Start Command ” that indicates that the prompt is waiting on the operator to press the “ Start Copying ” button. As the copying is taking place then the status will change to indicate the file that is being copied: “ Copying File ‘...’ ”. When the copying is complete, then the status will change to “ Done... ”.

Restore Test Files

The operator can select this option when they want to restore test files, when they do this the following screen will display:

Note

This can be used to restore lost or corrupted test data files from existing Backup source directories.


The operator will press the “**Start Copying**” button after they have setup their source and destination options to start the restore. Once the operator has finished, and then they will press the “**Exit**” button to close out of this screen.

Source And Destination Options

Option	Description
Copy From	The directory from which your test files will be restored. You can select any existing backup directory to restore from using the “ Pick... ” button.
Copy To	The location where you test results files are stored. This will normally be "C:\Mustang\Chassis\PowerDynePC\Test Files", but can be something else if the software was not installed to the default location.
Overwrite Existing Files	If set, any existing files in the restore-to directory will be overwritten with backup versions. If not set, the operator will be prompted before any files are overwritten.

Pick Button

The operator will press this button to display the following dialog box:

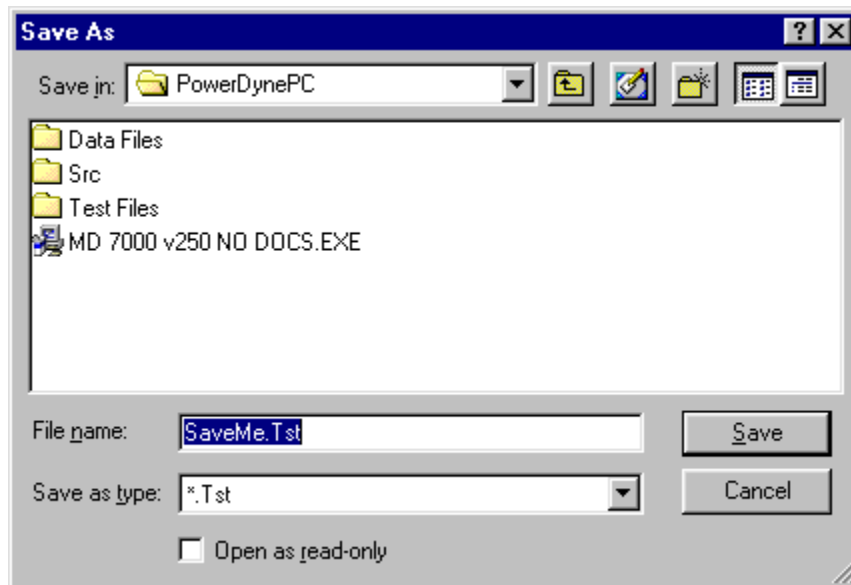

The operator can use this dialog box to “**point and click**” on a folder to backup test files to.

Copy Progress

Option	Description
Status Bar	The status bar indicates to the operator the status of the copy process.
Status	Indicates the status of the copy process, by default the status will say “ Waiting For Start Command ” that indicates that the prompt is waiting on the operator to press the “ Start Copying ” button. As the copying is taking place then the status will change to indicate the file that is being copied: “ Copying File ‘..’ ”. When the copying is complete, then the status will change to “ Done... ”

Backup Cal Files

The operator can select this option when they want to backup calibration files, when they do this the following screen will display:

Backing Up Calibration Files

Source And Destination Options

Copy From: C:\PDCode\WBSrc\PowerDynePC\Data Files Pick...

Copy To: C:\Mustang\CalFileBackup Pick...

Overwrite Existing File(s):

Copy Progress

Status: Waiting For Start Command...

Start Copying Exit

Note

Regular use of this utility will protect your calibration data from hardware failure, power outages, virus attacks, etc.


The operator will press the “**Start Copying**” button after they have setup their source and destination options to start the backup. Once the operator has finished, and then they will press the “**Exit**” button to close out of this screen.

Source And Destination Options

Option	Description
Copy From	The location where you calibration files are stored. This will normally be "C:\Mustang\Chassis\PowerDynePC\Data Files", but can be something else if the software was not installed to the default location.
Copy To	The directory to which your calibration files will be backed-up. This can be any directory that is NOT located under the “Copy From” directory – a file server, a FLASH USB key, etc.
Overwrite Existing Files	If set, any existing files in the backup-to directory will be overwritten with newer versions. If not set, the operator will be prompted before any files are overwritten.

Pick Button

The operator will press this button to display the following dialog box:

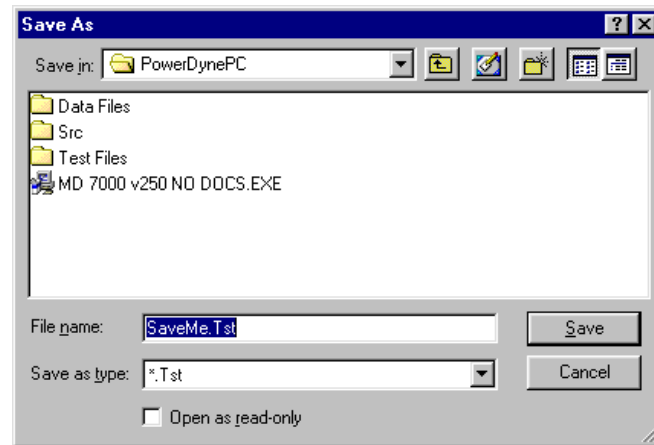

The operator can use this dialog box to “**point and click**” on a folder to backup test files to.

Copy Progress

Option	Description
Status Bar	The status bar indicates to the operator the status of the copy process.
Status	Indicates the status of the copy process, by default the status will say “ Waiting For Start Command ” that indicates that the prompt is waiting on the operator to press the “ Start Copying ” button. As the copying is taking place then the status will change to indicate the file that is being copied: “ Copying File ‘...’ ”. When the copying is complete, then the status will change to “ Done... ”.

Restore Call Files

The operator can select this option when they want to restore calibration files, when they do this the following screen will display:

Restoring Calibration Files

Source And Destination Options

Copy From: C:\Mustang\CaFileBackup

Copy To: C:\PDCode\VB\Src\PowerDynePC\Data Files

Overwrite Existing File(s):

Copy Progress

Status: Waiting For Start Command...

Note

This can be used to restore lost or corrupted calibration data files from existing Backup source directories.


The operator will press the “**Start Copying**” button after they have setup their source and destination options to start the restore. Once the operator has finished, and then they will press the “**Exit**” button to close out of this screen.

Source And Destination Options

Option	Description
Copy From	The directory from which your calibration files will be restored. You can select any existing backup directory to restore from using the “ Pick... ” button.
Copy To	The location where you calibration files are stored. This will normally be "C:\Mustang\Chassis\PowerDynePC\Data Files", but can be something else if the software was not installed to the default location.
Overwrite Existing Files	If set, any existing files in the restore-to directory will be overwritten with backup versions. If not set, the operator will be prompted before any files are overwritten.

Pick Button

The operator will press this button to display the following dialog box:

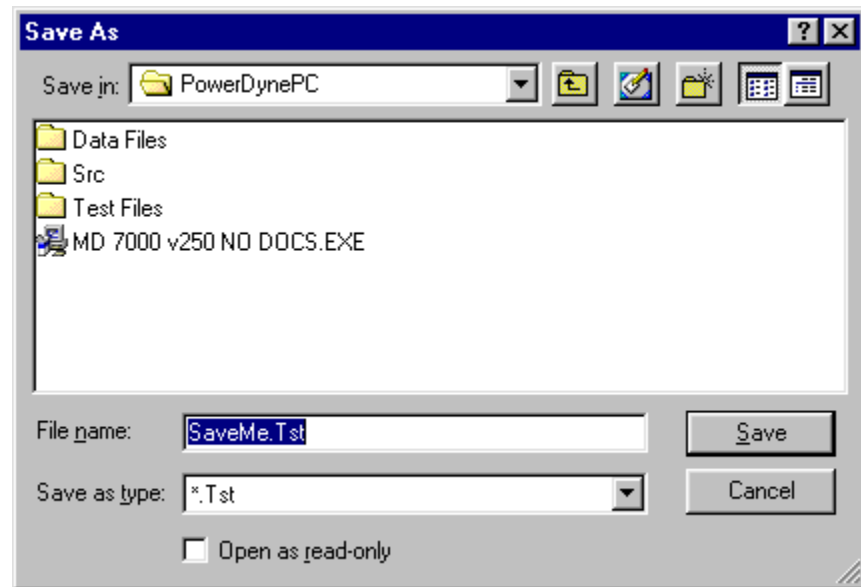

The operator can use this dialog box to “**point and click**” on a folder to backup test files to.

Copy Progress



Option	Description
Status Bar	The status bar indicates to the operator the status of the copy process.
Status	Indicates the status of the copy process, by default the status will say “ Waiting For Start Command ” that indicates that the prompt is waiting on the operator to press the “ Start Copying ” button. As the copying is taking place then the status will change to indicate the file that is being copied: “ Copying File ‘..’ ”. When the copying is complete, then the status will change to “ Done... ”




Compact & Repair Co/Cust/Veh Database

This button allows the operator to access the Compact & Repair database utilities for the Company/Customer/Vehicle Database. These utilities can be used to repair a corrupted database, or compact your database following the deletion of unwanted records.

Note



It is important to compact your database following the deletion of any large number of records, since the database does not actually release unused disk space until the compact utility is run.

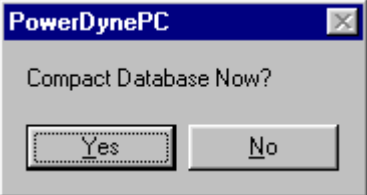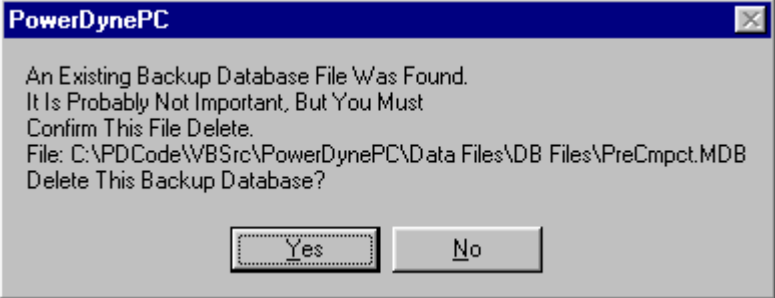Prompt	Description
	<p>The operator will first be prompted if they should want to compact the database, If they press the “No” button then the prompt will disappear, otherwise if they press the “Yes” button then the next prompt will display.</p>
	<p>The operator will be prompted to confirm the deletion of a file, if they chose to delete this file by press the “Yes” button then the file will be deleted, and a prompt will display notifying the operator that the compaction was successful.</p> <p>Note</p> <p>It is important to delete this backup database file in order for the compaction to be successful!</p>

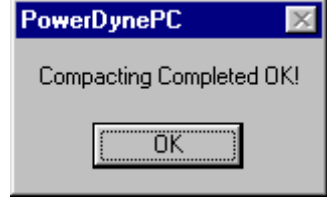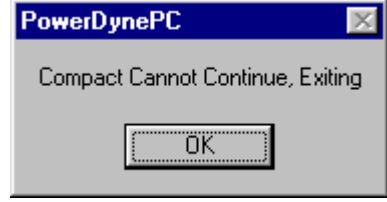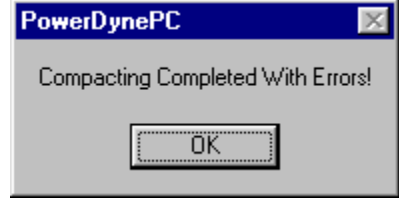	<p>If the operator chose to delete the file (C:\Mustang\Chassis\PowerDynePC\Data Files\DB Files\PreCmpt.MDB”) by pressing the “Yes” button, then the file will be deleted, and the following prompt will display notifying the operator that the compaction was successful.</p>
 	<p>if the operator chose not to delete the file by pressing the “No” button, then the following two prompt will be displayed notifying the operator that compaction was not successful.</p>




Replace Co/Cust/Veh Database



This button allows the operator to replace the Company/Customer/Vehicle database with a blank one. This is a recovery option used in the event that the database becomes so corrupt that it cannot be repaired.

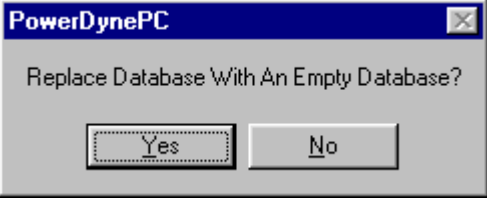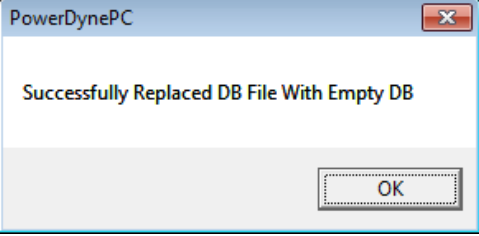Prompt	Description
	If the operator presses the “ No ” button then the prompt will disappear and no file replacement will take place, If on the other hand the operator presses the “ Yes ” button then the Company/Customer/Vehicle database file will be replaced with an empty one
	A message will be displayed notifying the operator that the replacement was successful.
Gary	If the replacement could not take place then the following error message will display notifying the operator that the replacement did not take place.

Re-Scan Co/Cust/Veh Files

This function will scan all existing test records to re-build the Companies/Customers/Vehicles database, normally only used after replacing the database with a blank copy due to a database problem. All Companies/Cutomers/Vehicles referenced in the test results files will be restored to the database.

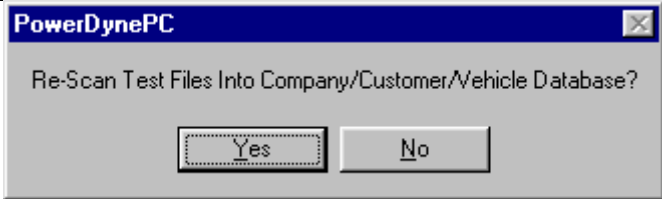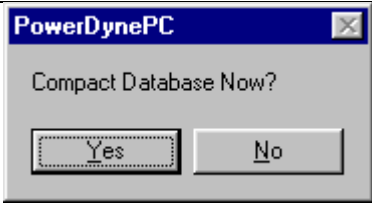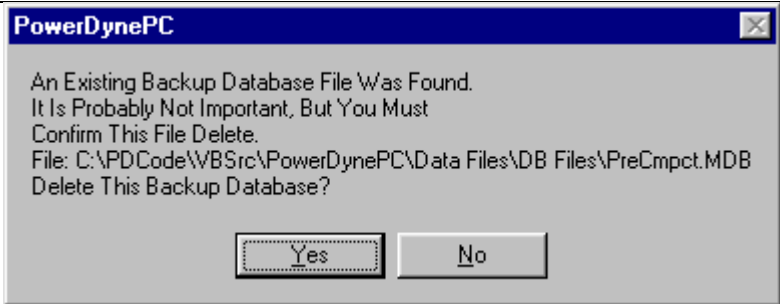Description	Prompt
<p>The operator will be prompted to Re-Scan the test files or not. If the operator presses the “No” button then the screen will disappear and no Re-Scan will take place.</p>	
<p>If on the other hand the “Yes” button is pressed, then the operator will be prompted to compact the database before Re-Scanning can take place.</p> <p>If the operator presses the “No” button then no database compaction will take place and thus no Re-Scan will take place.</p>	
<p>If the operator presses the “Yes” button then they will be prompted to delete a database backup file.</p>	



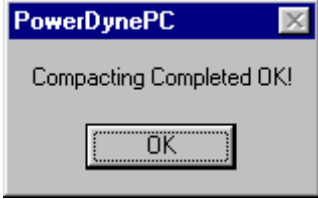
<p>If the compaction was successful then the following prompt will be displayed to the operator.</p>	
<p>After the database compaction has taken place then the test data files will be Re-Scan and the Index database built, after that is done then the following prompt will display notifying the operator that the Re-Scan was successful.</p>	

Compact & Repair Test Index Database



This button allows the operator to access the Compact & Repair database utilities for the Test Database. These utilities can be used to repair a corrupted database, or compact your database following the deletion of unwanted records.

Note

It is important to compact your database following the deletion of any large number of records, since the database does not actually release unused disk space until the compact utility is run.

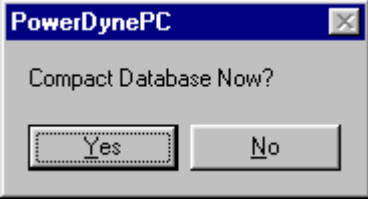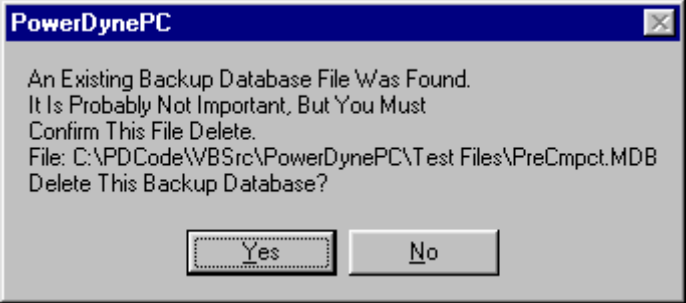
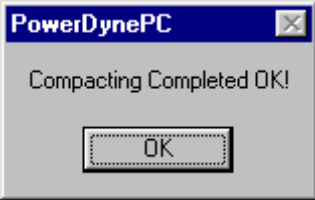
Description	Prompt
<p>The operator will first be prompted if they should want to compact the database, If they press the “No” button then the prompt will disappear, otherwise if they press the “Yes” button then the next prompt will display.</p>	
<p>The operator will be prompted to confirm the deletion of a file, if they chose to delete this file by press the “Yes” button then the file will be deleted, and a prompt will display notifying the operator that the compaction was successful.</p> <p>Note</p> <p>It is important to delete this backup database file in order for the compaction to be successful!</p>	
<p>If the operator chose to delete the file (C:\Mustang\Chassis\PowerDynePC\Data Files\PreCmpct.MDB”) by pressing the “Yes” button, then the file will be deleted, and the following prompt will display notifying the operator that the compaction was successful.</p>	

If the operator chose not to delete the file by pressing the “**No**” button, then the following two prompts will be displayed notifying the operator that compaction **was not successful**.

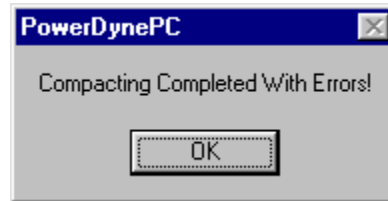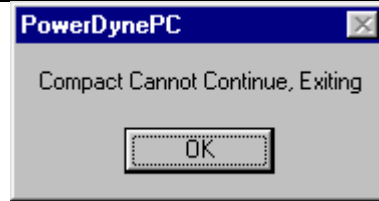





Replace Test Index Database

This button allows the operator to replace the test results index database with a blank one. This is a recovery option used in the even that the database becomes so corrupt that it cannot be repaired.

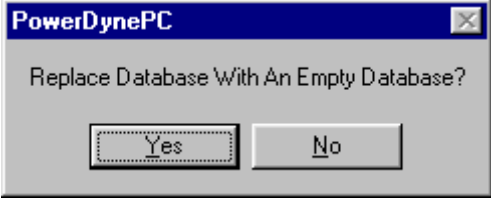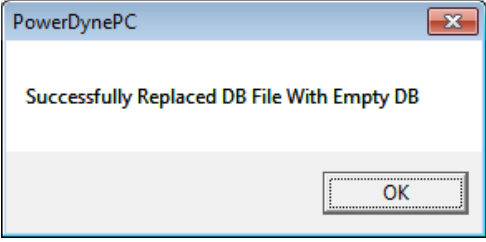Prompt	Description
If the operator presses the “ No ” button then the prompt will disappear and no file replacement will take place, If on the other hand the operator presses the “ Yes ” button then the Test database file will be replaced with an empty one	
A message will be displayed notifying the operator that the replacement was successful.	
If the replacement could not take place then the following error message will display notifying the operator that the replacement did not take place.	Gary

Re-Scan Test Files

This function will scan all existing test records to re-build the test index database, normally only used after replacing the database with a blank copy due to a database problem. All test results files will be restored to the database.

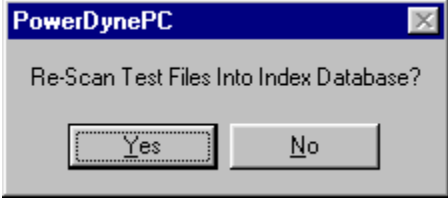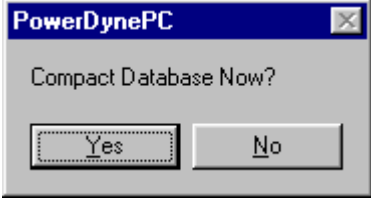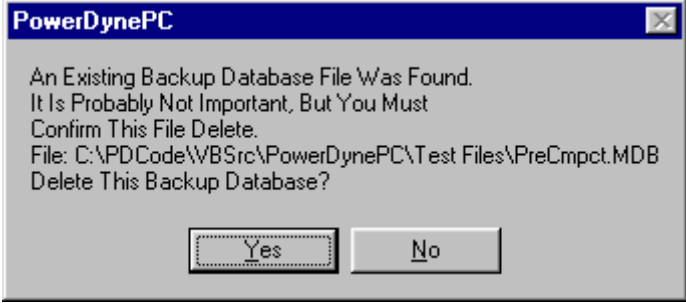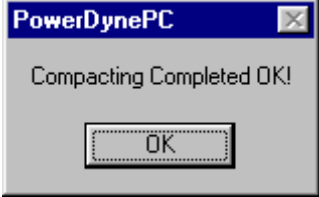Description	Prompt
<p>The operator will be prompted to Re-Scan the test files or not. If the operator presses the “No” button then the screen will disappear and no Re-Scan will take place.</p>	
<p>If on the other hand the “Yes” button is pressed, then the operator will be prompted to compact the database before Re-Scanning can take place.</p> <p>If the operator presses the “No” button then no database compaction will take place and thus no Re-Scan will take place.</p>	
<p>If the operator presses the “Yes” button then they will be prompted to delete a database backup file.</p>	
<p>If the compaction was successful then the following prompt will be displayed to the operator.</p>	

After the database compaction has taken place then the test data files will be Re-Scan and the Index database built, after that is done then the following prompt will display notifying the operator that the Re-Scan was successful.



Test Menu

The Test menu allows access to the various vehicle-testing routines. The vehicle testing routines are broken down into four (4) main groups. Each group of test types is available from the associated sub-menu; please refer to the following table:

Menu	Description								
Test Mode – 2WD Test Mode – 4WD	<p>For 2-axle dynamometers, which can also be operated as 1-axle units, the software needs to know if all of the vehicle’s tires/wheels are on rollers or not. This is required to determine which tires/wheels must be simulated, and which tires/wheels should be considered in “Wheel” and “Engine” torque and power calculations.</p> <p>For units with a computer controlled front/rear coupling clutch, these items will not be visible, as the system already knows its own condition.</p> <p>For other units (manually controlled couplings, permanently uncoupled dynamometers), you must tell the system what mode you are testing in.</p>								
Diagnostics	<p>This menu allows access to the diagnostic vehicle testing routines.</p> <table border="1" data-bbox="634 1377 1382 1871"> <thead> <tr> <th data-bbox="634 1377 1008 1444">Menu</th> <th data-bbox="1008 1377 1382 1444">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="634 1444 1008 1625"> Manual Loading Test </td> <td data-bbox="1008 1444 1382 1625"> This test allows the operator to apply a manually controlled load to the vehicle. </td> </tr> <tr> <td data-bbox="634 1625 1008 1799"> Constant Force Test </td> <td data-bbox="1008 1625 1382 1799"> This test allows the operator to apply a controlled constant force loading to the vehicle. </td> </tr> <tr> <td data-bbox="634 1799 1008 1871"> Constant Speed Test </td> <td data-bbox="1008 1799 1382 1871"> This test allows the operator to hold the vehicle’s speed at </td> </tr> </tbody> </table>	Menu	Description	Manual Loading Test	This test allows the operator to apply a manually controlled load to the vehicle.	Constant Force Test	This test allows the operator to apply a controlled constant force loading to the vehicle.	Constant Speed Test	This test allows the operator to hold the vehicle’s speed at
Menu	Description								
Manual Loading Test	This test allows the operator to apply a manually controlled load to the vehicle.								
Constant Force Test	This test allows the operator to apply a controlled constant force loading to the vehicle.								
Constant Speed Test	This test allows the operator to hold the vehicle’s speed at								

		a constant value.														
	Constant Horsepower Test	This test allows the operator to apply a constant power loading to the vehicle.														
	Vehicle Simulation Test	This test allows the operator to apply a vehicle simulation loading to the vehicle.														
	PRO Test	This test allows the operator to apply any of the loading modes described above, changing modes as desired.														
	Speedometer Check Test	This test allows the operator to check the accuracy of the vehicle's speedometer.														
Performance	This menu allows access to the performance vehicle testing routines.															
	<table border="1"> <thead> <tr> <th>Menu</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Power Curve</td> <td>This test allows the operator to perform a controlled sweep rate type power curve test on the vehicle.</td> </tr> <tr> <td>Programmed Force</td> <td>This test allows the operator to apply a time-based force loading profile to the vehicle.</td> </tr> <tr> <td>Programmed Force Editor</td> <td>This screen allows the operator to edit/create time-based force loading profiles.</td> </tr> <tr> <td>Programmed Speed</td> <td>This test allows the operator to apply a time-based speed control to the vehicle.</td> </tr> <tr> <td>Programmed Speed Editor</td> <td>This screen allows the operator to edit/create time-based speed control profiles.</td> </tr> <tr> <td>PRO Test Script</td> <td>This test allows the operator to execute any stored PRO</td> </tr> </tbody> </table>		Menu	Description	Power Curve	This test allows the operator to perform a controlled sweep rate type power curve test on the vehicle.	Programmed Force	This test allows the operator to apply a time-based force loading profile to the vehicle.	Programmed Force Editor	This screen allows the operator to edit/create time-based force loading profiles.	Programmed Speed	This test allows the operator to apply a time-based speed control to the vehicle.	Programmed Speed Editor	This screen allows the operator to edit/create time-based speed control profiles.	PRO Test Script	This test allows the operator to execute any stored PRO
Menu	Description															
Power Curve	This test allows the operator to perform a controlled sweep rate type power curve test on the vehicle.															
Programmed Force	This test allows the operator to apply a time-based force loading profile to the vehicle.															
Programmed Force Editor	This screen allows the operator to edit/create time-based force loading profiles.															
Programmed Speed	This test allows the operator to apply a time-based speed control to the vehicle.															
Programmed Speed Editor	This screen allows the operator to edit/create time-based speed control profiles.															
PRO Test Script	This test allows the operator to execute any stored PRO															

		Test Script routine.										
	PRO Test Script Editor	This screen allows the operator to edit/create scripts for the PRO Test Script routine.										
Timing	This menu allows access to the timing-type vehicle testing routines.											
	<table border="1"> <thead> <tr> <th>Menu</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Quarter Mile Sprint</td> <td>This test allows the operator to simulate a 1/4-mile sprint race with the vehicle.</td> </tr> <tr> <td>Standing Start Acceleration</td> <td>This test allows the operator to simulate a 0-60 type standing start acceleration run with the vehicle.</td> </tr> <tr> <td>Passing Acceleration</td> <td>This test allows the operator to simulate a 50-70 type passing acceleration run with the vehicle.</td> </tr> <tr> <td>200 Yard Roll-On</td> <td>This test allows the operator to simulate a 200-yard roll-on acceleration run with the vehicle.</td> </tr> </tbody> </table>		Menu	Description	Quarter Mile Sprint	This test allows the operator to simulate a 1/4-mile sprint race with the vehicle.	Standing Start Acceleration	This test allows the operator to simulate a 0-60 type standing start acceleration run with the vehicle.	Passing Acceleration	This test allows the operator to simulate a 50-70 type passing acceleration run with the vehicle.	200 Yard Roll-On	This test allows the operator to simulate a 200-yard roll-on acceleration run with the vehicle.
Menu	Description											
Quarter Mile Sprint	This test allows the operator to simulate a 1/4-mile sprint race with the vehicle.											
Standing Start Acceleration	This test allows the operator to simulate a 0-60 type standing start acceleration run with the vehicle.											
Passing Acceleration	This test allows the operator to simulate a 50-70 type passing acceleration run with the vehicle.											
200 Yard Roll-On	This test allows the operator to simulate a 200-yard roll-on acceleration run with the vehicle.											
Emissions	This menu allows access to the emissions vehicle testing routines.											
	<table border="1"> <thead> <tr> <th>Menu</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Drivers Trace (IM240/FTP/etc)</td> <td>This test allows the operator to perform a (non-certified) IM-240/FTP/etc. type</td> </tr> </tbody> </table>		Menu	Description	Drivers Trace (IM240/FTP/etc)	This test allows the operator to perform a (non-certified) IM-240/FTP/etc. type						
Menu	Description											
Drivers Trace (IM240/FTP/etc)	This test allows the operator to perform a (non-certified) IM-240/FTP/etc. type											

		transient emissions test.
	ASM 50/15	This test allows the operator to perform a (non-certified) ASM 50/15 type emissions test.
	ASM 25/25	This test allows the operator to perform a (non-certified) ASM 25/25 type emissions test.
	Loaded Mode	This test allows the operator to perform a (non-certified) loaded mode type emissions test.
	Idle / 2500 RPM	This test allows the operator to perform a (non-certified) idle/2500 RPM type emissions test.
	Lug down	This test allows the operator to perform a (non-certified) diesel lug-down exhaust opacity test.
PID Values -> Dyno PID Values	<p>This screen allows the operator to specify PID, ramping and step-size values for the various control modes of the dyno.</p> <p>NOTE: Unlike the MD-7000 software, the PowerDynePC software does not maintain different PID values for every test mode – there are now only two sets of PID values, one for each basic control mode (torque (load) control, and speed control). Ramping control is available for each actual control mode (manual, force, power, speed, acceleration, engine RPM – vehicle simulation does not use ramping).</p>	
PID Values -> Speed Follower PID Values	<p>This screen allows the operator to specify PID, ramping and step-size values for the speed-follower facility un-coupled dynamometers.</p> <p>Note: Only the speed mode PID values are used.</p>	

PID Values -> Throttle Controller PID Values	This screen allows the operator to specify PID, ramping and step-size values for the various control modes of the (optional) throttle controller.
PID Values -> Brake Controller PID Values	This screen allows the operator to specify PID, ramping and step-size values for the various control modes of the (optional) brake controller.
Loading Curve	(Disabled, no longer used)
Augmented Braking	Allows the operator to specify the parameters used in augmented braking mode. Sometimes useful for heavy, rear-wheel-drive vehicles with weak rear brakes.
ISE Parameters	Allows the operator to specify the parameters used in ISE calculations. This is not normally a customer-use facility.
Characterize Vehicle Losses	Allows the operator to automatically characterize the additional losses from having the vehicle on the dynamometer, above the dynamometer's own parasitic losses data.
Check Vehicle Simulation Loading	Allows the operator to verify that the vehicle simulation loading is operating correctly.


Special Notes For Each Test Mode

In each of the testing modes, several functions are available via “hot keys”, as described below:

Hot Key	Function
<Ctrl>S	Lets the operator see/edit the graph data recording rate, using a small pop-up window that shows the current recording time period, and lets the operator specify a new (or the same) recording time period.
<Ctrl>P	Pops up the PID, ramp rate and step-size values editor for the dynamometer.
<Ctrl>C	Pops up the channels-to-record selection list, to specify which channels should be recorded in the graph data for future tests.
<Ctrl>E	In the PRO Script Test only, brings up the PRO Script editing screen.

Manual Loading Test

This test allows the operator to apply a manually controlled load to the vehicle.

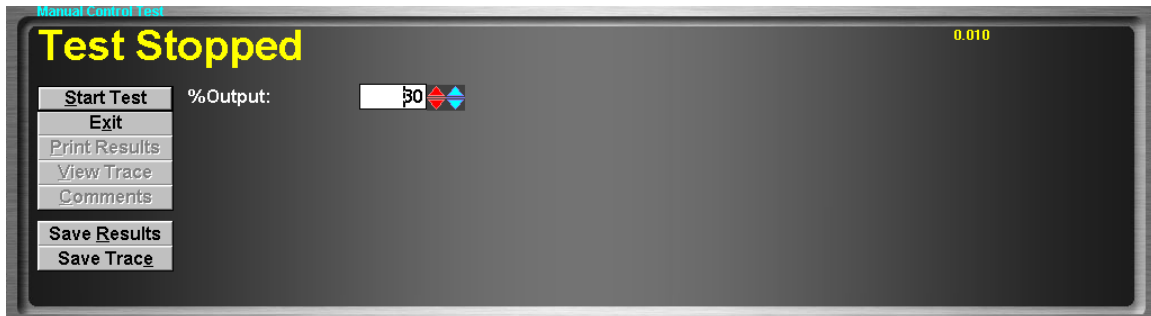

Purpose

The Manual Control Test allows the operator to apply a manually controlled load to the vehicle under test. This routine is useful for very simple testing, and as a diagnostic tool for verifying correct functioning of the dynamometer control system. Specifically, this test does not use any PID tuning values, and can be used to check the zero point and linearity of the “KB Board” amplifier used to control eddy-current PAUs.

Intended Test Procedure

This test has no fixed ending time or structure. The vehicle is simply driven under the desired loading. The general testing procedure is outlined below.

- The “**% Output**” field should be set to a relatively low value to avoid suddenly applying a jarring load to the vehicle when the test is started.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- The “**Start Test**” button is clicked.
- The vehicle is driven under load.
- The “**Stop Test**” button is clicked, and the test terminates.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database.

For this test type, the following additional information is saved as part of the final test results record:

- (None)

If the **“Save Trace”** check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the **“Trace Data Collection Speed”** screen found under the database menu.

Note


Trace data cannot be saved unless the **“Save Results”** check box is checked along with the **“Save Trace”** check box.

Special Considerations for This Test

You should make sure that the output setting is not too high when starting a test, as the vehicle under test may be violently loaded or bogged down.

Constant Force Test

This test allows the operator to apply a controlled constant force loading to the vehicle.

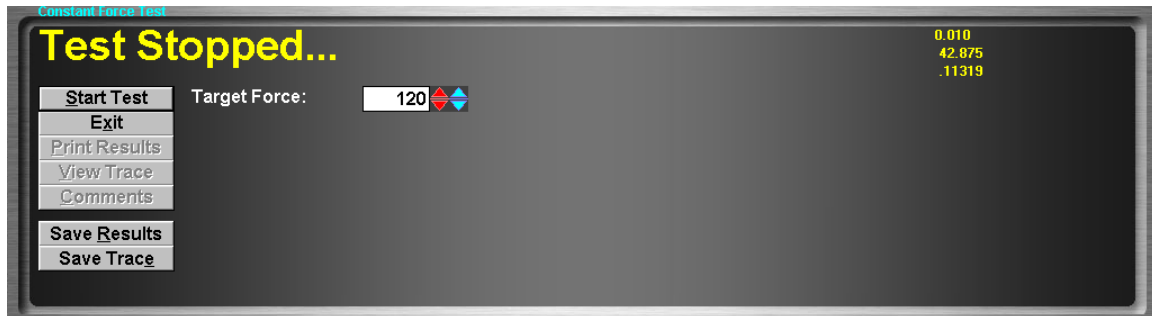

Purpose

The Constant Force Test allows the operator to drive the vehicle under a constant, calibrated force. This routine is useful for very simple testing, and for PID loop tuning.

Intended Test Procedure

This test has no fixed ending time or structure. The vehicle is simply driven under the desired loading.

The general testing procedure is outlined below.

- The “**Target Force**” field should be set to a relatively low value to avoid suddenly applying a jarring load to the vehicle when the test is started.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- The “**Start Test**” button is clicked.
- The vehicle is driven under load.
- The “**Stop Test**” button is clicked, and the test terminates.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database.

For this test type, the following additional information is saved as part of the final test results record:

- (None)

If the “**Save Trace**” check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the “**Trace Data Collection Speed**” screen found under the database menu.

Note


Trace data cannot be saved unless the “**Save Results**” check box is checked along with the “**Save Trace**” check box..

Special Considerations for This Test

The “**Target Force**” value should not be too high when the test is started, to avoid suddenly applying a jarring load to the vehicle when the test is started.

Constant Speed Test

This test allows the operator to hold the vehicle's speed at a constant value.

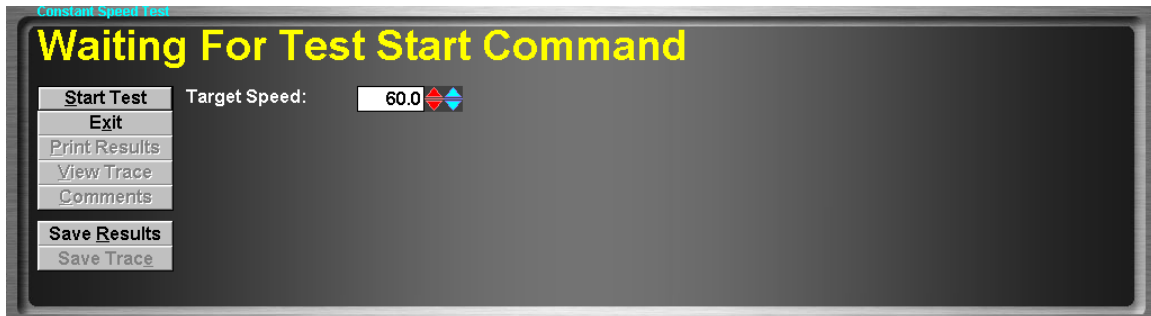

Purpose

The Constant Speed Test allows the operator to hold the vehicle at a specific speed. This test is useful for full-throttle tuning at specific speeds, durability testing, and PID loop tuning.

Intended Test Procedure

This test has no fixed ending time or structure. The vehicle is simply driven at the specified speed, regardless of throttle position. The general testing procedure is outlined below.

- The “**Target Speed**” field should be set to a value higher speed than the vehicle is operating at to avoid suddenly applying a jarring load to the vehicle when the test is started.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- The “**Start Test**” button is clicked.
- The vehicle is driven under load.
- The “**Stop Test**” button is clicked, and the test terminates.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application's database.

For this test type, the following additional information is saved as part of the final test results record:

- (None)

If the “**Save Trace**” check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the “**Trace Data Collection Speed**” screen found under the database menu.

Note


Trace data cannot be saved unless the “**Save Results**” check box is checked along with the “**Save Trace**” check box.

Special Considerations for This Test

You should not start this test with a “**Target Speed**” value that is less than the current speed of the vehicle to avoid sudden jarring loading of the vehicle when the test is started.

Constant Horsepower Test

This test allows the operator to apply a constant power loading to the vehicle.

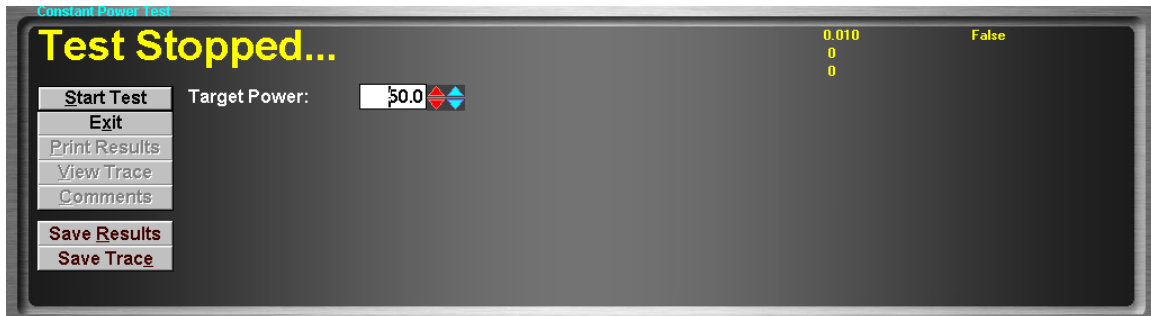

Purpose

The Constant Power Test allows the operator to test the vehicle with a constant power loading applied. This test has limited usefulness for most customers, but may be of use to some very specialized tuners.

Intended Test Procedure

This test has no fixed ending time or structure. The vehicle is simply driven under the desired loading. The general testing procedure is outlined below.

- The “**Target Power**” field should be set to a relatively low value to avoid suddenly applying a jarring load to the vehicle when the test is started.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- The “**Start Test**” button is clicked.
- The vehicle is driven under load.
- The “**Stop Test**” button is clicked, and the test terminates.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database.

For this test type, the following additional information is saved as part of the final test results record:

- (None)

If the “**Save Trace**” check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the “**Trace Data Collection Speed**” screen found under the database menu.

Note


Trace data cannot be saved unless the “**Save Results**” check box is checked along with the “**Save Trace**” check box.

Special Considerations for This Test

The “**Target Power**” field should not be set to too high a value when the test is started to avoid applying a sudden jarring load to the vehicle when the test is started.

Vehicle Simulation Test

This test allows the operator to apply a vehicle simulation loading to the vehicle.

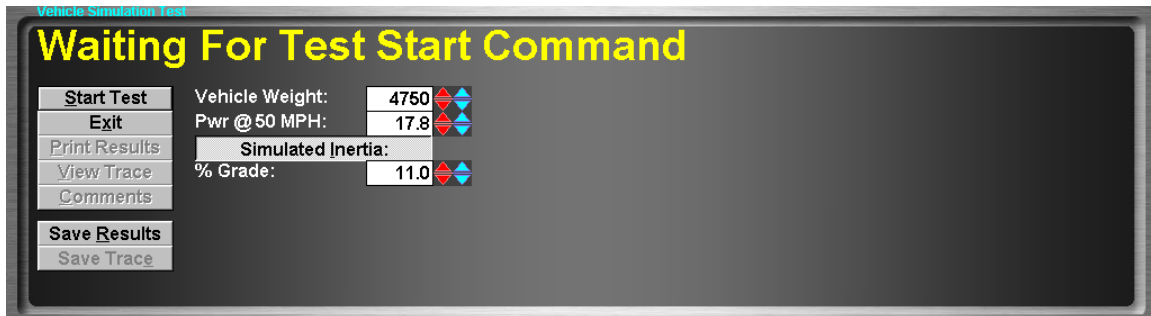

Purpose

The Vehicle Simulation Test allows the operator to drive the vehicle on the dynamometer with the same loading that the vehicle would experience on the road. This test is useful for performing road tests on the dynamometer and for diagnosing cruise-speed problems.

Intended Test Procedure

This test has no fixed ending time or structure. The vehicle is simply driven under the desired loading. The general testing procedure is outlined below.

- The “**Vehicle Weight**” field will default to the weight entered for the vehicle currently selected for testing. The operator may change this weight if desired.
- The “**Pwr @ 50 MPH**” field will default to the value entered for the vehicle currently selected for testing. The operator may change this value if desired.
- The “**Simulated Inertia**” check box determines whether inertia simulation will be used or not. Mustang Dynamometer recommends that this option always be used.
- The “**% Grade**” field will default to the most recently used value. The operator may adjust this value while the test is running to simulate different road grade values.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- The “**Start Test**” button is clicked.
- The vehicle is driven under load.
- The “**Stop Test**” button is clicked, and the test terminates.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database.

For this test type, the following additional information is saved as part of the final test results record:

- (None)

If the “**Save Trace**” check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the “**Trace Data Collection Speed**” screen found under the database menu.

Note


Trace data cannot be saved unless the “**Save Results**” check box is checked along with the “**Save Trace**” check box.

Special Considerations for This Test

The test should not be started with high “**% Grade**” values, or at very high speeds, in order to avoid applying sudden jarring loads to the vehicle when the test is started.

PRO Test

This test allows the operator to apply any of the loading modes described above to the vehicle – the loading mode can be changed at any time.

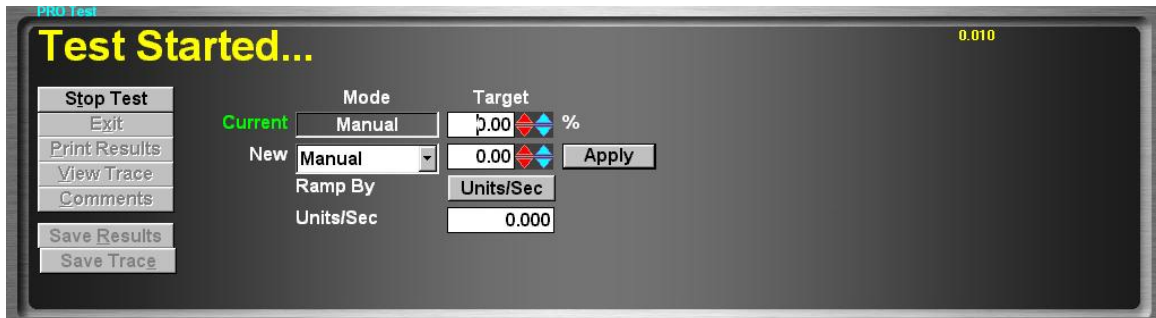

Purpose

The PRO Test allows the operator to drive the vehicle on the dynamometer with any of the loading modes described in the previous test routines. Although this routine provides access to all of the various loading modes, it is best used in situations where the operator needs to switch between loading modes without stopping the vehicle test between modes.

Intended Test Procedure

This test has no fixed ending time or structure. The vehicle is simply driven under the desired loading. The general testing procedure is outlined below.

- 1) The operator must start the test routine, with the dyno load controller turned off.
- 2) The operator must select a loading mode, specify a target value and ramping values, and press “Apply” (or hit “Enter”).
- 3) The dyno load controller will switch to the specified mode, with the specified target and ramping values, and the cursor will move to the “Current” “Target” field, which can then be adjusted using the Up/Down and <Ctrl>Up/<Ctrl>Down buttons in step sizes selected for the current mode in the dyno PID/Ramping/Step Size form.
- 4) When in vehicle simulation mode, the “Current” “Target” field represents road grade in percent.

For all loading modes except vehicle simulation, the following fields will be displayed:

- The “**Target**” field, used to specify the target loading value for the selected mode.
- The “**Ramp By**” field, used to select either “Units/Sec” or “Fixed Time” mode ramping control. For either mode, a “Units/Sec” field value of “0” means to not use ramping, ie to move to the next loading value as quickly as possible.
- The “**Units/Sec**” field, used to specify either a) the number of units to ramp the loading value at per second (eg MPH/Second, Pounds/Second, etc) or b) The number of seconds over which the loading target should be ramped from the current value to the new value, regardless of the step size involved.

For vehicle simulation mode, the following fields will be displayed:

- The “**Vehicle Weight**” field will default to the weight entered for the vehicle currently selected for testing. The operator may change this weight if desired.
- The “**Pwr @ 50 MPH**” field will default to the value entered for the vehicle currently selected for testing. The operator may change this value if desired.
- The “**Simulated Inertia**” check box determines whether inertia simulation will be used or not. Mustang Dynamometer recommends that this option always be used.
- The “**% Grade**” field will default to the most recently used value. The operator may adjust this value while the test is running to simulate different road grade values.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- The “**Start Test**” button is clicked.
- The vehicle is driven under load.
- The “**Stop Test**” button is clicked, and the test terminates.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database.

For this test type, the following additional information is saved as part of the final test results record:

- (None)

If the “**Save Trace**” check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the “**Trace Data Collection Speed**” screen found under the database menu.

Note

Trace data cannot be saved unless the “**Save Results**” check box is checked along with the “**Save Trace**” check box.

Special Considerations for This Test

This test routine always starts with the dyno load controller in “OFF” mode, in order to avoid applying sudden jarring loads to the vehicle when the test is started. However, as with the other test routines, the operator must be careful to avoid enabling the dyno load controller with a large loading value, to avoid jarring the vehicle during testing.

Speedometer Check Test

This test allows the operator to check the accuracy of the vehicle's speedometer.



Purpose

The Speedometer Check Test allows the operator to check the accuracy of the vehicle's speedometer. No load is applied to the vehicle during this test.

Intended Test Procedure

This allows the operator to check the speedometer-reported speed against the (digital, calibrated) dynamometer-reported speed, at 1 or more speeds. The general testing procedure is outlined below.

- The “**Start Speed**” field should be set to the lowest speed at which the speedometer is to be checked. (Example: 10 MPH)
- The “**End Speed**” field should be set to the highest speed at which the speedometer is to be checked. (Example: 70 MPH)
- The “**Speed / Step**” field should be set to the number of speed units between each speed point that should be checked. (Example: 10 MPH / step – given these (3) example values, we would check speed at 10/20/30/40/50/60 MPH)
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- The “**Start Test**” button is clicked.
- The vehicle is driven, with no load. When the driver sees the speedometer indicating the target speed, the “**Check Speed**” button should be clicked. At this point, the actual speed (according to the dynamometer's very accurate digital speed input) is displayed, along with the absolute error of the vehicle's speedometer at the testing speed, and the percentage error that the absolute error represents.
- The “**Stop Test**” button is clicked, and the test terminates.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database.

For this test type, the following additional information is saved as part of the final test results record:

- Target Speed (1..n)
- Actual (Dynamometer) Speed (1..n)
- Speedometer Error, MPH/KPH (1..n)
- Speedometer Error, % (1..n)

If the “**Save Trace**” check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the “Trace Data Collection Speed” screen found under the database menu.

Note

Trace data cannot be saved unless the “**Save Results**” check box is checked along with the “**Save Trace**” check box.

Special Considerations for This Test

None.

Power Curve (Controlled Sweep Rate/ Vehicle Simulation Mode)

This test allows the operator to perform a controlled sweep rate type power curve test on the vehicle.

The screenshot shows the 'Waiting For Test Start Command' screen. On the left, there is a menu with options: Start Test, Exit, Print Results, View Trace, and Comments. Below the menu are input fields for Start Speed (50 MPH), Stop Speed (100 MPH), Vehicle Wt (7500), and Pwr @ 50 (28.1). A 'Vehicle Simulation' mode is selected. On the right, 'Wheel Power / Torque' is displayed with Max Power (0.0 HP) and Max Torque (0.0 Ft-Lbs) both at 0 RPM and 0.0 MPH. At the bottom, there are buttons for 'Showing Wheel Values', 'Stop After Test', 'Measure Losses At End', and 'Auto Show Graphs'. A 'Slow Down To' field is set to 20.

The screenshot shows the 'Waiting For Test Start Command' screen. On the left, the menu is the same. Below the menu, 'Control Sweep Rate' is selected. A 'Running Time' field is set to 50. On the right, 'Wheel Power / Torque' is displayed with Max Power (0.0 HP) and Max Torque (0.0 Ft-Lbs) both at 0 RPM and 0.0 MPH. At the bottom, there are buttons for 'Showing Wheel Values', 'Stop After Test', 'Enter Sweep Time', and 'Auto Show Graphs'. A 'Slow Down To' field is set to 20.

Purpose

The Horsepower Curve Test allows the operator to perform a sweep-type power measurement test on the vehicle. This test routine supports both a fixed-sweep-time mode and a vehicle-simulation-loading mode. The vehicle-simulation-loading mode will most accurately reflect the actual power that the vehicle will deliver in use, while a fixed-sweep-time mode test can be used for comparing against test-stand dynamometer values.

Intended Test Procedure

This test has a specific ending point, which is reached when the vehicle's speed increases past the value entered in the "**Stop Speed**" field. The general testing procedure is outlined below.

NOTE: This power curve test does NOT generate by-MPH and by-RPM data independent of the test's graph data, as the MD-7000 series software did. In PowerDynePC, the trace/graph data is required to view/print power curve graphs.

- The "**Start Speed**" field should be set to the lowest speed at which the vehicle is to be tested. This should be the lowest speed at which the vehicle will run cleanly in the gear selected for testing if single-gear testing is to be performed. If "Use RPM Limits" is selected, this value will be in engine RPM, otherwise in vehicle speed units (MPH/KPH).
- The "**Stop Speed**" field should be set to the highest speed at which the vehicle is to be tested. This should be the highest speed at which the vehicle can be operated in the highest gear that will be used during testing. If "Use RPM Limits" is selected, this value will be in engine RPM, otherwise in vehicle speed units (MPH/KPH).

- The “**Stop After Test**” check box should be set appropriately. If this check box is checked, the dynamometer’s PAU will be used to stop the dynamometer after the power sweep is complete, to save wear on the vehicle’s brakes.
- You must select either the “**Control Sweep Rate**” or the “**Vehicle Simulation**” mode of testing. The “**Vehicle Simulation**” mode is preferred, since it will most accurately measure the power that the vehicle will deliver during actual driving, while the controlled sweep rate mode may be more useful for comparing to test-stand dynamometers.
- If “**Control Sweep Rate**” mode is selected, you must specify a value (in seconds) for the sweep “**Running Time**”. Mustang Dynamometer recommends that you use the longest running time that the vehicle can comfortably tolerate, to enable additional data collection during the sweep. The acceleration rate can be specified as either a) “**Running Time**” in seconds (“**Enter Sweep Time**” mode), or b) “**MPH/Sec**” (“**Enter Accel Rate**” mode).
- If “**Vehicle Simulation**” mode is selected, the “**Vehicle Wt**”, “**Pwr @ 50**” and “**Simulated Inertia**” fields must be set appropriately. The numeric values will default to the values entered for the vehicle currently selected for testing, and Mustang Dynamometer recommends that the “**Simulated Inertia**” option always be left on.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- The “**Start Test**” button is clicked.
- The vehicle is driven at just below the specified starting speed, and then accelerated at full power until the specified stopping speed is matched or exceeded. The screen will indicate to the driver when the test is complete.
- The “**Stop Test**” button does not need to be clicked, as the test automatically terminates once the dynamometer is stopped. The “**Stop Test**” button may be used to cancel a test, which you do not wish to complete.
- Any saved test results may be viewed and/or a test report printed.

Use RPM Limits	If selected, the “ Start Speed ” and “ Stop Speed ” values will be interpreted as engine RPM values rather than vehicle MPH values.
Showing Wheel Values Showing Engine Values	This option lets the user decide if “Wheel” or “Engine” torque and power values are displayed on-screen. “Wheel” values include tire/wheel equivalent weight effects, while “Engine” values additionally include drivetrain efficiency and flywheel inertia effects.

Stop After Test	This option makes the dynamometer slow the system down to the “Slow Down To” speed after the test has finished, and speed has fallen below (top-speed minus 5) MPH.
Slow Down To	If “ Stop After Test ” is not enabled, then the system will be slowed to this speed at the end of a test, once the measured speed has fallen to the highest speed encountered during actual testing minus 5 MPH. This value might be set to the start speed minus 5 MPH for operators performing back-to-back sets of 3 runs.
Measure Losses At End	<p>If this option is used, then at the end of a power curve, the vehicle must be allowed to coast to a stop, during which the total system losses will be measured. Those measured values will be used to replace the dynamometer’s parasitic losses in all values recorded by the test run. Thus, in this mode, the vehicle’s Losses Curve ABC values must be set to 0,0,0 – otherwise, those vehicle-specific losses will be counted twice.</p> <p>If this option is not checked, then the dynamometer’s parasitic losses, plus the vehicle-specific additional losses, data will be used.</p>
Enter Sweep Time Enter Accel Rate	<p>If “Enter Sweep Time” is displayed, the “Running Time” value is in seconds.</p> <p>If “Enter Accel Rate” is displayed, then the “MPH/Sec” value is in MPH / second.</p>
Auto Show Graph	If this option is green, then the graph viewer will automatically pop up and show the test results. As each new run is completed, they will be shown as test 1, then 2, then 3 (and then 3 forever) in the graph viewer.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database.

For this test type, the following additional information is saved as part of the final test results record:

- Maximum torque and power values, and the speed (MPH/KPH) and engine RPM at which they were measured, in both raw and SAE/ambient conditions corrected (WCF, With Correction Factor) values.

If the “**Save Trace**” check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the “Trace Data Collection Speed” screen found under the database menu.

Note

Trace data cannot be saved unless the “**Save Results**” check box is checked along with the “**Save Trace**” check box.

Special Considerations for This Test

- Torque values can only be recorded in terms of engine crankshaft torque when a good engine RPM signal is present, otherwise torque values will be recorded in terms of dynamometer roll shaft torque.
- A longer sweep time should generate higher power and torque readings, since a lower acceleration rate means that less power is absorbed by the vehicle’s drive train.
- If you experience wavy torque or power curves, you should try to isolate the cause of the waves. You should use the Trace Graph Viewer to isolate torque waves to either “**PAU Torque**” or “**Accel Torque**”, and you may wish to filter the wavy input, which can be done in the “**Dyno Parameters**” screen. An unstable engine RPM input can also cause distorted torque and power curves.

Programmed Force

This test allows the operator to apply a time-based force loading profile to the vehicle.



Purpose

The Programmed Force Test can be used for durability or performance testing, or to simulate real-world loading profiles.

Intended Test Procedure

This test has a fixed termination time, when the last data point has been processed for the last loop through the selected test profile. The general testing procedure is outlined below.

- Select a test profile using the “**Select Test Profile**” directory- and file-picking boxes.
- Enter the number of loops through the selected profile that you wish to execute.
- If a driving aid script file is available for the selected loading script, you may wish to click the “Show Driving Aid” button, to bring up the driving aid display (not commonly used).
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- A driver should start driving the vehicle at the desired testing speed.
- The “**Start Test**” button is clicked.
- The vehicle is driven until the test completes, while the load on the vehicle is controlled by the selected test profile.
- When the last data point has been processed for the last time through the selected profile, the test terminates.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database. For this test type, the following additional information is saved as part of the final test results record:

- (None)

If the “**Save Trace**” check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the “**Trace Data Collection Speed**” screen found under the database menu.

Note


Trace data cannot be saved unless the “**Save Results**” check box is checked along with the “**Save Trace**” check box..

Special Considerations for This Test

None.


Programmed Force Editor

This screen allows the operator to edit/create time-based force loading profiles.

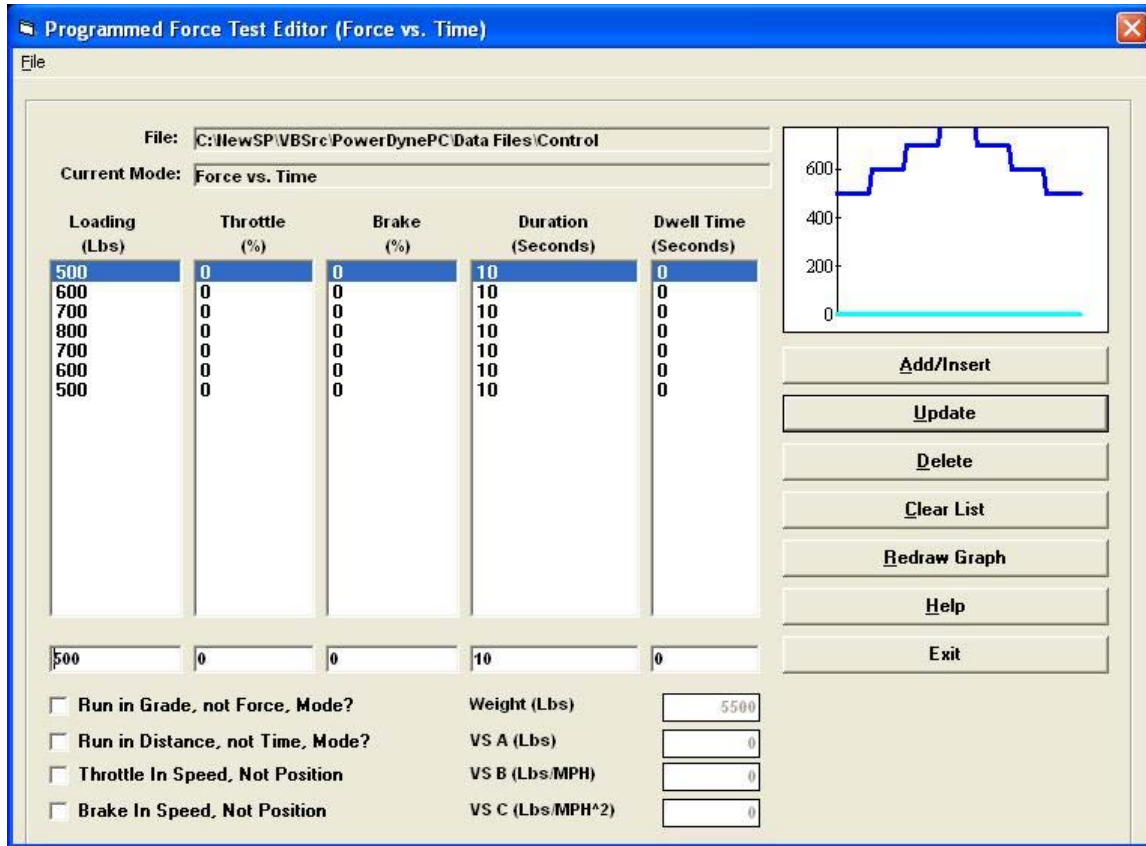


Programmed Force Test Editor Menu

Profiles may be read, written and imported when using this menu. The following is a list of menu-items that the operator has access to along with a description on what they are used for:

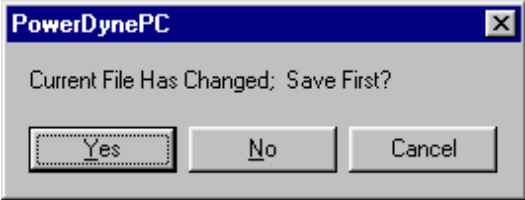Menu	Description
New	<p>Clears out any profiles, so that the operator can enter in a new one.</p> <p>If there is a profile loaded and changes have been made then when the operator tries to load a new one, the following prompt will be displayed.</p>  <p>If the operator presses “Yes” then any changes made to a</p>

profile will get save away before a new profile is created. If the operator presses the “**No**”, then any changes made will not get saved away. If the operator presses “**Cancel**” then the prompt will disappear.


After the operator presses the “New” button and any previously loaded profiles have been saved away or not then a blank profile will be loaded and the screen will look as follows:


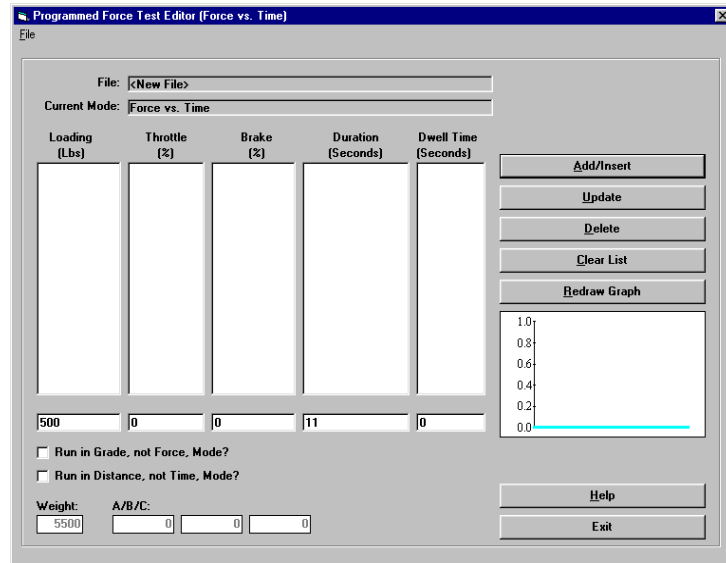



Import

Imports profiles from a .TXT file.

When the operator selects this menu item then the following screen will display, prompting the operator the name of the import file:

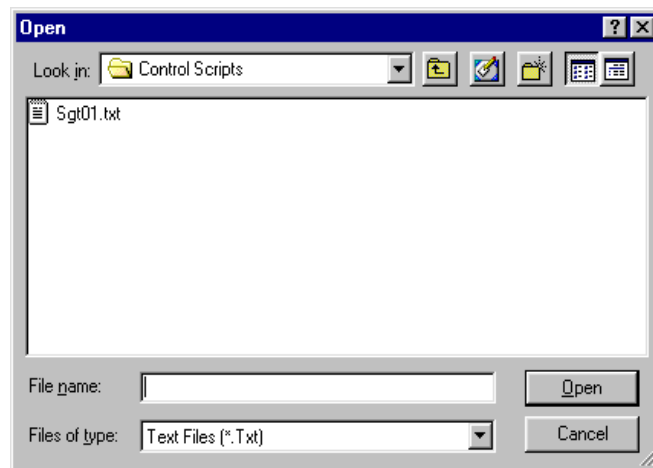
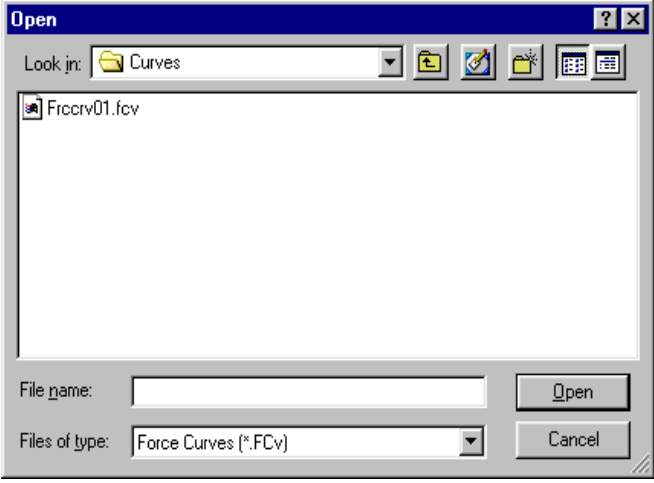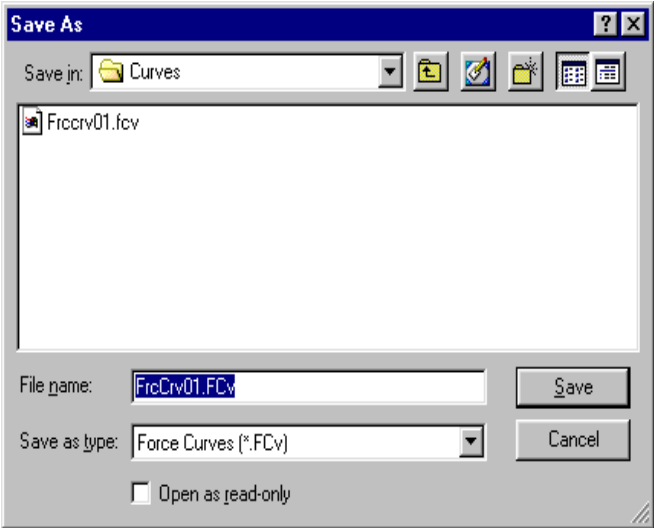
<p>Load</p>	<p>Loads a profile.</p> <p>When the operator selects this menu item then the following screen will display prompting the operator for the name of a previously saved away profile:</p> 
<p>Save</p>	<p>Saves a profile.</p>
<p>Save As</p>	<p>Saves a profile to whatever file that the operator wants to save it to.</p> <p>When the operator selects this menu item, then the following screen will display prompting the operator for the name they want to save the profile under:</p> 

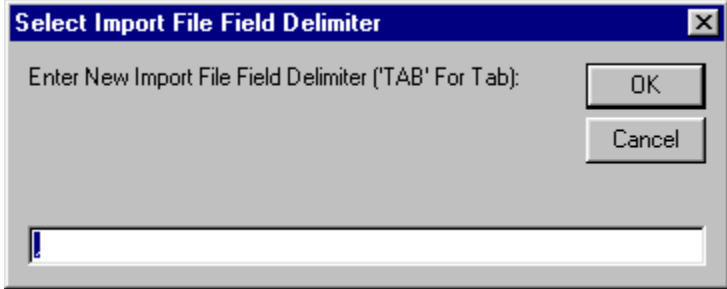Change Import Delimiter	<p>Change the delimiter that appears between values of the import file.</p> 
Exit	Close out of this screen.

Programmed Force Editor Screen explanation:

The following attempts to explain the screen layout and what purpose the fields serve on the screen.

Field/Button	Description
File	Whenever the operator loads a profile, the full path and filename will appear in this field.
Current Mode	<p>This displays to the operator the mode that the Programmed Force Test will operate in, the possible modes of operator are:</p> <ul style="list-style-type: none"> ▪ Force Versus Time ▪ Grade Versus Time ▪ Force Versus Distance ▪ Grade Versus Distance
Loading (LBS)/ Grade (%)	This is the first column of the data point of the profile and represents the amount of loading that gets applied and can be expressed as either a force or as a grade. When the operator checks the checkbox labeled “Run In Grade, Not In Force Mode”, then the load that gets applied is in terms of Grade. If it is unchecked then the force applied is expressed in terms of force.
Throttle (%) / MPH	This is the second column of the data point of the profile and represents the amount of throttle to apply if there is an integrated throttle controller. When an existing profile is loaded, the value will be set to “0”, and will not affect the functioning

	<p>of the script. If a value is entered and an optional throttle controller is connected, then the vehicle's throttle will be set to the specified position as a percentage.</p> <p>If "Throttle In Speed, Not Position" is checked, then this column is taken to be speed targets for the throttle controller. A speed target of "0" will make the throttle release.</p>
Brake (%) / MPH	<p>This is the third column of the data point of the profile and represents the amount of throttle to apply if there is an integrated brake controller. When an existing profile is loaded, the value will be set to "0", and will not affect the functioning of the script. If a value is entered and an optional brake controller is connected, then the vehicle's brake will be set to the specified position as a percentage.</p> <p>If "Brake In Speed, Not Position" is checked, then this column is taken to be speed targets for the brake controller. A speed target of (say) "100" will make the brake controller release.</p>
Duration (Seconds)/ Distance (Feet)	<p>This is the fourth column of the data point of the profile and represents when the loading is applied, The loading can either be a function of distance or a function of time. By default, the loading will be a function of time. To Change to distance mode, select the checkbox on this screen labeled "Run In Distance, Not Time Mode". When this checkbox is selected, the 4th column will change to read "Distance" and each entry in that column will represent a mileage.</p>
Dwell Time (Seconds)	<p>In by-distance mode, the time spent at a point at zero speed can be limited by specifying a dwell time for that point, in seconds.</p>
Run in Grade, not force mode	<p>This is a checkbox that the operator can use to specify if the loading to apply will be in terms of Force or Grade. If the checkbox is unchecked then the loading will be in terms of force, however if it is checked then the loading will be in terms of grade – this can be used to simulate driving on a specific piece of road.</p> <div style="background-color: #e0e0e0; padding: 10px; margin-top: 10px;"> <p>Note</p> <p>When running in terms of grade, then the operator will be prompted for the weight of the vehicle being tested along with the ABC power coefficient.</p> </div>

Run In Distance, Not Time Mode	This is a checkbox that the operator can use to specify if the load being applied will be a function of distance or time. If the checkbox is unchecked then the loading will be a function of time, however if it is checked then the loading applied will be a function of time.
Weight	The weight of the vehicle. <div style="background-color: #e0e0e0; padding: 5px; border: 1px solid #ccc;"> <p>Note</p> <p>This needs to be known when the load being applied is in terms Grade and not Force, in other words the checkbox “Run In Grade, Not Force Mode” is checked.</p> </div>
A/B/C	These are the ABC power coefficients that represent the wind resistance exerted on a moving vehicle. <div style="background-color: #e0e0e0; padding: 5px; border: 1px solid #ccc;"> <p>Note</p> <p>This needs to be known when the load being applied is in terms Grade and not Force, in other words the checkbox “Run In Grade, Not Force Mode” is checked.</p> </div>
Add/Insert	This adds a new row of the Profile.
Update	This updates a row of the Profile.
Delete	This deletes a row of the Profile.
Clear List	This clears the entire Profile.
Redraw Graph	This redraws the graph after rows have been updated
Help	Displays help that explains the use of “ Run in Grade, not force mode ” and “ Run In Distance, Not Time Mode ”.

Exit	Closes out of the screen
------	--------------------------

The points in these profiles specifies a target loading value, and the number of seconds for which the specified loading should be maintained. Files may be read, written and imported using the related **“File”** menu items. Creating a new file or editing an existing file is a simple process outlined below. The **“Throttle (%)”** column has been added to support scripted loading scenarios using the integrated throttle controller. When any existing script file is loaded, the **“Throttle (%)”** values will show up as **“0”**, and will not affect the functioning of the script. If a value is entered, and the optional throttle controller is connected, the vehicle’s throttle will be controlled to the specified position (in %).

To Create A New Profile

- Select **“New”** from the **“File”** menu.
- Click in the box under the **“Loading (Lbs)”** or **“Grade (%)”** column, and enter the loading force you wish to apply.
- Click in the box under the **“Duration (Seconds)”** or **“Distance (Feet)”** column, and enter the number of seconds for which you wish the load to be applied.
- Click the **“Add/Insert”** button.
- Repeat as necessary.

To Edit An Existing Profile


- Select **“Load”** from the **“File”** menu, and select a file to load.
- Edit the existing profile data as described above.

Programmed Speed

This test allows the operator to apply a time-based speed control to the vehicle.

Note

This test is very similar to the “**Programmed Force Test**”, except that the systems speed is controlled, rather than the applied loading force.

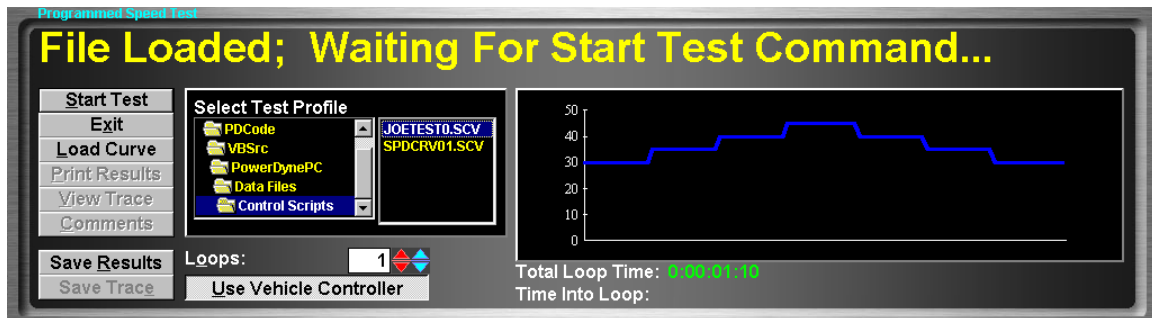

Purpose

The Programmed Speed Test can be used for durability or performance testing, or to simulate real-world loading profiles.

Intended Test Procedure

This test has a fixed termination time, when the last data point has been processed for the last loop through the selected test profile. The general testing procedure is outlined below.

- Select a test profile using the “**Select Test Profile**” directory- and file-picking boxes.
- Enter the number of loops through the selected profile that you wish to execute.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- A driver should start driving the vehicle at the desired testing speed.
- The “**Start Test**” button is clicked.
- The vehicle is driven until the test completes, while the load on the vehicle is controlled by the selected test profile.
- When the last data point has been processed for the last time through the selected profile, the test terminates.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments

about the test session, is saved to the application's database. For this test type, the following additional information is saved as part of the final test results record:

- (None)

If the "**Save Trace**" check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the "**Trace Data Collection Speed**" screen found under the database menu.

Note

Trace data cannot be saved unless the "**Save Results**" check box is checked along with the "**Save Trace**" check box..

Special Considerations for This Test

None.

Programmed Speed Editor

This screen allows the operator to edit/create time-based speed control profiles and is very similar in operation to the Programmed Force Editor.

File: C:\PDCCode\WBsrc\PowerDynePC\Data Files\Control Scripts\Spdcrv01.scv

Speed (MPH)	Throttle (%)	Brake (%)	Duration (Seconds)
30	0	0	10
35	0	0	10
40	0	0	10
45	0	0	10
40	0	0	10
35	0	0	10
30	0	0	10


Buttons: Add/Insert, Update, Delete, Clear List, Redraw Graph

Graph: A line graph showing speed (MPH) on the y-axis (0 to 50) versus time on the x-axis. The profile starts at 30 MPH, steps up to 35 MPH, then to 40 MPH, then to 45 MPH, then down to 40 MPH, then to 35 MPH, and finally to 30 MPH.

Input fields: Speed: 30, Throttle: 0, Brake: 0, Duration: 10

PRO Script Test

This test allows the operator to play back a pre-defined loading script, with more advanced control options than the programmed force or speed routines.

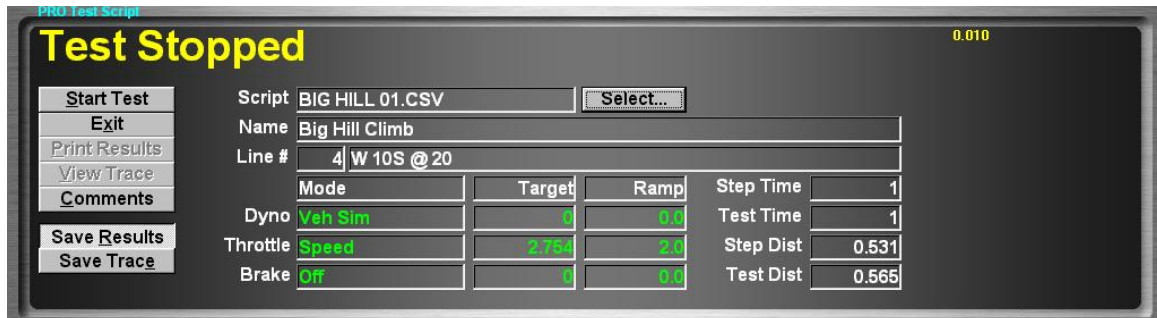

Purpose

The PRO Script Test can be used for durability or performance testing, or to simulate real-world loading profiles.

Intended Test Procedure

This test has a fixed termination time, when the last script point has been processed; however, the duration and/or distance covered during testing may not be defined, since various logical control options are available. The general testing procedure is outlined below.

- Select a test profile using the “**Select Script**” file-picking box.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- A driver should start driving the vehicle at the desired testing speed.
- Be aware that PRO Scripts can include steps that wait for the operator click a “Continue” button, which will only appear on this screen when required.
- The “**Start Test**” button is clicked.
- The vehicle is driven until the test completes, while the load on the vehicle is controlled by the selected test profile.
- When the last data point has been processed for the last time through the selected profile, the test terminates.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database. For this test type, the following additional information is saved as part of the final test results record:

- (None)

If the “**Save Trace**” check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the “**Trace Data Collection Speed**” screen found under the database menu.

Note


Trace data cannot be saved unless the “**Save Results**” check box is checked along with the “**Save Trace**” check box..

Special Considerations for This Test

None.

PRO Script Editor

This screen allows the operator to create/edit scripts for use in the PRO Script Test.

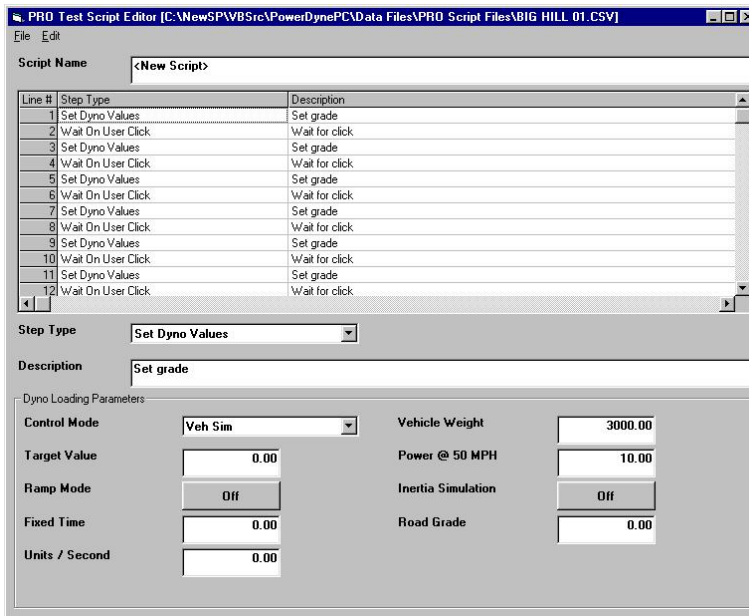

Basic notes:

- 1) The scripting logic provided allows the use of up to 50 general purpose variables.
- 2) When scripts are executed, one line of the script is processed every 0.01 seconds (100 lines / second). This prevents execution of a script from interfering with the control functions of the dynamometer control software.
- 3) While you can assign a description to each line in a script, the description may not be visible to the operator for most commands, since execution passes through each script line very quickly. Concentrate on assigning good descriptions to lines in your script that are of the various “Skip On xxx” types, since scripts will usually be waiting (looping) on such a command during execution.
- 4) The scripting logic provided does not include explicit LOOP commands. Rather, looping is implemented using the various “Skip On xxx” commands and the “Go To Line” command. For example, to implement a counted loop with 5 iterations:
 - a) (Line 1) Set Variable (1, =0)
 - b) <Control commands in your loop...>
 - c) Increment Variable (1, +1)
 - d) Skip On Variable (1, >= 5)
 - e) Go To Line (1)

f) End Of Script

- 5) The normal Windows Cut/Copy/Paste commands all work as usual, but on a line-by-line basis – these commands operate on all selected lines – you can select multiple lines by holding down the “Shift” key while scrolling through the list, or by holding down the “Shift” key and clicking on a second point in the list (to define a range).
- 6) You can Insert/Delete lines using the “Insert” and “Delete” options on the “Edit” menu.
- 7) When you insert or delete a line or a range of lines, the line number in all “Go To Line” commands in the script will be adjusted as well as possible, but it is still possible for the line numbers to be disturbed.
- 8) If you paste a block of lines, the line numbers in “Go To Line” commands in the pasted-in block will be adjusted as well as possible, but it is still possible for the line numbers to be disturbed.

The PRO Script test scripts currently support the following command types.

Set Dyno Load Controller Values (load, ramping, etc)

Set Throttle Controller Values (load, ramping, etc)

Set Brake Controller Values (load, ramping, etc)

Set Variable (to constant)

Increment Variable (by constant)

Skip Next Command On

Step Time (> constant)

Test Time (> constant)

Step Distance (> constant)

Test Distance (> constant)

Variable Value (<= constant, >= constant, either)

System Channel Value (<= constant, >= constant, either)


Wait For User Click

Go To Line (#)

End Script

Detailed information on each command type is given below.

Set Dyno Load Controller Values (load, ramping, etc)

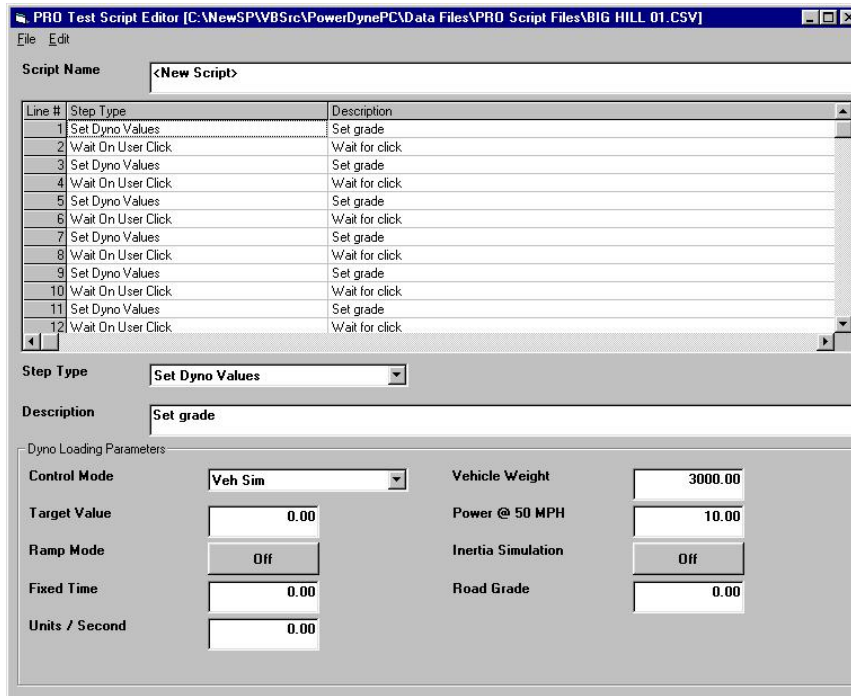

Control Mode

Specify the control mode for the dynamometer (off, manual, force, power, speed, acceleration, engine RPM, vehicle simulation).

Target Value

For all modes except vehicle simulation, the target loading value for the selected mode.

Ramp Mode

For all modes except vehicle simulation, the ramping mode to use for the selected mode. Fixed time means all loading changes should be accomplished in the number of seconds specified, while Units/Second means to ramp from the current value to the specified value at a rate of xxx units per second.

Fixed Time

The number of seconds to use in fixed-time ramping mode (if selected).

Units/Second

The number of units to ramp by per second (if selected).

Vehicle Weight

For vehicle simulation mode only, the vehicle weight to use for inertial and road grade loading.

Power @ 50 MPH

For vehicle simulation mode only, establishes the vehicle drag loading curve by specifying one point on that curve.


Inertia Simulation

For vehicle simulation mode only, enables or disables simulation of the vehicle's weight. If disabled, the vehicle loading will be based on the dynamometer's weight.

Road Grade

For vehicle simulation mode only, specifies the road grade to be used in loading the vehicle, in percent.

Set Throttle Controller Values (load, ramping, etc)

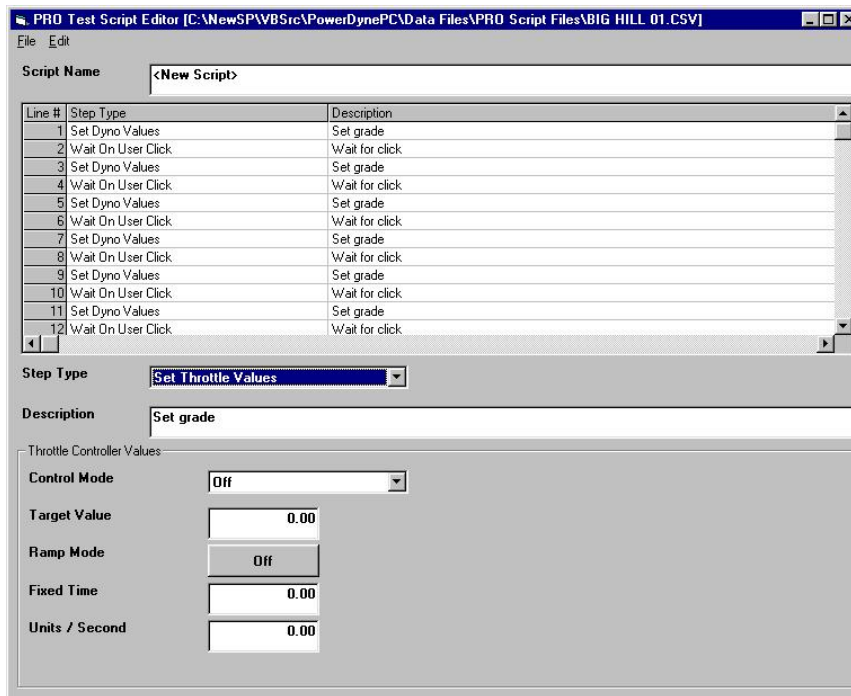

Control Mode

Specify the control mode for the throttle controller (off, position, force, power, speed, acceleration, engine RPM, engine torque).

Target Value

The target loading value for the selected mode.

Ramp Mode

The ramping mode to use for the selected mode. Fixed time means all loading changes should be accomplished in the number of seconds specified, while Units/Second means to ramp from the current value to the specified value at a rate of xxx units per second.


Fixed Time

The number of seconds to use in fixed-time ramping mode (if selected).

Units/Second

The number of units to ramp by per second (if selected).

Set Brake Controller Values (load, ramping, etc)

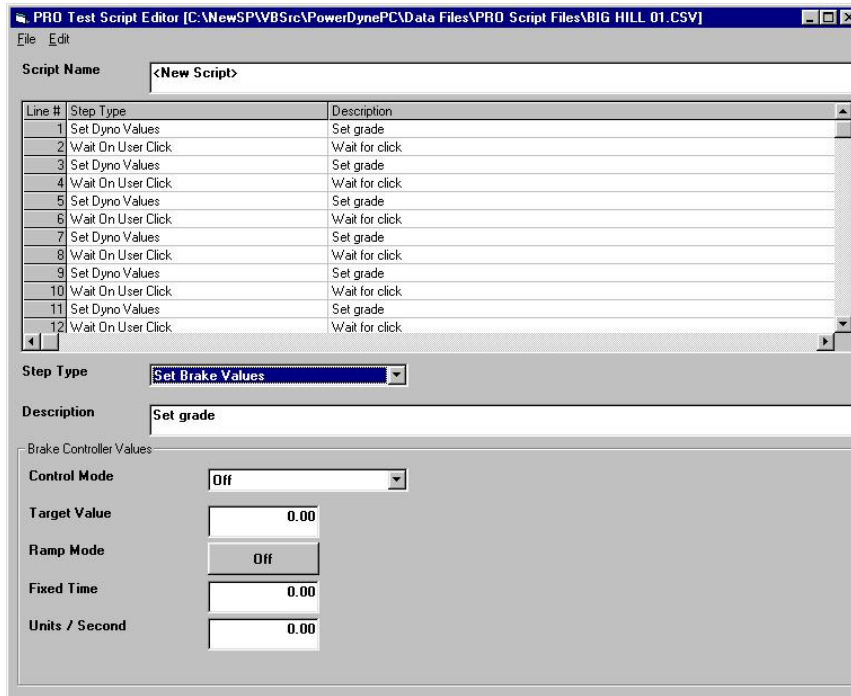

Control Mode

Specify the control mode for the brake controller (off, position, force, power, speed, acceleration).

Target Value

The target loading value for the selected mode.

Ramp Mode

The ramping mode to use for the selected mode. Fixed time means all loading changes should be accomplished in the number of seconds specified, while Units/Second means to ramp from the current value to the specified value at a rate of xxx units per second.


Fixed Time

The number of seconds to use in fixed-time ramping mode (if selected).

Units/Second

The number of units to ramp by per second (if selected).

Set Variable (to constant)

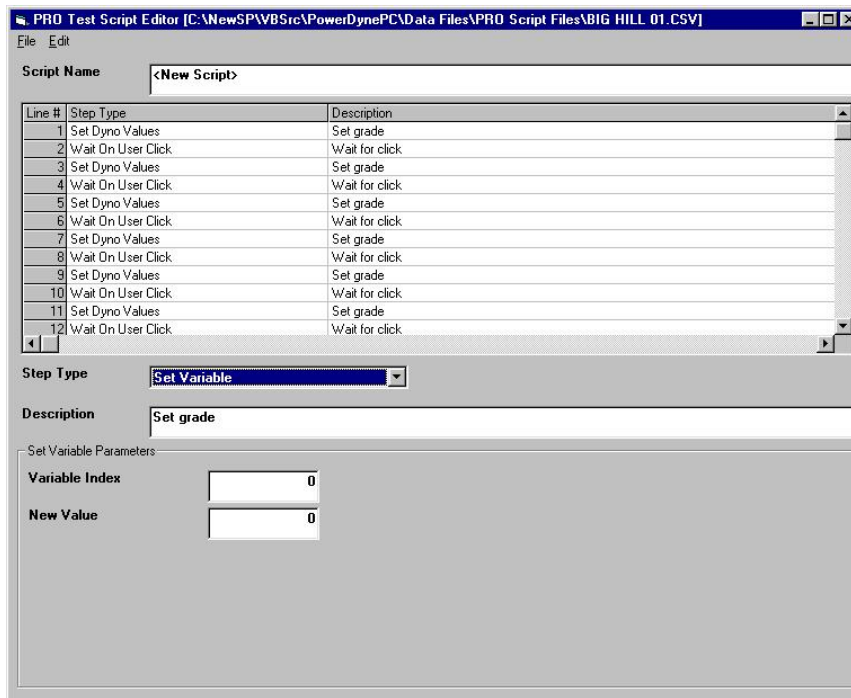


Variable Index

Specifies which of the available general purpose variables to affect.

New Value

Specifies the value that the variable should be set to.

Increment Variable (by constant)

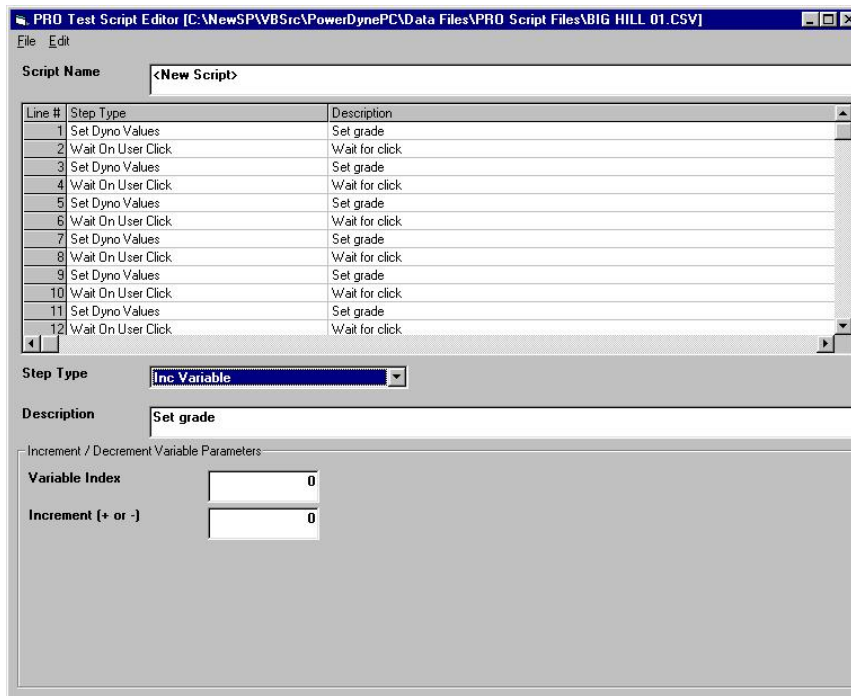


Variable Index

Specifies which of the available general purpose variables to affect.

Increment

Specifies the value that should be added to the variable (can be + or -).


Skip Next Command On Step Time (> constant)

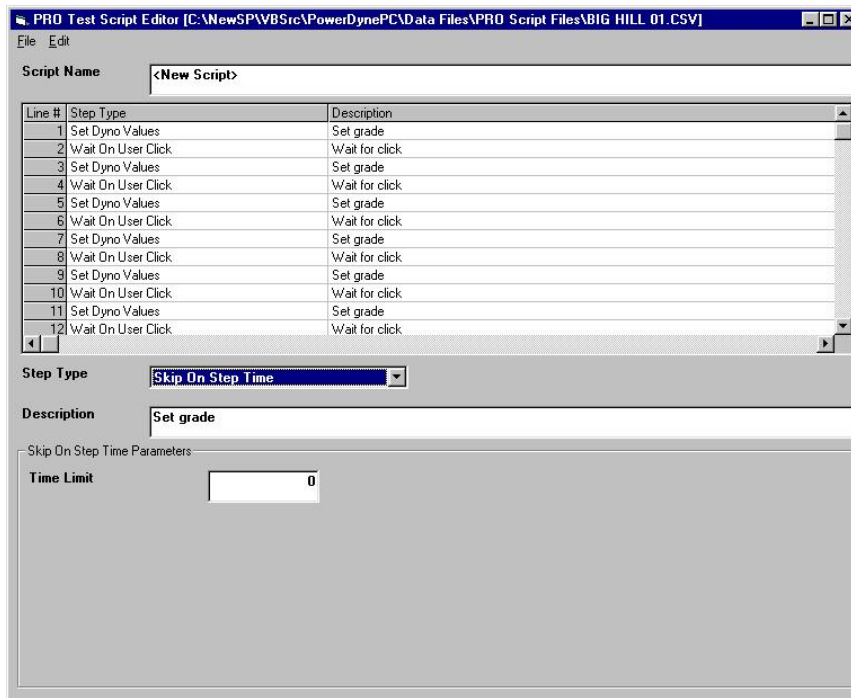

Time Limit

The number of seconds into the current step that should cause execution to skip the next line of the script.


Skip Next Command On Test Time (> constant)

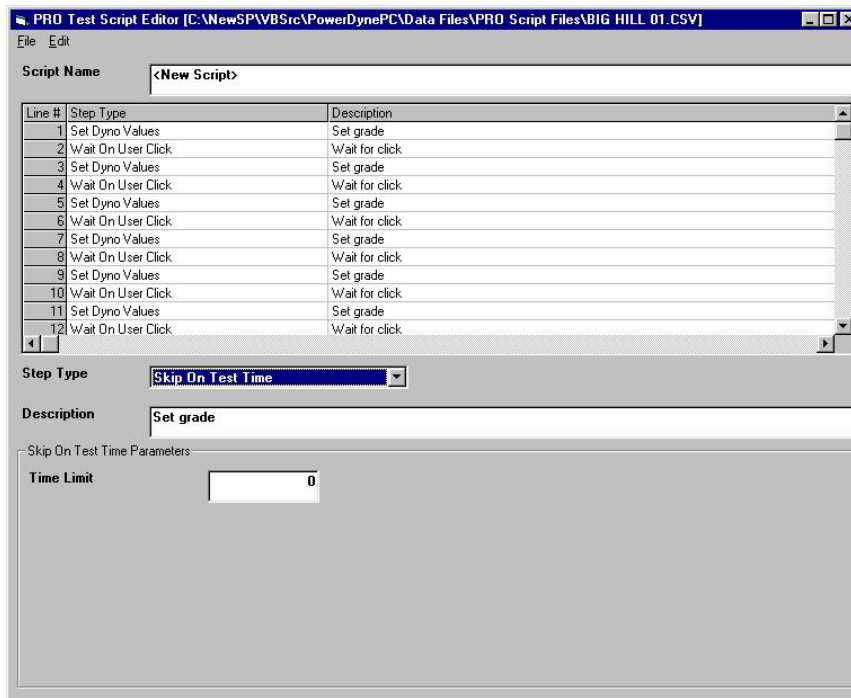

Time Limit

The number of seconds into the current test that should cause execution to skip the next line of the script.


Skip Next Command On Step Distance (> constant)

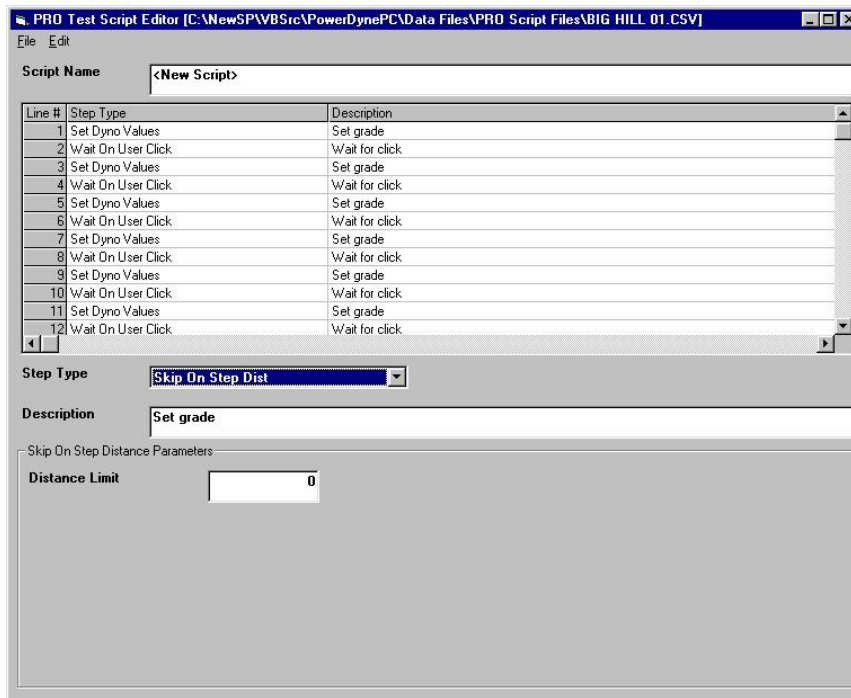

Distance Limit

The distance into the current step that should cause execution to skip the next line of the script.


Skip Next Command On Test Distance (> constant)

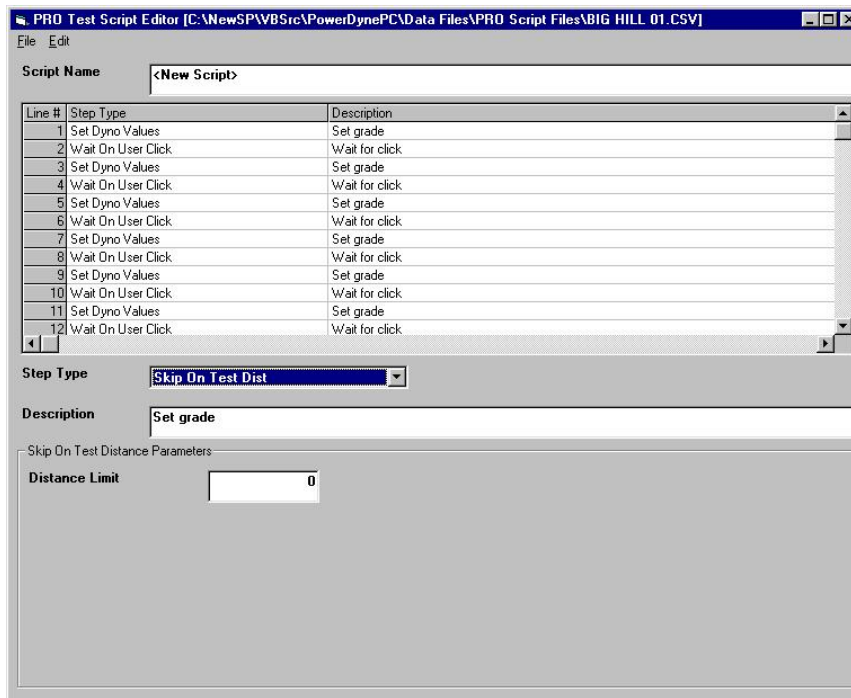

Distance Limit

The distance into the current test that should cause execution to skip the next line of the script.

Skip Next Command On Variable Value (<= constant, >= constant, either)

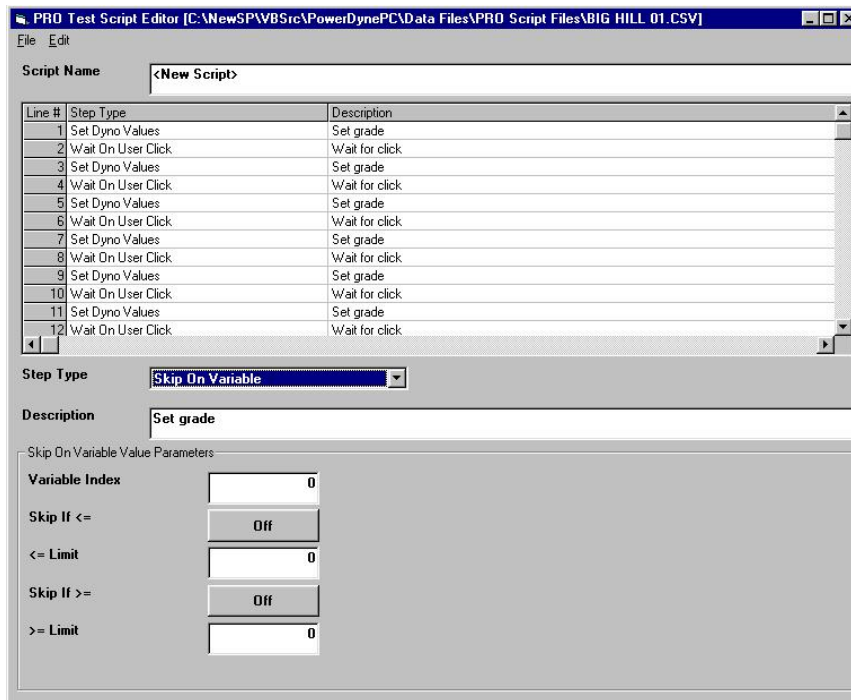

Variable Index

Identifies which of the available general purpose variables should be used for this comparison.

Skip If <=

If enabled, the variable will be checked against the "<= Limit" value.

<= Limit

If the variable's value is <= this value, execution will skip the next line in the script.


Skip If >=

If enabled, the variable will be checked against the ">= Limit" value.

>= Limit

If the variable's value is >= this value, execution will skip the next line in the script.

Skip Next Command On System Channel Value (\leq constant, \geq constant, either)

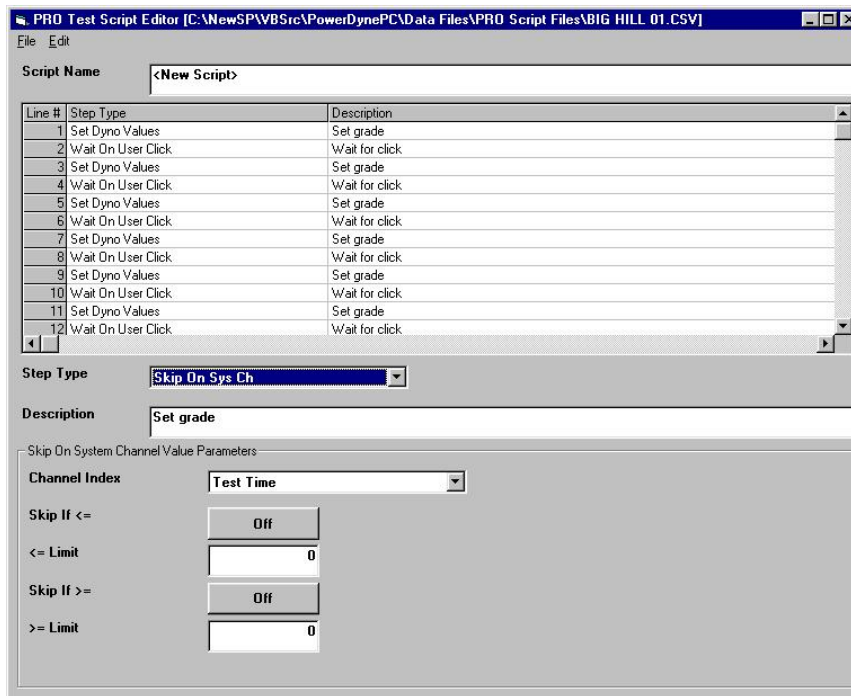

Channel Index

Identifies which of the available system channels should be used for this comparison.

Skip If \leq

If enabled, the channel will be checked against the " \leq Limit" value.

\leq Limit

If the channel's value is \leq this value, execution will skip the next line in the script.


Skip If \geq

If enabled, the channel will be checked against the " \geq Limit" value.

\geq Limit


If the channel's value is \geq this value, execution will skip the next line in the script.

Wait For User Click

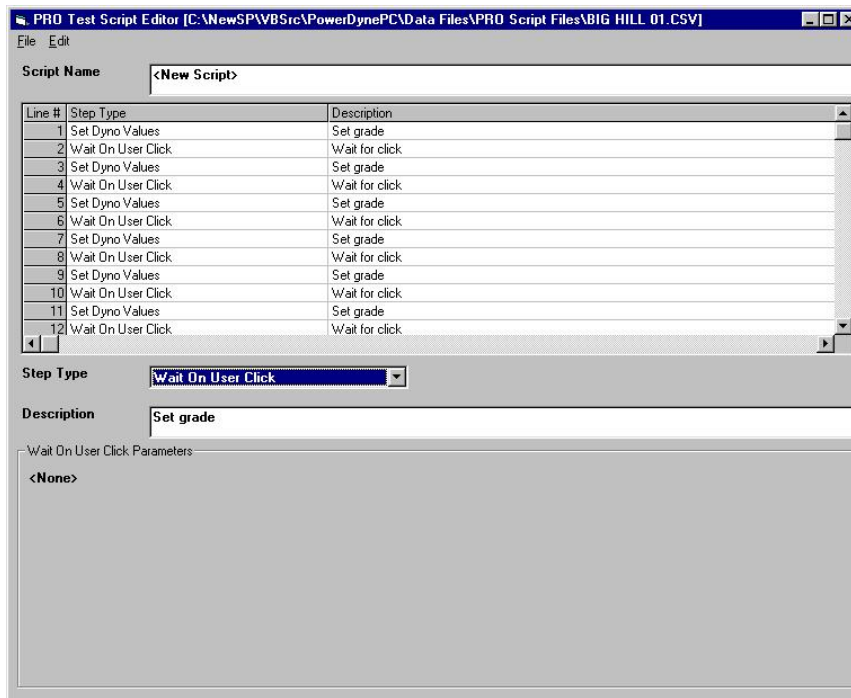

This command displays a button on the scripting test display, and waits for the operator to click on that button. Useful for points in a script where the operator is required to perform some action.


Go To Line (#)

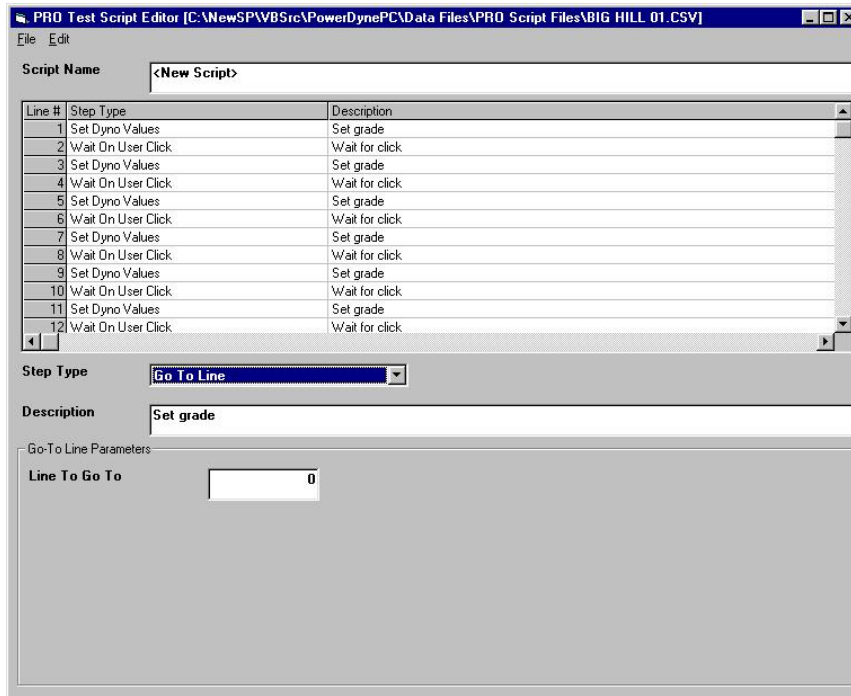

Causes script execution to immediately jump to the specified line number.

Useful for looping, and also conditional script flow control.


End Script

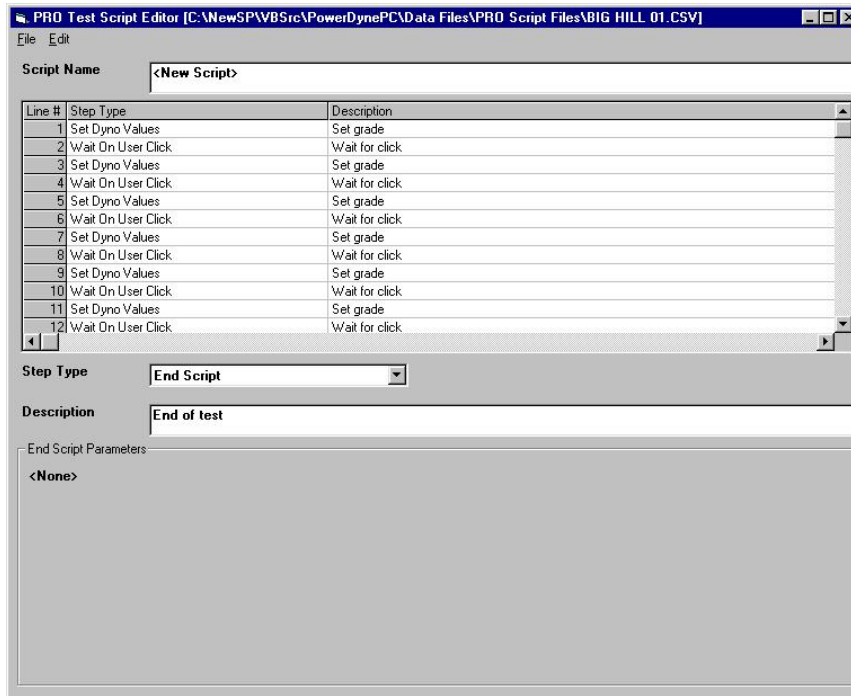

This command causes script execution to terminate immediately.

Quarter Mile Sprint

This test allows the operator to simulate a 1/4-mile sprint race with the vehicle.

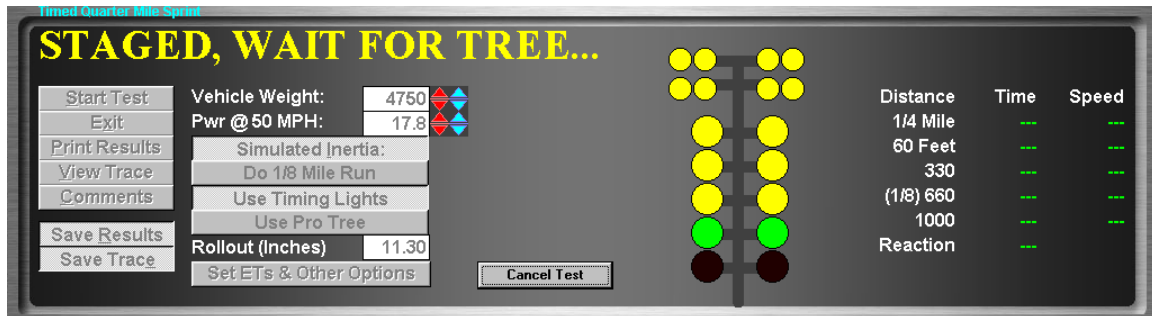

Purpose

The Timed Quarter Mile Sprint test allows the operator to simulate a 1/4-mile sprint race on the dynamometer. The results of these tests are generally within 0.1 to 0.2 seconds of the actual times recorded by a vehicle at a drag strip (if accurate vehicle loading parameters are used).

Intended Test Procedure

This test has a fixed termination time, when the vehicle has traveled 1/4 mile. The general testing procedure is outlined below.

- The “**Vehicle Weight**” field will default to the weight entered for the vehicle currently selected for testing. The operator may change this weight if desired.
- The “**Pwr @ 50 MPH**” field will default to the value entered for the vehicle currently selected for testing. The operator may change this value if desired.
- The “**Simulated Inertia**” check box determines whether inertia simulation will be used or not. Mustang Dynamometer recommends that this option always be used.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- Optionally select use of the timing lights (tree), use of pro tree timing, and 1/4 or 1/8th mile track lengths.
- Specify your vehicle’s roll out distance (used for reaction timing). If you stage very deeply, this value can approach 0.00, but can not be 0.00.
- Use the “**Set Ets & Other Options**” button to access an additional settings form (described below).
- The “**Start Test**” button is clicked.
- The vehicle is accelerated as quickly as possible through a distance of 1/4 mile. Test timing begins as soon as the vehicle’s speed exceeds 0.1 MPH.
- The test terminates when the vehicle has traveled 1/4 mile. The “**Stop Test**” button may be used to terminate a test you do not wish to finish.

- Use the “**Cancel Test**” button to cancel a test when the tree is showing.
- Once the test is complete, the dynamometer’s PAU is used to stop the system, to avoid wear to the vehicle’s brakes.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database.

For this test type, the following additional information is saved as part of the final test results record:

- Time to 1/4 mile, 60 feet, 100, 200, 300 and 400 yards.
- Speed at 1/4 mile, 60 feet, 100, 200, 300 and 400 yards.
- Reaction Time

If the “**Save Trace**” check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the “**Trace Data Collection Speed**” screen found under the database menu.

Note

Trace data cannot be saved unless the “**Save Results**” check box is checked along with the “Save Trace” check box.

Special Considerations for This Test

- Do not let the vehicle roll until you are read to start the test.
- As soon as the vehicle starts rolling, the test will start timing.
- Drive like you are at the drag strip (including being very careful!)

Options Under the “Set Ets & Other Options” Button

This form lets you set various options for the ¼ mile test routine.



Your ET:	15.50
Staged->Start Delay, Min:	1.00
Staged->Start Delay, Max:	1.50
Use Opponent:	<input checked="" type="checkbox"/>
Opponent's ET:	13.50
Use Left Side (Else Right)	<input checked="" type="checkbox"/>

OK Cancel

Your ET

Your estimated ¼ mile ET, used for staggered starts on the timing lights.

Staged->Start Delay, Min

Staged->Start Delay, Max

Used to set the minimum and maximum delays from when you start the test until the tree starts turning on the lights.

Use Opponent

If checked, the opposite side of the tree will be driven appropriately for the opponent you have described.

Opponent's ET


Your opponent's estimated ¼ mile ET, used for staggered starts on the timing lights.

Use Left Side (Else Right)

If checked, you should follow the left side of the tree, otherwise you should follow the right side of the tree.

Standing Start Acceleration

This test allows the operator to simulate a 0-60 type standing start acceleration run with the vehicle.

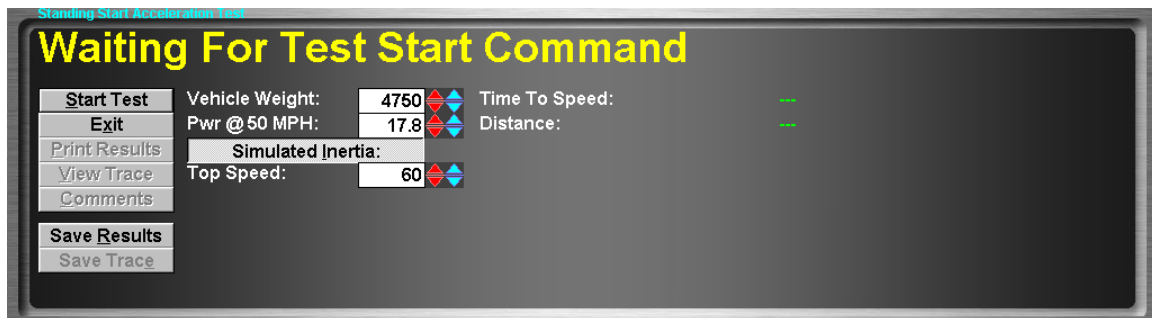

Purpose

This test allows the operator to simulate a 0-60 type standing start acceleration run with the vehicle.

Intended Test Procedure

This test has a fixed termination time, when the vehicle has reached the specified top speed. The general testing procedure is outlined below.

- The “**Vehicle Weight**” field will default to the weight entered for the vehicle currently selected for testing. The operator may change this weight if desired.
- The “**Pwr @ 50 MPH**” field will default to the value entered for the vehicle currently selected for testing. The operator may change this value if desired.
- The “**Simulated Inertia**” check box determines whether inertia simulation will be used or not. Mustang Dynamometer recommends that this option always be used.
- The “**Top Speed**” value should be entered, typically 50, 60 or 100 MPH.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- The “**Start Test**” button is clicked.
- The vehicle is accelerated as quickly as possible to the specified top speed. Test timing begins as soon as the vehicle’s speed exceeds 0.1 MPH.
- The test terminates when the vehicle reaches the specified top speed. The “**Stop Test**” button may be used to terminate a test you do not wish to finish.
- Once the test is complete, the dynamometer’s PAU is used to stop the system, to avoid wear to the vehicle’s brakes.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database.

For this test type, the following additional information is saved as part of the final test results record:

- Top speed accelerated to.
- Time required to reach specified top speed.

If the “**Save Trace**” check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the “**Trace Data Collection Speed**” screen found under the database menu.

Note


Trace data cannot be saved unless the “**Save Results**” check box is checked along with the “**Save Trace**” check box.

Special Considerations for This Test

- Do not let the vehicle roll until you are read to start the test.
- As soon as the vehicle starts rolling, the test will start timing.
- Drive like you are at the drag strip (including being very careful!

Passing Acceleration

This test allows the operator to simulate a 50-70 type passing acceleration run with the vehicle.

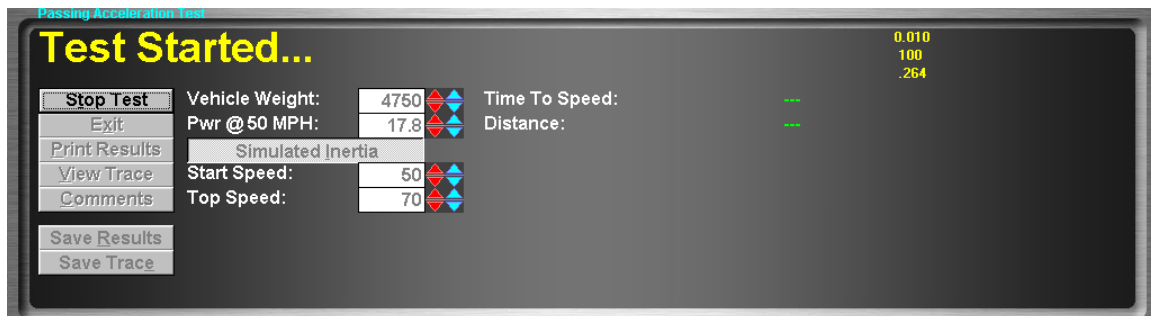

Purpose

This test allows the operator to simulate a 50-70 type passing acceleration run with the vehicle.

Intended Test Procedure

This test has a fixed termination time, when the vehicle has reached the specified top speed. The general testing procedure is outlined below.

- The “**Vehicle Weight**” field will default to the weight entered for the vehicle currently selected for testing. The operator may change this weight if desired.
- The “**Pwr @ 50 MPH**” field will default to the value entered for the vehicle currently selected for testing. The operator may change this value if desired.
- The “**Simulated Inertia**” check box determines whether inertia simulation will be used or not. Mustang Dynamometer recommends that this option always be used.
- The “**Start Speed**” value should be entered, typically 30 or 50 MPH.
- The “**Top Speed**” value should be entered, typically 50 or 70 MPH.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- The “**Start Test**” button is clicked.
- The vehicle is driven just below the starting speed, and then accelerated as quickly as possible to the specified top speed. Test timing begins as soon as the vehicle’s speed exceeds the specified starting speed.
- The test terminates when the vehicle reaches the specified top speed. The “**Stop Test**” button may be used to terminate a test you do not wish to finish.
- Once the test is complete, the dynamometer’s PAU is used to stop the system, to avoid wear to the vehicle’s brakes.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database.

For this test type, the following additional information is saved as part of the final test results record:

- Starting speed.
- Top speed.
- Time required to accelerate from the specified starting speed to the specified top speed.

If the “**Save Trace**” check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the “**Trace Data Collection Speed**” screen found under the database menu.

Note


Trace data cannot be saved unless the “**Save Results**” check box is checked along with the “**Save Trace**” check box.

Special Considerations for This Test

- Do not let the vehicle roll until you are read to start the test.
- As soon as the vehicle exceeds the specified starting speed, the test will start timing.
- Drive like you are at the drag strip (including being very careful)!

200-Yard Roll-On

This test allows the operator to simulate a 200-yard roll-on acceleration run with the vehicle.

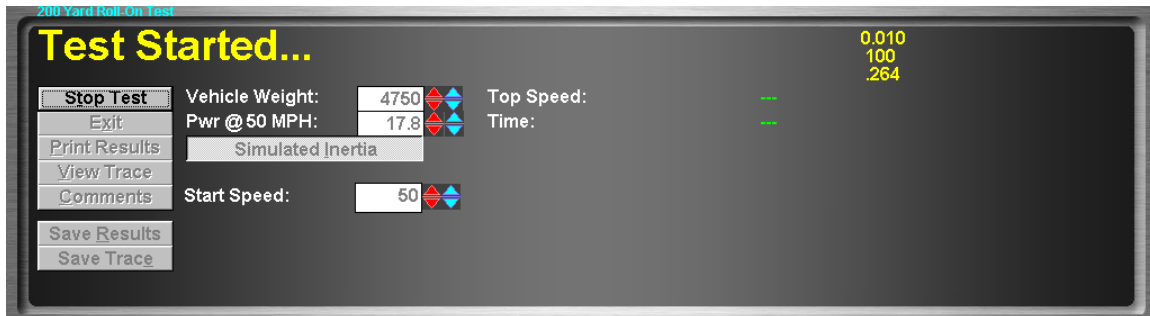

Purpose

This test allows the operator to simulate a 200-yard roll-on acceleration run with the vehicle. (This test is more popular with motorcycle testers than with automotive testers.)

Intended Test Procedure

This test has a fixed termination time, when the vehicle has traveled 200 yards after reaching the specified starting speed. The general testing procedure is outlined below.

- The “**Vehicle Weight**” field will default to the weight entered for the vehicle currently selected for testing. The operator may change this weight if desired.
- The “**Pwr @ 50 MPH**” field will default to the value entered for the vehicle currently selected for testing. The operator may change this value if desired.
- The “**Simulated Inertia**” check box determines whether inertia simulation will be used or not. Mustang Dynamometer recommends that this option always be used.
- The “**Start Speed**” value should be entered, typically 50 or 60 MPH.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- The “**Start Test**” button is clicked.
- The vehicle is driven just below the starting speed, and then accelerated as quickly as possible to cover 200 yards. Test timing begins as soon as the vehicle’s speed exceeds the specified starting speed.
- The test terminates when the vehicle travels 200 yards after reaching the specified starting speed. The “**Stop Test**” button may be used to terminate a test you do not wish to finish.
- Once the test is complete, the dynamometer’s PAU is used to stop the system, to avoid wear to the vehicle’s brakes.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database.

For this test type, the following additional information is saved as part of the final test results record:

- Starting speed.
- Time required to cover 200 yards.
- Speed at 200 yards after starting speed is reached.

If the “**Save Trace**” check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the “**Trace Data Collection Speed**” screen found under the database menu.

Note

Trace data cannot be saved unless the “**Save Results**” check box is checked along with the “**Save Trace**” check box.

Special Considerations for This Test

- Do not let the vehicle roll until you are read to start the test.
- As soon as the vehicle exceeds the specified starting speed, the test will start timing.
- Drive like you are at the drag strip (including being very careful)!

Drivers Trace (IM240/FTP/etc)

This test allows the operator to perform a (non-certified) IM-240/FTP/etc. type transient emissions test.



Note

Please note that the screen contains two sections, the first section is the Big Window that only displays a certain number of second of the drivers trace which can be configured by selecting from the “Options” menu, the menu item “Show Time” and then selecting how many second the operator wants to display. The Second window displays the entire trace and can either be turned on or off by selecting from the “Options” menu the menu item “Show Whole Trace”.

Purpose

This test allows the operator to perform A (non-certified) IM-240/FTP/etc. type transient emissions test.

Intended Test Procedure

This test has a fixed termination time, when the vehicle has completed the emissions testing profile. The general testing procedure is outlined below.

- The “Vehicle Weight” field will default to the weight entered for the vehicle currently selected for testing. The operator may change this weight if desired.

- The “**Pwr @ 50 MPH**” field will default to the value entered for the vehicle currently selected for testing. The operator may change this value if desired.
- The “**Simulated Inertia**” check box determines whether inertia simulation will be used or not. Mustang Dynamometer recommends that this option always be used.
- The “**Loops**” field specifies how many times the loaded trace should be run.
- The “**—**” field shows how many times the loaded trace has been run.
- The “**Pause Test**” button can be used to pause testing – the throttle and brake actuator will be parked and the system will coast to a stop while paused, and will be used to resume speed and testing when un-paused.
- The desired emissions driving profile should be selected using the “**Load Trace**” option on the “**File**” menu.
- The desired display options should be selected using the entries on the “**Options**” menu.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- The “**Start Test**” button is clicked.
- The vehicle is driven so that the speed-indicating arrow stays between the two (2) blue lines, or very near the green line if the blue lines are not displayed. This test displays a speed profile that the driver is required to follow to perform the emissions test. The driver will find that driving to the displayed trace grows easier with practice.
- The test terminates when the vehicle completes the selected driving trace. The “**Stop Test**” button may be used to terminate a test you do not wish to finish.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database.

For this test type, the following additional information is saved as part of the final test results record:

- Emissions test specific data is recorded, including strip-chart data for each exhaust gas component, vehicle speed, and profile specified speed.

If the “**Save Trace**” check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the “**Trace Data Collection Speed**” screen found under the database menu.

Note




Trace data cannot be saved unless the “**Save Results**” check box is checked along with the “**Save Trace**” check box.

Special Considerations for This Test

- A non-integrated emissions analyzer may be used as an alternative to the optional integrated Andros 5-gas bench.

Drivers Trace Menu System

The following is a list of the menu item and a description of their functionality.

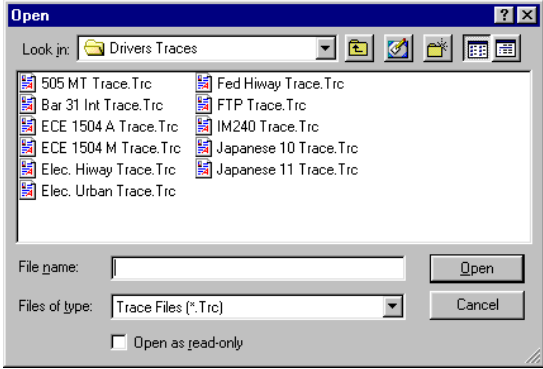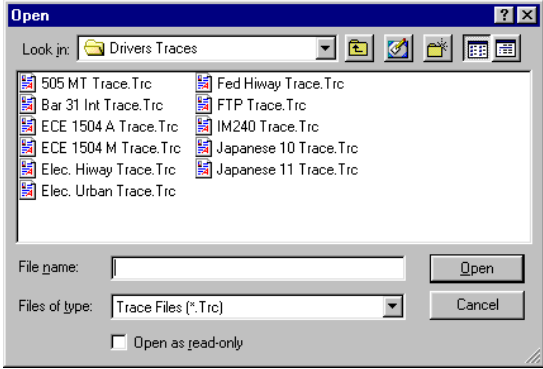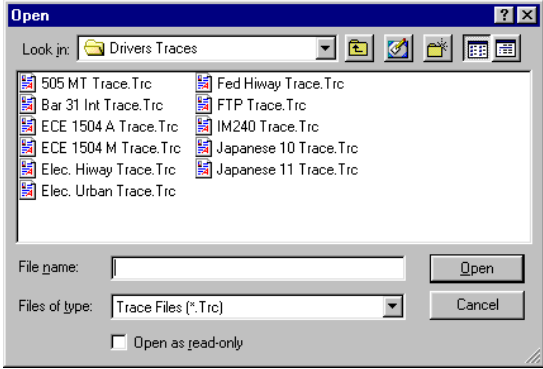Menu Item	Description						
File	<table border="1"> <thead> <tr> <th>Menu Item</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Load Trace</td> <td> <p>This option displays the following dialog that allows the operator to load a previously saved drivers trace.</p>  </td> </tr> <tr> <td>Exit</td> <td>Close out of the drivers trace.</td> </tr> </tbody> </table>	Menu Item	Description	Load Trace	<p>This option displays the following dialog that allows the operator to load a previously saved drivers trace.</p> 	Exit	Close out of the drivers trace.
Menu Item	Description						
Load Trace	<p>This option displays the following dialog that allows the operator to load a previously saved drivers trace.</p> 						
Exit	Close out of the drivers trace.						
Options	<table border="1"> <thead> <tr> <th>Menu Item</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Save Results</td> <td>When this menu item is selected then the test results will get saved away so that the operator can view and print them out using the “Drivers Trace Test Results Viewer”. If it is not selected then</td> </tr> </tbody> </table>	Menu Item	Description	Save Results	When this menu item is selected then the test results will get saved away so that the operator can view and print them out using the “ Drivers Trace Test Results Viewer ”. If it is not selected then		
Menu Item	Description						
Save Results	When this menu item is selected then the test results will get saved away so that the operator can view and print them out using the “ Drivers Trace Test Results Viewer ”. If it is not selected then						

		the test results do not get saved and therefore cannot be printed and viewed. When this menu item is selected the operator also has the ability to edit comments using the “ Comment Editor ”.
	Save Trace Data	When this menu item is selected then the trace results will get saved away so that the operator can view and print them out using the “ Graph Viewer ”.
	Show Shift Points	Displays the shift points in the drivers trace when selected.
	Show Error Lines	Displays the minimum and maximum error lines in the drivers trace when selected.
	Show Whole Trace	This will display the entire drivers trace when selected.
	Show Time Bars	Displays the vertical bars that indicate the portion of the total trace that the large graph window is currently showing will be displayed on the entire trace window when selected.
	Use Thick Lines	Draws the lines of the drivers trace thicker when selected.
	Show Time	The numbers of seconds of the driving trace to show in the big window.
	Demo Mode	Run the drivers trace automatically, this could be used for training purposes.
	Record Trace Values On Last (3) ADR Channels	If checked, then the last (3) ADR-2000 I/O board analog input channel values will be over-written with the target speed, minimum speed, and maximum speed values.

Results		
	Menu Item	Description
	Print Results	Print out the test results.
	View/Print Results	<p>Displays the Drivers Trace Test Result Viewer when selected, to see an example of this please refer the chapter 9 under the heading “Displays the Drivers Trace Test Result Viewer”.</p> <div style="border: 1px solid gray; padding: 5px; background-color: #f0f0f0;"> <p>Note</p> <p>This menu item is enabled only when menu item “Save Results” off of the “Options” menu is selected.</p> </div>
View/Print Trace	<p>Displays the Graph Viewer when selected, to see an example of this please refer to chapter 9 under the heading “Graph Viewer”.</p> <div style="border: 1px solid gray; padding: 5px; background-color: #f0f0f0;"> <p>Note</p> <p>This menu item is enabled only when menu item “Save Trace Data” off of the “Options” menu is selected.</p> </div>	
Edit Comments	<p>Displays the Comment Editor so that the operator can enter comments for the test run and save them away. For an example of what this looks like please refer to chapter 9 under the heading “Comment Editor”.</p>	

	<p>Note</p> <p>Before a drivers trace is initiated, this menu is disabled, and become enabled only after a drivers trace has been performed.</p>	
Start Test	Starts the test.	
Stop Test	<p>Stop the test.</p> <p>Note</p> <p>This menu will initially be disabled, and becomes enabled only after the operator has selected the “Start Test” menu.</p>	
Lift	This allows the operator to raise and lower the lifts.	
Fan	This allows the operator to turn on and off the fan.	
Vehicle Controller Options	Use Vehicle Controller	Enables use of the optional throttle and brake actuators.
	Enable Vehicle Brake	Lets the operator set the vehicle brake actuator position, in % - usually used to prevent the vehicle from creeping before start of test.
	Release Vehicle Brake	Sets the vehicle brake actuator to 0% position and disables it.
	Enable Static Brake	Enables the static brake on the dynamometer, used to hold zero speed, if so equipped - usually used to prevent the vehicle from creeping before start of test.

	Disables Static Brake	Disables the static brake on the dynamometer.
	Throttle/Brake Look-Ahead Time (#.#)	<p>Number of seconds to look ahead in the trace for throttle/brake speed targets – helps tracking.</p> <p>Default: 0.5 seconds.</p>
	Use Throttle/Brake Specific Speed Targets	<p>If checked, the throttle and brake actuator speed targets will come from the optional 3rd column of values in the trace file. You can “tweak” the tracking of the throttle/brake actuators by specifying these values, which will appear as white lines on the trace display. You only have to provide these values for points you want to “tweak”, not every point.</p> <p>Each point in those files looks like this:</p> <p>Normal:</p> <p>Point# = speed</p> <p>Add grade only:</p> <p>Point# = speed, %grade</p> <p>Add actuator speed only:</p> <p>Point# = speed, , throttle/brake speed target</p> <p>Add both grade and target:</p> <p>Point# = speed, %grade, throttle/brake speed target</p> <p>Default: Off</p>
	Overspeed Speed Limit For Immediate Throttle-Brake	The over-speed limit to trigger an immediate

	<p>(#. #)</p>	<p>transition from throttle to brake control, in MPH.</p> <p>Default: 2.0 MPH.</p>
	<p>Overspeed On-Target/High Speed Limit For Throttle->Brake (#. #)</p>	<p>The over-speed limit to eventually trigger a transition from throttle to brakes, in MPH. Speed must remain this much too high for “Overspeed Time Limit For Throttle->Brake” seconds to trigger a transition.</p> <p>Default: 0.1 MPH.</p>
	<p>Overspeed Time Limit For Throttle->Brake (#. #)</p>	<p>How long the speed error can be \geq the value above, in seconds, before a transition to braking.</p> <p>Default: 5.0 seconds.</p>
	<p>Underspeed Speed Limit For Immediate Brake->Throttle (#. #)</p>	<p>The under-speed limit to trigger an immediate transition from brake to throttle control, in MPH.</p> <p>Default: 2.0 MPH.</p>
	<p>Underspeed On-Target/High Speed Limit For Brake->Throttle (#. #)</p>	<p>The under-speed limit to eventually trigger a transition from brakes to throttle, in MPH. Speed must remain this much too low for “Underspeed Time Limit For Brake->Throttle” seconds to trigger a transition.</p> <p>Default: 0.1 MPH.</p>
	<p>Underspeed Time Limit For Brake->Throttle (#. #)</p>	<p>How long the speed error can be \geq the value above, in seconds, before a transition to throttle.</p> <p>Default: 2.0 seconds.</p>

	Use Static Brake	If checked, the dynamometer's static (disk) brake will be used to hold zero speed, when the trace target and actual speeds are below the speed specified below.
	Static Brake Below	The speed at which the dynamometer's static brake should be applied, to hold zero speed.
	Use Dyno For Braking	If checked, the dynamometer will be used to control speed during braking – this option would be used when you do NOT have an actual brake actuator.

ASM 50/15

This test allows the operator to perform a (non-certified) ASM 50/15 type emissions test.

ASM 50/15 Test

Waiting For Test Start Command

Start Test	Vehicle Weight:	4750	Testing Phase:	Not Run
Exit	Testing Power:	19.0		
Print Results	Simulated Inertia			
View Trace	Settling Time:	5	0.0 Left	
Comments	Running Time:	15	0.0 Left	
Save Results				
Save Trace				

Purpose

This test allows the operator to perform a (non-certified) ASM 50/15 type emissions test. This test requires the optional Andros 5-gas analyzer bench to be meaningful.

Intended Test Procedure

This test has a fixed termination time, when the vehicle has completed the specified emissions sampling times. The general testing procedure is outlined below.

- The “**Vehicle Weight**” field will default to the weight entered for the vehicle currently selected for testing. The operator may change this weight if desired.
- The “**Testing Power**” field’s value will automatically be set to the “**Vehicle Weight**” field divided by 250, or the operator can manually over-ride this default value.
- The “**Simulated Inertia**” check box determines whether inertia simulation will be used or not. Mustang Dynamometer recommends that this option always be used.
- The desired emissions “**Settling Time**” and “**Running Time**” values should be entered.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- The “**Start Test**” button is clicked.
- The vehicle is driven so that the speed-indicating bar stays within the green section of the speed indicator. If the vehicle’s speed falls outside of the green range, testing is re-started.
- The test terminates when the vehicle completes the emissions test. The “**Stop Test**” button may be used to terminate a test you do not wish to finish.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database.

For this test type, the following additional information is saved as part of the final test results record:

- Average exhaust gas concentrations of each of the gasses of interest.

If the “**Save Trace**” check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the “**Trace Data Collection Speed**” screen found under the database menu.

Note

Trace data cannot be saved unless the “**Save Results**” check box is checked along with the “**Save Trace**” check box.

Special Considerations for This Test

None.

ASM 25/25

This test allows the operator to perform a (non-certified) ASM 25/25 type emissions test.

ASM 25/25 Test

Waiting For Test Start Command

Start Test	Vehicle Weight:	4750	Testing Phase:	Not Run
Exit	Testing Power:	15.8		
Print Results	Simulated Inertia			
View Trace	Settling Time:	5	0.0	Left
Comments	Running Time:	15	0.0	Left
Save Results				
Save Trace				

Purpose

This test allows the operator to perform a (non-certified) ASM 25/25 type emissions test. This test requires the optional Andros 5-gas analyzer bench to be meaningful.

Intended Test Procedure

This test has a fixed termination time, when the vehicle has completed the specified emissions sampling times. The general testing procedure is outlined below.

- The “**Vehicle Weight**” field will default to the weight entered for the vehicle currently selected for testing. The operator may change this weight if desired.
- The “**Testing Power**” field’s value will automatically be set to the “**Vehicle Weight**” field divided by 300, or the operator can manually over-ride this default value.
- The “**Simulated Inertia**” check box determines whether inertia simulation will be used or not. Mustang Dynamometer recommends that this option always be used.
- The desired emissions “**Settling Time**” and “**Running Time**” values should be entered.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- The “**Start Test**” button is clicked.
- The vehicle is driven so that the speed-indicating bar stays within the green section of the speed indicator. If the vehicle’s speed falls outside of the green range, testing is re-started.
- The test terminates when the vehicle completes the emissions test. The “**Stop Test**” button may be used to terminate a test you do not wish to finish.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database.

For this test type, the following additional information is saved as part of the final test results record:

- Average exhaust gas concentrations of each of the gasses of interest.

If the “**Save Trace**” check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the “**Trace Data Collection Speed**” screen found under the database menu.

Note


Trace data cannot be saved unless the “**Save Results**” check box is checked along with the “**Save Trace**” check box.

Special Considerations for This Test

None.

Loaded Mode

This test allows the operator to perform a (non-certified) loaded mode type emissions test.

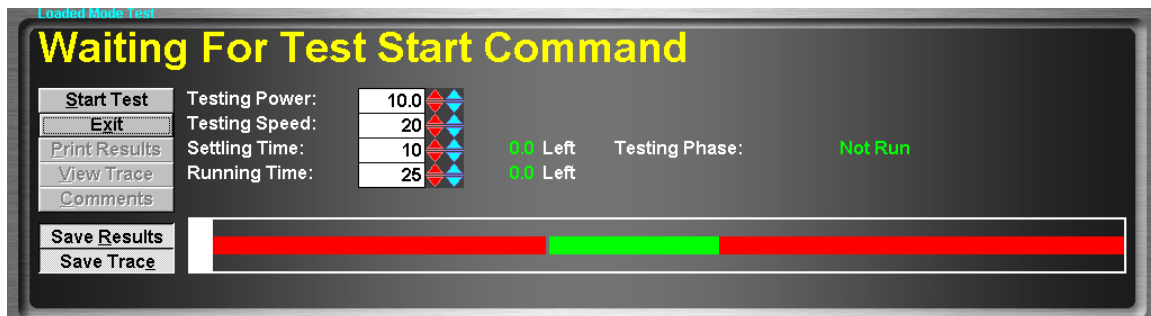

Purpose

This test allows the operator to perform a (non-certified) loaded mode emissions test. This test requires the optional Andros 5-gas analyzer bench to be meaningful.

Intended Test Procedure

This test has a fixed termination time, when the vehicle has completed the specified emissions sampling times. The general testing procedure is outlined below.

- The “**Testing Power**” should be set to the desired power loading.
- The “**Testing Speed**” should be set to the desired testing speed.
- The desired emissions “**Settling Time**” and “**Running Time**” values should be entered.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- The “**Start Test**” button is clicked.
- The vehicle is driven so that the speed-indicating bar stays within the green section of the speed indicator. If the vehicle’s speed falls outside of the green range, testing is re-started.
- The test terminates when the vehicle completes the emissions test. The “**Stop Test**” button may be used to terminate a test you do not wish to finish.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database.

For this test type, the following additional information is saved as part of the final test results record:

- Average exhaust gas concentrations of each of the gasses of interest.

If the “**Save Trace**” check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the “**Trace Data Collection Speed**” screen found under the database menu.

Note


Trace data cannot be saved unless the “**Save Results**” check box is checked along with the “**Save Trace**” check box.

Special Considerations for This Test

None.

Idle / 2500 RPM

This test allows the operator to perform a (non-certified) idle/2500 RPM type emissions test.

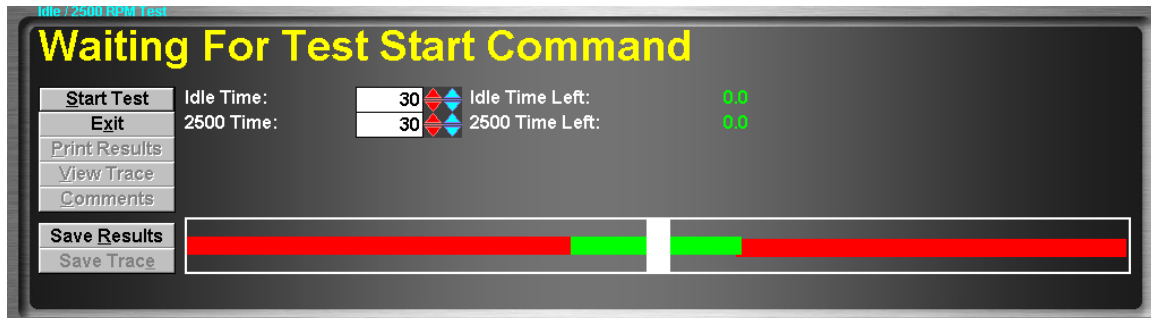

Purpose

This test allows the operator to perform a (non-certified) idle/2500 RPM type emissions test. This test requires the optional Andros 5-gas analyzer bench to be meaningful.

Intended Test Procedure

This test has a fixed termination time, when the vehicle has completed the specified emissions sampling times. The general testing procedure is outlined below.

- The desired idle and 2500-RPM emissions testing time values should be entered.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- The “**Start Test**” button is clicked.
- The vehicle is driven so that the RPM-indicating bar stays within the green section of the speed indicator. If the vehicle’s speed falls outside of the green range, testing is re-started.
- The test terminates when the vehicle completes the emissions test. The “**Stop Test**” button may be used to terminate a test you do not wish to finish.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database.

For this test type, the following additional information is saved as part of the final test results record:

- Average exhaust gas concentrations of each of the gasses of interest, for the idle speed testing.
- Average exhaust gas concentrations of each of the gasses of interest, for the 2500 RPM testing.

If the **“Save Trace”** check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the **“Trace Data Collection Speed”** screen found under the database menu.

Note

Trace data cannot be saved unless the **“Save Results”** check box is checked along with the **“Save Trace”** check box.

Special Considerations for This Test

None.

Lugdown

This test allows the operator to perform a (non-certified) diesel lug-down exhaust opacity test.

Window	%Speed	Time	Last?
1:	100	10	<input type="checkbox"/>
2:	90	10	<input type="checkbox"/>
3:	80	10	<input type="checkbox"/>
4:	70	10	<input type="checkbox"/>
5:	60	10	<input type="checkbox"/>

Start Test
Exit
Print Results
View Trace
Comments
Save Results
Save Trace

Tolerance: 1.0
Mark Top Speed

Purpose

This test allows the operator to perform a (non-certified) diesel lug-down exhaust opacity test. An opacity meter is generally required to make use of this test routine.

Intended Test Procedure

This test has a fixed termination time, when the vehicle has completed the specified emissions sampling times. The general testing procedure is outlined below.

- % of maximum speed that should be maintained at each testing step in use should be entered, along with the number of seconds that each point is to be held for.
- The radio button in the “**Last?**” column next to the lowest-speed point to be used should be selected.
- The “**Tolerance**” field should be set to the maximum number of MPH/KPH by which the system speed can vary from the specified lug-down point speed without triggering a re-start of testing at the point.
- The “**Save Results**” and “**Save Trace**” check boxes should be set appropriately.
- The “**Start Test**” button is clicked.
- The vehicle is driven at its top speed in the gear selected for testing, and the “**Mark Top Speed**” button is pressed. At this point, the lug-down sequence begins, during which the vehicle’s speed will be maintained at each of the in-use testing points for the specified times. (Note that this test logic assumes that the vehicles tested will be equipped with engine RPM governors.)
- The test terminates when the vehicle completes the lowest-speed testing point. The “**Stop Test**” button may be used to terminate a test you do not wish to finish.
- Any saved test results may be viewed and/or a test report printed.

Results Obtained

If the “**Save Results**” check box is checked, a record that this type of test was performed on the currently selected vehicle, along with the date and time the test was performed and any comments about the test session, is saved to the application’s database.

For this test type, the following additional information is saved as part of the final test results record:

- (None)

If the “**Save Trace**” check box is checked, this test generates strip-chart style trace data for all input channels, at the sampling speed specified in the “**Trace Data Collection Speed**” screen found under the database menu.

Note

Trace data cannot be saved unless the “**Save Results**” check box is checked along with the “**Save Trace**” check box.

Special Considerations for This Test

You should not attempt to lug an engine down below its lowest acceptable operating speed. Engines operating at full throttle at very low RPM speeds tend to vibrate heavily, in part due to the reduced effectiveness of the crankshaft’s harmonic balancer at very low speeds.

PID Closed-Loop Control Basics

Dynamometer's that incorporate a loading device, such as a PAU, motor or water brake, generally employ some type of closed-loop control to achieve and maintain the desired loading and/or speed values. Inertia-only dynamometers obviously have no need for any closed-loop control, since no loading device is present. All Mustang Dynamometer control systems employ the PID form of closed-loop control.

PID closed-loop control constantly compares the desired loading or speed value to the actual measured loading or speed value, and makes fine adjustments to the PAU control signal to make the measured loading or speed match the desired loading or speed. The letters "PID" stand for "Proportional", "Integral" and "Derivative", which represent the different ways by which the output signal is modified based on the desired values and measured values. For each element in the PID control loop, a constant is used to adjust the magnitude of adjustment the PAU control signal will experience due to various types of errors between the measured and desired values.

The "Proportional" term constant is used to scale the system's response to a simple error between the desired and measured loading values. Thus, the "Proportional" term is never 0 unless the measured value exactly matches the desired value. Additionally, The "Proportional" term is used to provide over-all scaling of all three terms of the PID control loop. The "Proportional" term handles low to medium frequency response requirements.

The "Integral" term constant is used to scale the system's response to a following error between the desired and measured loading values. The "Integral" term is used to handle situations where the measured values continuously lag behind the desired values, in the same direction of error. In almost all dynamometer-loading schemes, the desired value changes rapidly, and the measured value chases the desired value both upwards and downwards. Thus, the "Integral" term is very seldom required, and its use is not recommended in our control systems. The "Integral" term handles relatively low frequency response requirements.

The "Derivative" term constant is used to scale the system's response to the rate of change of error between the desired and measured loading values. The "Derivative" term responds to sudden changes in both or either of the desired loading or measured loading values, and to the rate of change of the error between them. The "Derivative" term is never 0 unless the rate of change of error is 0. The "Derivative" term handles medium to high frequency response requirements.

The basic logic for our implementation of the PID closed-loop control logic is given below. The "Desired" and "Measured" values may be torques, forces, speeds, etc. The logic given below happens 100 times per second (by default).

$$\text{Error} = (\text{Desired} - \text{Measured})$$

$$\text{ProportionalTerm} = (\text{PConstant} * \text{Error})$$

$$\text{IntegralTerm} = \text{IntegralTerm} + (\text{PConstant} * \text{ICconstant} * \text{Error})$$

$$\text{DerivativeTerm} = (\text{PConstant} * \text{DConstant} * ((\text{Error} - \text{LastError}) / \text{UpdateTime}))$$

$$\text{PAUVoltage} = \text{ProportionalTerm} + \text{IntegralTerm} + \text{DerivativeTerm}$$

$$\text{OldError} = \text{Error}$$

Since the mathematics above remain constant regardless of the value being controlled (e.g. torque or speed), the sign of the “P” constant is critical. This can be observed by considering the “ProportionalTerm” above; if the measured torque is less than the desired torque, the PAU signal must be increased, whereas if the measured speed is less than the desired speed, the PAU signal must be decreased. A sign-error on the “P” constant will result in a loop that works backwards, in effect saying to itself, “The actual load is too low, I must decrease it!”

“Tuning” a PID-type control loop refers to the process of determining the P, I, and D constants required to achieve the desired control characteristics. Generally, the time required to achieve a 90% response to a step change in the desired loading value and the long-term stability of the control loop are the primary considerations in tuning a PID loop.


People new to the concept of closed-loop control frequently ask if there is a method of directly calculating the optimal P, I, and D constant values. Control theory tells us that, in theory, this is possible. In reality, tuning a PID loop requires that some initial PID constant values be selected, and iterative tuning be performed. The initial PID constants selected must be of the correct sign, and must be relatively small. By appropriately selecting the initial PID constants, a very slow, but probably stable, control loop may be achieved. Iterative tuning, wherein the PID constants are gradually varied and the control loop’s response evaluated, is then used to increase the PID constants until the desired control loop response characteristics are achieved. For the truly motivated reader, the PID control loop math outlined above can be used to select initial PID constants, knowing that the PID loop’s output value is fed to the PAU controller, and has a range of 0.0 volts to 5.0 volts, and that the control loop is updated (by default) at 100 times per second.

Mustang Dynamometer strongly recommends that the default PID values for your dynamometer type be used.

NOTE: The historical PID logic in this software (as used in the dynamometer, speed controller, (and throttle/brake actuators when “Mustang” mode is selected) is non-standard, with the “P” term used as a normal “I” term, and the “I” term being a re-integrated term, which must be left at “0”. The throttle/brake actuators, when “Normal” mode is selected, operate as described above, with a normal “P” and “I” implementation.

Dyno PID Values – PID Values

This screen allows the operator to specify PID values and/or restore the default PID values, set ramping options, and set the step sizes used by the scrolling arrows and arrow keys in the various test routines.

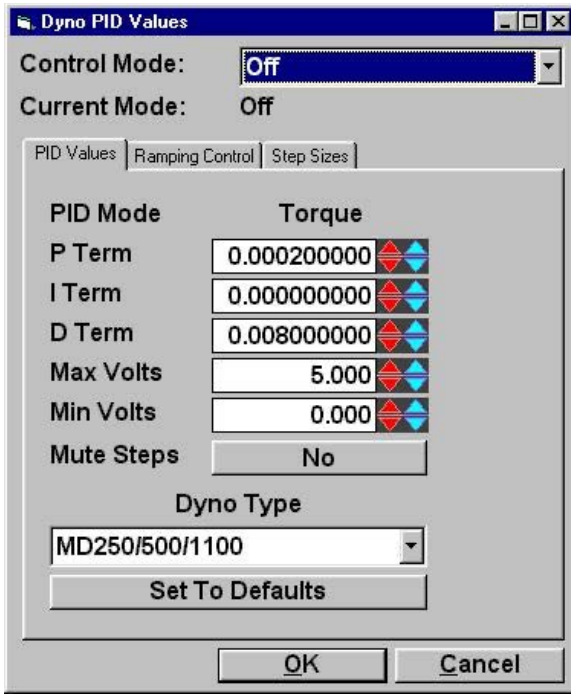

Control Mode

Lets the operator select the specific control mode that they want to adjust the PID values for. Note that all control modes map to 1 of 2 actual PID value sets, one for load based PID control, and one for speed based PID control. The associated PID set will be identified next to the “PID Mode” identifier.

Current Mode

Shows the current control mode of the dyno’s load controller.

P Term

The “P” term for the PID control logic. **Positive for force modes, but negative for speed modes, for dynamometers.**

I Term

The “I” term for the PID control logic – normally 0. Must be positive.

D Term

The “D” term for the PID control logic. Must be positive.

Max Volts

The maximum output voltage the PID loop can generate. This value should normally be left at 5.0 (10.0 on some systems), but can be set to a lower value to reduce the maximum load applied by the dynamometer.

Min Volts

The maximum output voltage the PID loop can generate. This value should normally be left at 0.0 (or -5.0 for dyno's with motors rather than PAUs, and -10.0 for some systems). For dyno's with motors rather than PAUs, can be set to a lower value (eg -3, NOT -6) to reduce the maximum reverse load applied by the dynamometer.

Mute Steps

If this is selected, the PID loop's response to sudden changes to the commanded value will be muted, otherwise full response will be used.

Dyno Type

Lets the operator specify the type of dyno they have, for use in resetting the PID values to the default values appropriate for that dyno type.


Set To Defaults

Mustang Dynamometer engineers have spent many long hours performing the iterative PID loop tuning described above. The results of their testing sessions are the default PID constants available to operators of this screen by clicking on the “**Set To Defaults**” button. Mustang Dynamometer recommends that these default PID constant values be used. Note that the ramp rate settings do not require any tuning, and may be varied as desired.

Before resetting any PID values, make sure you first select the type of dynamometer you have.

Dyno PID Values – Ramping Control Values

This screen allows the operator to specify PID values and/or restore the default PID values, set ramping options, and set the step sizes used by the scrolling arrows and arrow keys in the various test routines.

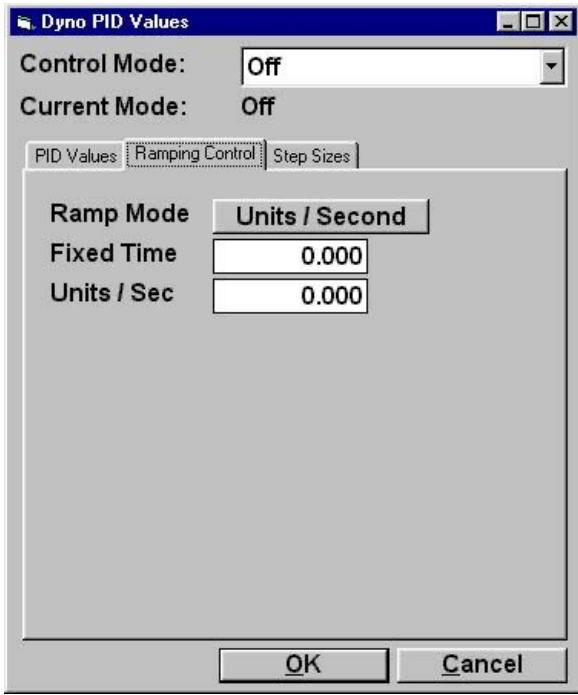

Control Mode

Lets the operator select the specific control mode that they want to adjust the PID values for. Note that all control modes map to 1 of 2 actual PID value sets, one for load based PID control, and one for speed based PID control. The associated PID set will be identified next to the "PID Mode" identifier.

Current Mode

Shows the current control mode of the dyno's load controller.

Ramp Mode

May be set to "Units / Second" or "Fixed Time". "Units / Second" means to ramp the PID loop's target from the current value to any new command value at "xxx" units / second. "Fixed Time" means to ramp the PID loop's target from the current value to any new command value in "xxx" seconds, regardless of the step size.

Fixed Time

Specifies the number of seconds it should take to ramp to a new command value. A value of 0 means to not ramp at all, just immediately apply the new command value.

Units / Second


Specifies the number of units / second at which the PID loop's target should be ramped to a new command value. A value of 0 means to not ramp at all, just immediately apply the new command value.

Since a PID closed-loop controller is generally tuned to achieve the fastest response possible with the maximum tolerable long-term instability, the closed-loop control will move from a previously desired value to a newly specified desired value as quickly as possible. In cases where the fastest possible response to a change in the desired loading value is not desired, a ramping function may be used.

Ramping refers to the process of gradually varying the control loop's set-point value from the previously specified value to any newly specified value. For example, the control loop's set-point value will not change from 100 pounds of force to 200 pounds of force instantaneously; rather, the set-point value will be gradually "ramped" from 100 to 200 pounds using the ramping values currently in effect.

Dyno PID Values – Step Size Values

This screen allows the operator to specify PID values and/or restore the default PID values, set ramping options, and set the step sizes used by the scrolling arrows and arrow keys in the various test routines.

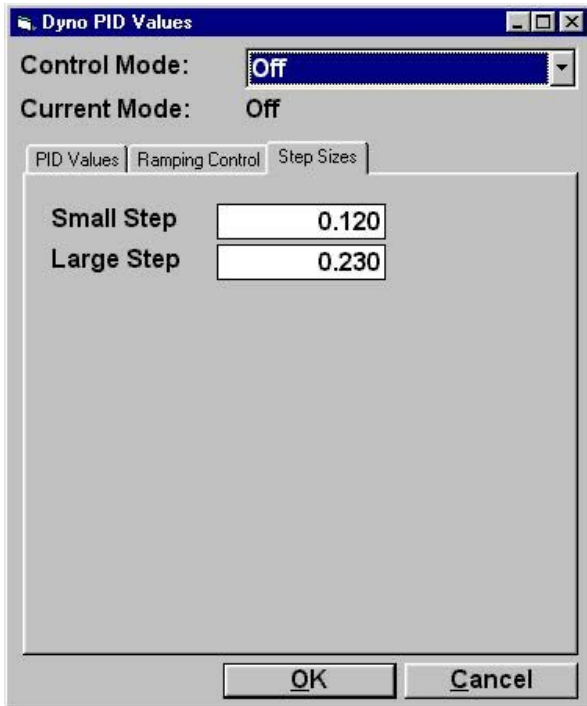

Control Mode

Lets the operator select the specific control mode that they want to adjust the PID values for. Note that all control modes map to 1 of 2 actual PID value sets, one for load based PID control, and one for speed based PID control. The associated PID set will be identified next to the “PID Mode” identifier.

Current Mode

Shows the current control mode of the dyno’s load controller.

Small Step

The amount that the user-specified command value will change by for each click on the small-step up or down arrows next to a command value, or when the <Ctrl>Up or <Ctrl>Down keystrokes are used during a test.

Large Step

The amount that the user-specified command value will change by for each click on the large-step up or down arrows next to a command value.

Speed Follower PID Values – PID Values (Etc.)

For un-coupled, 2-axle dynamometers, the front and rear speeds are kept together using a speed-follower mode, where one axle is operated in closed-loop speed mode, chasing the actual speed of the other axle.


In force testing modes (force, power, vehicle simulation), the “master” axle of the dynamometer runs a PID loop using force feedback from both ends of the dynamometer. Since the speed follower axle does not “care” about force, this makes the “master” axle’s force PID loop job tougher. In terms of tuning the “master” (dyno) force PID loop and speed-follower speed PID loop, there is a trade-off between overall force control and speed matching between the axles. If the speed-follower speed loop is “soft”, then the overall force control can be better. If the speed-follower speed loop is “hard”, then the overall force control will be noisier.

Only the “Speed” mode PID values are used in the speed-follower logic, and the values are the same as described for the dynamometer load controller above. The speed-follower speed mode PID values should be nearly the same as the dynamometer speed mode PID values, but may be slightly larger (for better speed matching) or slightly smaller (for better overall load control).

Ramp rate values must be 0 for the speed follower.

Throttle Controller PID Values – PID Values

This screen allows the operator to specify PID values and/or restore the default PID values, set ramping options, and set the step sizes used by the scrolling arrows and arrow keys in the various test routines.

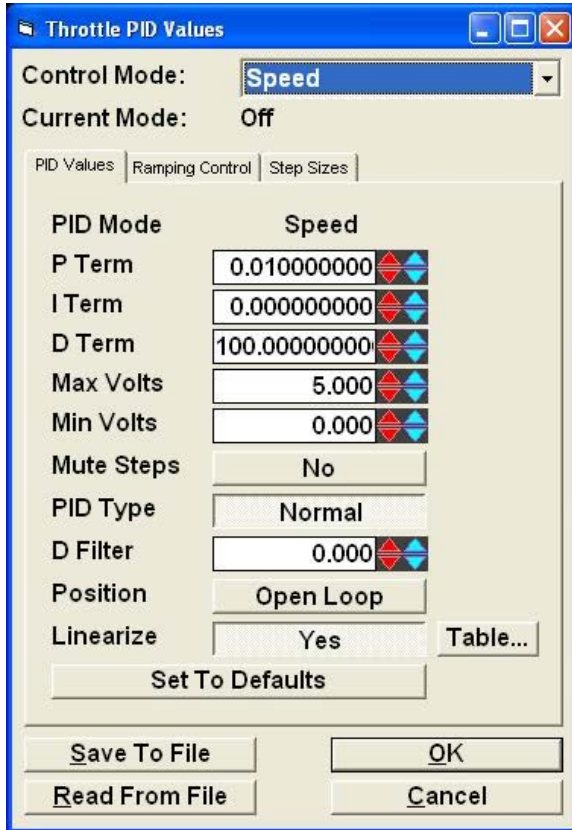

Note: The throttle linearization should be performed **BEFORE** tuning the throttle actuator PID values.

Control Mode

Lets the operator select the specific control mode that they want to adjust the PID values for. Note that all control modes map to 1 of 2 actual PID value sets, one for load based PID control, and one for speed based PID control. The associated PID set will be identified next to the “PID Mode” identifier.

Current Mode

Shows the current control mode of the throttle controller.

P Term

The “P” term for the PID control logic. **Positive for force modes, and also positive for speed modes, for throttle actuators.** Acts as a standard “P” term in “Normal” mode, but as a conventional “I” term in “Mustang” mode.

I Term

The “I” term for the PID control logic – MUST be 0 in “Mustang” mode, or positive in “Normal” mode.

D Term

The “D” term for the PID control logic. Must be positive in all modes.

Max Volts

The maximum output voltage the PID loop can generate. This value should normally be left at 5.0 (sometimes 10.0), but can be set to a lower value to reduce the maximum load applied by the throttle controller.

Min Volts

The minimum output voltage the PID loop can generate. This value should normally be left at 0.0.

Mute Steps

If this is selected, the PID loop’s response to sudden changes to the commanded value will be muted, otherwise full response will be used. This should normally be disabled for driver’s trace type testing.

PID Type

“Normal” = a standard PID loop, using P, I and D. “Mustang” = historical mode for this software, where “P” is really “I”, and “I” must be left at 0. Also, “D” term adjustments are integrated in “Mustang” mode, but immediate in “Normal” mode.

WARNING: Changing the PID Type option REQUIRES re-tuning of the PID constants, they will be markedly different.

D Filter

A value between 0.000 (no filter) and 0.999 (a very, very slow filter) applied to PID adjustments due to the D term. Typical values are between 0.5 and 0.8. This value is only used in “Normal” PID Type mode.

Position

Can be “Open Loop” or “Closed Loop”. Most applications use “Open Loop”, and rely on the actuator controller to accurately control position. If actuator feedback is available, then “Closed Loop” may be used, but requires tuning of the “Position” mode PID constants.

Linearize

Because vehicle throttle (and brake) actuators typically have some dead-band, and some non-linear responses, and PID controllers work much better with linear actuator responses, the throttle (and brake) actuators can be linearized, so that the resulting force from the vehicle is linear with the percent-position applied by the actuator. This is done using a nominal position reference Voltage to actual required position reference Voltage lookup table, which can be hand-edited, but is usually created using the automatic linearization routine in this application. **Note: PID tuning should be done AFTER a linearization table has been created.**

Table...

This button opens the linearization table used if the “Linearize” option is enabled. The X-axis of the table shows the nominal actuator position reference Voltage values (0..5, or 0..10 depending on actuator, but 0..10 is always shown). The Y-axis shows the actual Voltage that will be output to the actuator, for each nominal Voltage. A table that shows a 45-degree upwards slope does nothing (it is a 1:1 relationship). Any point with its vertical line extending above the 45-degree line indicates that the actuator must be moved farther than expected to achieve a linear response at that point. Any point with its vertical line ending below the 45-degree line indicates that the actuator generates more force than expected at that point.

Set To Defaults

Mustang Dynamometer engineers have spent many long hours performing the iterative PID loop tuning described above. The results of their testing sessions are the default PID constants available to operators of this screen by clicking on the “**Set To Defaults**” button. Mustang Dynamometer recommends that these default PID constant values be used. Note that the ramp rate settings do not require any tuning, and may be varied as desired.


Save To File / Read From File

These allow the operator to save/restore PID settings to/from INI format text files. This is provided because the PID tuning is somewhat vehicle specific. For example, normally aspirated engines requiring different tuning than small-displacement, high-boost, turbocharged engines.

Throttle Controller PID Values – Ramping Control Values

This screen allows the operator to specify PID values and/or restore the default PID values, set ramping options, and set the step sizes used by the scrolling arrows and arrow keys in the various test routines.

Note: Ramp rate values must be 0 if the throttle (and/or brake) actuator(s) are used in the “Driver’s Trace” test, where the actuators are following a continuously-changing target speed. These ramps are only useful in manual control of the actuators, or in the scripting tests (programmed force, programmed speed, PROScript).

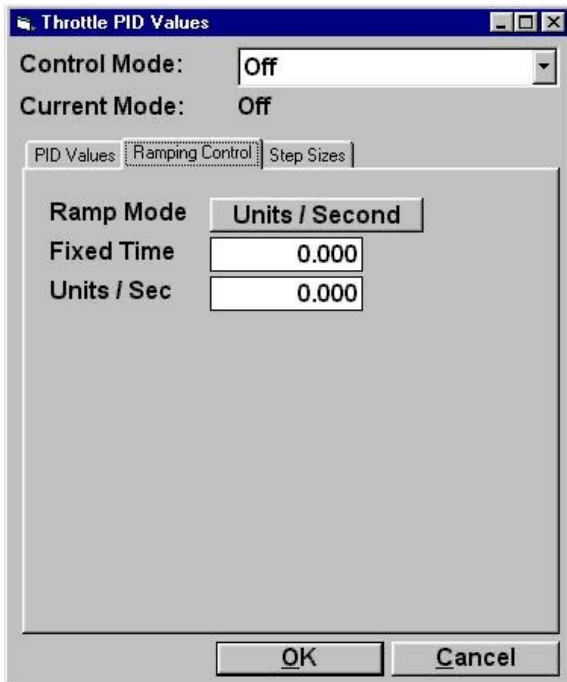

Control Mode

Lets the operator select the specific control mode that they want to adjust the PID values for. Note that all control modes map to 1 of 2 actual PID value sets, one for load based PID control, and one for speed based PID control. The associated PID set will be identified next to the “PID Mode” identifier.

Current Mode

Shows the current control mode of the throttle controller.

Ramp Mode

May be set to “Units / Second” or “Fixed Time”. “Units / Second” means to ramp the PID loop’s target from the current value to any new command value at “xxx” units / second. “Fixed Time” means to ramp the PID loop’s target from the current value to any new command value in “xxx” seconds, regardless of the step size.

Fixed Time

Specifies the number of seconds it should take to ramp to a new command value. A value of 0 means to not ramp at all, just immediately apply the new command value.

Units / Second


Specifies the number of units / second at which the PID loop's target should be ramped to a new command value. A value of 0 means to not ramp at all, just immediately apply the new command value.

Since a PID closed-loop controller is generally tuned to achieve the fastest response possible with the maximum tolerable long-term instability, the closed-loop control will move from a previously desired value to a newly specified desired value as quickly as possible. In cases where the fastest possible response to a change in the desired loading value is not desired, a ramping function may be used.

Ramping refers to the process of gradually varying the control loop's set-point value from the previously specified value to any newly specified value. For example, the control loop's set-point value will not change from 100 pounds of force to 200 pounds of force instantaneously; rather, the set-point value will be gradually "ramped" from 100 to 200 pounds using the ramping values currently in effect.

Throttle Controller PID Values – Step Size Values

This screen allows the operator to specify PID values and/or restore the default PID values, set ramping options, and set the step sizes used by the scrolling arrows and arrow keys in the various test routines.

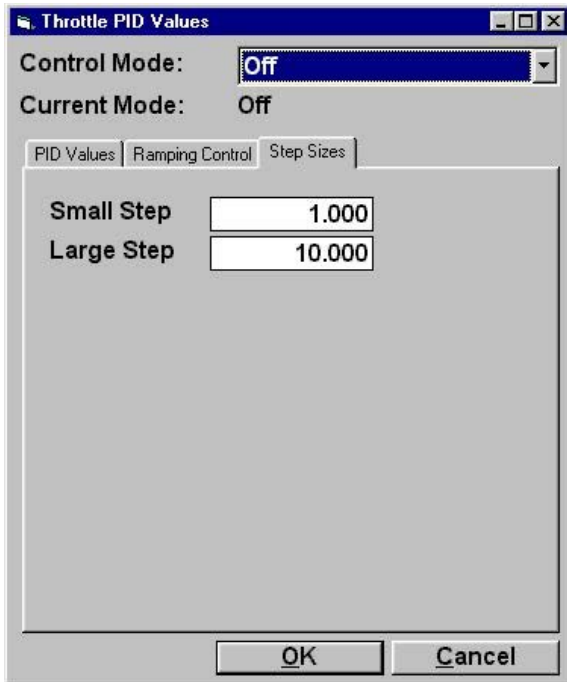

Control Mode

Lets the operator select the specific control mode that they want to adjust the PID values for. Note that all control modes map to 1 of 2 actual PID value sets, one for load based PID control, and one for speed based PID control. The associated PID set will be identified next to the "PID Mode" identifier.

Current Mode

Shows the current control mode of the throttle controller.

Small Step


The amount that the user-specified command value will change by for each click on the small-step up or down arrows next to a command value, or when the <Ctrl>Up or <Ctrl>Down keystrokes are used during a test.

Large Step

The amount that the user-specified command value will change by for each click on the large-step up or down arrows next to a command value.

Brake Controller PID Values – PID Values (Etc.)

The brake controller PID implementation is the same as the throttle controller, with the exception that a different list of control modes is supported. (So, see the throttle actuator description above.)

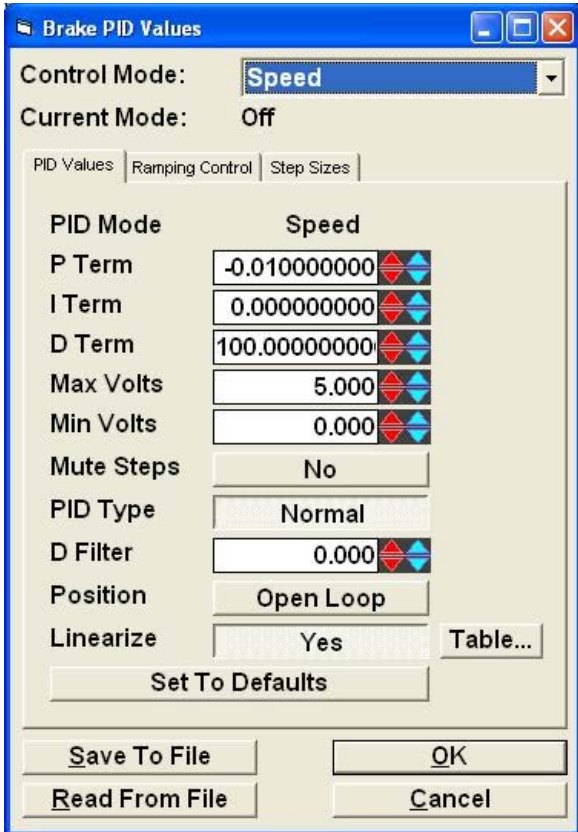

Brake actuator force mode PID “P” values must be positive, while speed mode PID “P” values must be negative.

Note: The brake linearization should be performed BEFORE tuning the brake actuator PID values.

Augmented Braking

This screen allows the operator to specify the parameters used in augmented braking, which is an option in vehicle simulation mode typically used in the driver's trace test to reduce the load on weak rear drum brakes on heavy vehicles.




When augmented braking is enabled, and triggered, the dynamometer stops doing vehicle simulation loading, and starts doing augmented braking, until the vehicle stops generating the triggering level of braking force. This is like a “power brakes” scheme powered by the dynamometer.

NOTE: For electric or hybrid vehicles, this option should remain off – otherwise, the vehicle will not be able to regenerate as much power as it normally would be.

Parameter	Description
Enable Augmented Braking	Turns this feature on or off.
Force Trigger Limit	The amount of braking force required to enter augmented braking mode. A typical value is 300 pounds.
Force Multiplier	The “power brakes” scaling value. The dynamometer + vehicle will generate this many times the vehicle-only braking force. Thus, a value of “3” makes the dyno do twice whatever the vehicle is doing, reducing the load on the vehicle’s brakes by 2/3.
Acceleration Filter	A simple filter value between 0.000 (no filtering) and 0.999 (very, very heavy filtering), applied to acceleration only for the purpose of augmented braking logic. This can help with on/off/on/off transitioning.

ISE Parameters

ISE is the abbreviation for “Inertia Simulation Error”, which is a measure of how well the dynamometer is simulating the specified test weight in vehicle simulation loading mode. This is not normally used by customers, but by Mustang employees during system testing. The specifications and calculation rules for this are defined by emissions testing programs, and are rather technical.

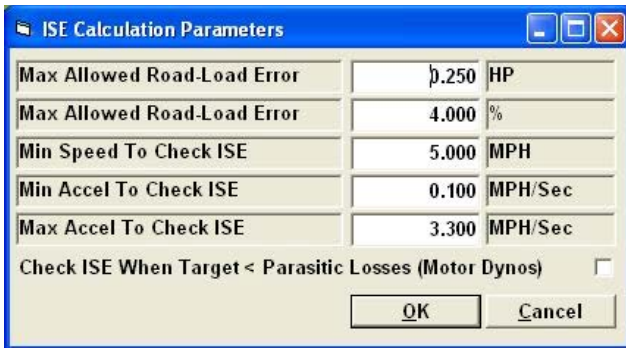

Parameter	Value	Unit
Max Allowed Road-Load Error	0.250	HP
Max Allowed Road-Load Error	4.000	%
Min Speed To Check ISE	5.000	MPH
Min Accel To Check ISE	0.100	MPH/Sec
Max Accel To Check ISE	3.300	MPH/Sec


Check ISE When Target < Parasitic Losses (Motor Dynos)

OK Cancel

(Not documented, the values above are correct for some testing programs.)

Characterize Vehicle Losses

This routine lets the operator characterize the extra rolling losses (above the dynamometer’s parasitic losses) due to having the test vehicle on the dynamometer.

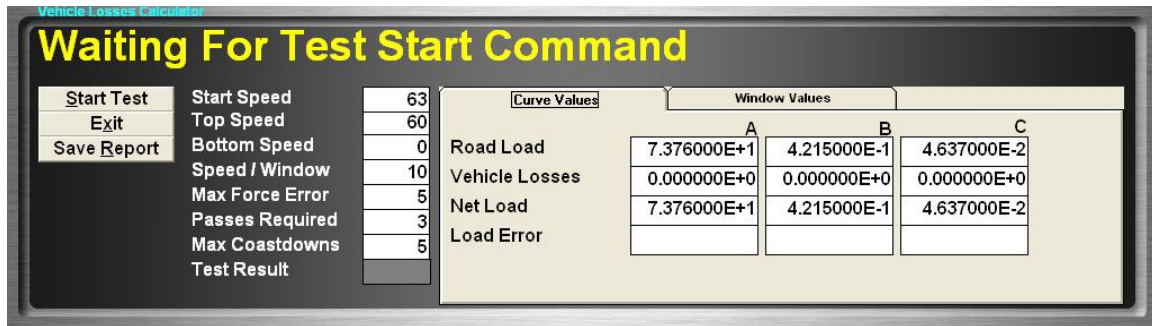

This can be used in two ways:

- a) The dynamometer parasitic losses are kept as dynamometer-only losses, measured with no vehicle on the dynamometer. In this case, this routine defines the extra losses from having the vehicle on the dynamometer.
- b) The dynamometer parasitic losses are kept as dynamometer plus vehicle, measured with the test vehicle on the dynamometer. In this case, this routine can still be used, and will just apply a small trim adjustment to the dynamometer’s parasitic losses data.

In any event, the vehicle or the dynamometer will increase speed up over “Start Speed”, and then start coasting, while the software calculates the coast-down times, and implied loading forces, and compares a least-squares fitted 2nd-order curve to the vehicle’s road-load force(speed) curve. The difference between those two curves represents the loading error, and will be saved as the “Vehicle Losses” A,B,C coefficients in the selected vehicle definition. The “Vehicle Losses” curve is used to adjust the actual loading curve coefficients that the dynamometer uses, to get the correct net loading, and also in the “Wheel” and “Engine” torque and power channel calculations.


The test parameters are:

Start Speed	The starting speed that must be achieved before starting the coast-down measurements, e.g. 63 MPH. This value must be at least a few MPH above the “Top Speed” value to let the system stabilize in vehicle simulation mode after transitioning out of controlled speed mode.
Top Speed	The top speed for the coast-down windows, e.g. 60 MPH.
Bottom Speed	The bottom speed for the coast-down windows, e.g. 10 MPH.

Speed / Window	<p>The speed per window, e.g. 10 MPH.</p> <p>Using the example values, we have 60-10 MPH every 10 MPH, so we have 5 speed windows.</p>
Max Force Error	<p>The maximum acceptable force error, in pounds, e.g. 10 pounds.</p> <p>Setting this value too low can prevent this test from passing. The lower limit is mostly defined by how well warmed up the dynamometer and vehicle are, as the parasitic losses change rapidly with temperature.</p>
Passes Required	<p>The number of consecutive coast-downs with passing results required to consider this test passed, e.g. 3.</p> <p>After each coast-down, if the maximum force error in that coast-down is too high, then the vehicle's losses curve will be adjusted (otherwise, not).</p>
Max Coastdowns	<p>The maximum number of coast-down tests to run, e.g. 5.</p> <p>A value of 5 here lets the system do (2) adjustments, from failing the first (2) attempts, and then pass with (3) consecutive passing results.</p>
Test Result	<p>Pass or fail, as defined above.</p>

Check Vehicle Simulation Loading

This routine is very similar to the routine used to characterize the vehicle losses, but only runs (1) coast-down test, and will not automatically adjust the vehicle’s losses curve coefficients (although the user can manually do just that).

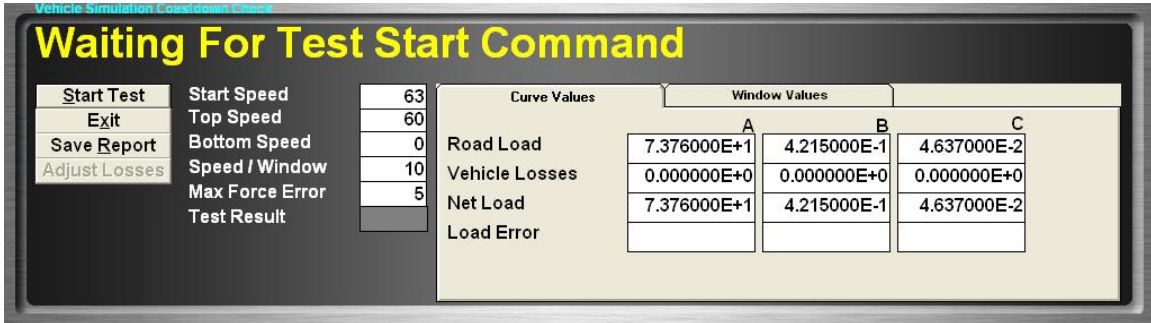

The vehicle or the dynamometer will increase speed up over “Start Speed”, and then start coasting, while the software calculates the coast-down times, and implied loading forces, and compares a least-squares fitted 2nd-order curve to the vehicle’s road-load force(speed) curve. The difference between those two curves represents the loading error, and will be saved as the “Vehicle Losses” A,B,C coefficients in the selected vehicle definition – but only if the “Adjust Losses” button is pressed. The “Vehicle Losses” curve is used to adjust the actual loading curve coefficients that the dynamometer uses, to get the correct net loading, and also in the “Wheel” and “Engine” torque and power channel calculations.

The test parameters are:

Start Speed	The starting speed that must be achieved before starting the coast-down measurements, e.g. 63 MPH. This value must be at least a few MPH above the “Top Speed” value to let the system stabilize in vehicle simulation mode after transitioning out of controlled speed mode.
Top Speed	The top speed for the coast-down windows, e.g. 60 MPH.
Bottom Speed	The bottom speed for the coast-down windows, e.g. 10 MPH.
Speed / Window	The speed per window, e.g. 10 MPH. Using the example values, we have 60-10 MPH every 10 MPH, so we have 5 speed windows.

Max Force Error	<p>The maximum acceptable force error, in pounds, e.g. 10 pounds.</p> <p>Setting this value too low can prevent this test from passing. The lower limit is mostly defined by how well warmed up the dynamometer and vehicle are, as the parasitic losses change rapidly with temperature.</p>
Test Result	Pass or fail, as defined above.

Calibration Menu

The Calibration Menu offers access to all of the required calibration functions of the dynamometer. The "**Diagnostics**" sub-menu is only available when in "**Debugging**" mode, which can be turned on/off in the "**Dyno Parameters**" screen.

Load cell calibrations are on a sub-menu, with support for up to 4 load cells. Only load cells that are in use (as determined on the "**Dyno Parameters**" screen) are enabled.

The "**Auxiliary I/O**" sub-menu allows access to the configuration screens for the analog outputs that are used to drive signals out to external data acquisition systems.

The "**Vehicle Controller**" menu item allows access to the vehicle (throttle) controller setup screen.

The following is a list of the menu item that the operator has access to along with any sub menu item:

Menu Item	Description	
Load Cell Calibrations	Sub Menu Item	Description
	Load Cell #1 Calibration	This screen allows the operator to calibrate load cell #1.
	Load Cell #2 Calibration	This screen allows the operator to calibrate load cell #2.
	Load Cell #3 Calibration	This screen allows the operator to calibrate load cell #3.
	Load Cell #4 Calibration	This screen allows the operator to calibrate load cell #4.

Analog Input RPM Calibration	This screen allows the operator to calibrate the analog engine RPM input.																
Smart Tach Setup	<p data-bbox="630 302 1385 401">To change the SmartTach RPM system voltage threshold and pulses per revolution, access the SmartTach Setup Menu as shown below.</p> <table border="1" data-bbox="630 436 1385 1837"> <thead> <tr> <th data-bbox="634 443 1008 506">Sub Menu Item</th> <th data-bbox="1008 443 1380 506">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="634 506 1008 684">Download Inductive Configuration</td> <td data-bbox="1008 506 1380 684">Downloads a canned configuration to the SmartTach for inductive RPM measurement.</td> </tr> <tr> <td data-bbox="634 684 1008 856">Download Optical configuration</td> <td data-bbox="1008 684 1380 856">Downloads a canned configuration to the SmartTach for optical RPM measurement.</td> </tr> <tr> <td data-bbox="634 856 1008 1066">Download TS-1 Configuration</td> <td data-bbox="1008 856 1380 1066">Downloads a canned configuration to the SmartTach for RPM measurement using the TS-1 probe.</td> </tr> <tr> <td data-bbox="634 1066 1008 1209">Download Custom Configuration</td> <td data-bbox="1008 1066 1380 1209">Downloads a custom canned configuration to the SmartTach.</td> </tr> <tr> <td data-bbox="634 1209 1008 1419">Set Threshold Voltage (Ind)</td> <td data-bbox="1008 1209 1380 1419">Sets the threshold input voltage used for RPM measurements. Lower values are more sensitive, but are also affected more by noise.</td> </tr> <tr> <td data-bbox="634 1419 1008 1598">Set Pulses/Rev (Ind/TS-1)</td> <td data-bbox="1008 1419 1380 1598">Sets the number of pulses per revolution generated by the inductive or TS-1 probes when used on your engine.</td> </tr> <tr> <td data-bbox="634 1598 1008 1831">Set Multi-Strike enabled (Ind)</td> <td data-bbox="1008 1598 1380 1831">Enables or disables multi-strike filtering, which can help reduce RPM measurement errors on vehicles with multi-strike ignition systems.</td> </tr> </tbody> </table>	Sub Menu Item	Description	Download Inductive Configuration	Downloads a canned configuration to the SmartTach for inductive RPM measurement.	Download Optical configuration	Downloads a canned configuration to the SmartTach for optical RPM measurement.	Download TS-1 Configuration	Downloads a canned configuration to the SmartTach for RPM measurement using the TS-1 probe.	Download Custom Configuration	Downloads a custom canned configuration to the SmartTach.	Set Threshold Voltage (Ind)	Sets the threshold input voltage used for RPM measurements. Lower values are more sensitive, but are also affected more by noise.	Set Pulses/Rev (Ind/TS-1)	Sets the number of pulses per revolution generated by the inductive or TS-1 probes when used on your engine.	Set Multi-Strike enabled (Ind)	Enables or disables multi-strike filtering, which can help reduce RPM measurement errors on vehicles with multi-strike ignition systems.
Sub Menu Item	Description																
Download Inductive Configuration	Downloads a canned configuration to the SmartTach for inductive RPM measurement.																
Download Optical configuration	Downloads a canned configuration to the SmartTach for optical RPM measurement.																
Download TS-1 Configuration	Downloads a canned configuration to the SmartTach for RPM measurement using the TS-1 probe.																
Download Custom Configuration	Downloads a custom canned configuration to the SmartTach.																
Set Threshold Voltage (Ind)	Sets the threshold input voltage used for RPM measurements. Lower values are more sensitive, but are also affected more by noise.																
Set Pulses/Rev (Ind/TS-1)	Sets the number of pulses per revolution generated by the inductive or TS-1 probes when used on your engine.																
Set Multi-Strike enabled (Ind)	Enables or disables multi-strike filtering, which can help reduce RPM measurement errors on vehicles with multi-strike ignition systems.																

	Configuration & Diagnostics	Opens a window that gives the operator full control over the configuration of the SmartTach device – this is not for casual customer use, but is intended for use with the guidance of a qualified Mustang Dynamometer technician.								
Opacity Meter Calibration	This screen allows the operator to calibrate the analog exhaust opacity input.									
Gas Analyzer Bench	<table border="1"> <thead> <tr> <th data-bbox="630 793 1008 856">Sub menu item</th> <th data-bbox="1008 793 1382 856">Description</th> </tr> </thead> <tbody> <tr> <td data-bbox="630 856 1008 1037">Bench Calibration</td> <td data-bbox="1008 856 1382 1037">This screen allows the operator to calibrate the optional Andros 5-gas analyzer bench.</td> </tr> <tr> <td data-bbox="630 1037 1008 1178">Enable Bench</td> <td data-bbox="1008 1037 1382 1178">Enables the bench for use. Setting “sticks” for future software sessions.</td> </tr> <tr> <td data-bbox="630 1178 1008 1371">Disable Bench</td> <td data-bbox="1008 1178 1382 1371">Disables the bench, to reduce wear on the bench pump, sensors, etc. Setting “sticks” for future software sessions.</td> </tr> </tbody> </table>		Sub menu item	Description	Bench Calibration	This screen allows the operator to calibrate the optional Andros 5-gas analyzer bench.	Enable Bench	Enables the bench for use. Setting “sticks” for future software sessions.	Disable Bench	Disables the bench, to reduce wear on the bench pump, sensors, etc. Setting “sticks” for future software sessions.
Sub menu item	Description									
Bench Calibration	This screen allows the operator to calibrate the optional Andros 5-gas analyzer bench.									
Enable Bench	Enables the bench for use. Setting “sticks” for future software sessions.									
Disable Bench	Disables the bench, to reduce wear on the bench pump, sensors, etc. Setting “sticks” for future software sessions.									

ECOM Analyzer	Sub menu item	Description
	Connect	When pressed, connects to the ECOM analyzer.
	Disconnect	When pressed, disconnects from the ECOM analyzer.
	ModeNameSetAtRunTime	<p>The current operating mode of the ECOM analyzer and can be one of the following:</p> <ul style="list-style-type: none"> • Unknown • AutoZero • Sample • Standby • Stop • Suspend
	Standby	When pressed, puts the analyzer in standby mode.
	Auto-Zero	When pressed, performs an auto zero on the analyzer.
	Sample	When pressed, puts the analyzer in sample mode.
	Suspend	When pressed, suspends the current operation of the analyzer.
	Diagnostics	When pressed, will display the ECOM analyzer diagnostic screen.
VMAS Mass Emissions Setup	This menu item allows the user to setup the VMAS bench.	
5-Gas Lambda/AFR Setup	This menu item allows the user to setup the 5-Gas Lambda/AFR Setup.	

Vehicle Controller Setup		
	Sub menu item	Description
	Brake / Throttle Controller Setup	This screen allows the operator to configure the optional integrated vehicle controller.
	Brake / Throttle Controller Calibration	This screen allows the operator to calibrate the feedback channels for the brake / throttle controllers.
Brake / Throttle Controller Hand Pendant Setup	This screen allows the operator to setup the hand pendant used for manual control of the brake / throttle controllers.	

Auxiliary I/O Setup	Sub menu item	Description
	Auxiliary Analog Input Setup	This menu item allows access to the setup screen used to configure the auxiliary analog inputs used for extra data acquisition hardware, e.g. exhaust gas oxygen sensors, pressure sensors, etc.
	Auxiliary Analog Output Setup	This menu item allows access to the setup screen used to configure the speed/RPM and torque/force analog outputs supported by the ADA-1100 I/O boards.
	External DAC Board Setup	This menu item allows access to the setup screen used to configure the analog output boards used to drive system values out to external data acquisition systems.
	External DAC Channel Setup	This menu item allows access to the setup screen used to configure the values sent out via the analog outputs to external data acquisition systems.
	Auxiliary Digital Output Setup	This menu item allows access to the setup screen used to configure the digital outputs supported by the digital boards.
	Extended (Auxiliary) Analog Input Setup	This menu item allows access to the setup screen used to configure the extended analog inputs used for extra data acquisition hardware, e.g. exhaust gas oxygen sensors, pressure sensors, etc.

	Extended (Auxiliary) Analog Input Calibrations	This menu item allows access to the setup screen used to calibrate the extended analog inputs used for extra data acquisition hardware, e.g. exhaust gas oxygen sensors, pressure sensors, etc.				
	Extended Analog Input Diagnostics	This menu item allows access to the setup screen used to diagnose the extended analog inputs used for extra data acquisition hardware, e.g. exhaust gas oxygen sensors, pressure sensors, etc.				
	PDAQ3000 Input Calibrations	Refer to page # 262 of document.				
	PDAQ3000 Input Diagnostics	Refer to page # 265 of document.				
AWD Base Setup	This screen allows the operator to setup the various I/O channels used by the all-wheel-drive base hardware.					
AWD Speed Follower Modes	This screen allows the user to setup a roll set to follow the speed of another roll set.					
Timing Light Tree Setup	This screen allows the operator to manually control the drag racing timing lights.					
Scan Tool Setup	This screen allows the user to setup the DPA III Plus.					
CAN Export Setup	This screen allows the user to setup the channel values that will be exported via CAN messages.					
Calibration/Verification Routines	<table border="1"> <thead> <tr> <th>Sub menu item</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>Warmup</td> <td>This screen allows the operator to perform an automatic dynamometer warm-up routine.</td> </tr> </tbody> </table>		Sub menu item	Description	Warmup	This screen allows the operator to perform an automatic dynamometer warm-up routine.
	Sub menu item	Description				
Warmup	This screen allows the operator to perform an automatic dynamometer warm-up routine.					

	Parasitics Measurement	This screen allows the operator to perform an automatic dynamometer parasitics measurement routine.
	Parasitics Viewer	This screen allows the operator to view the current parasitic losses data as a graph.
	Coast Down Check	This screen allows the operator to perform an automatic dynamometer coast-down test.
	Inertia Check Test	This screen allows the operator to perform an automatic dynamometer inertia measurement routine.
	Automatic PID Calculator	This screen allows the operator to perform an automatic PID tuning routine.
	Map Speed Encoder	This routine allows the operator to create a noise-canceling map of a speed encoder input, which is then used during testing to map the noise generated by the encoder itself out of the speed input.
Dyno Parameters	This screen allows the operator to specify dynamometer-specific parameters.	
Belt Tension Control	Gary	
System Parameters	This screen allows the operator to specify system-level parameters.	
Weather Station Parameters	This screen allows the operator to configure and/or calibrate the weather station facility.	
Display Units	This screen allows the operator to select the units used to	

	display values in this software.														
Languages	This screen allows the operator to select the current language for display and printing.														
View Change Log	Opens a text file in “NotePad”, which shows when various system values were changed.														
Diagnostics	<p>Note: This item is only enabled when the “System Parameters” screen “Debug” mode option is turned on.</p> <table border="1"> <thead> <tr> <th>Sub Menu Item</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>PowerDyne Driver Setup NI6221 Driver Setup ADA1100 Driver Setup</td> <td>This is the configuration screen for the driver for the I/O board used to control the dynamometer.</td> </tr> <tr> <td>I/O board diagnostic</td> <td>Shows a simple diagnostic screen for the I/O board(s) used to control the dynamometer. Not for casual customer use, only for use with guidance from a qualified Mustang Dynamometer technician.</td> </tr> <tr> <td>Gas Bench Diagnostic</td> <td>Shows a diagnostic screen for the exhaust gas analyzer. Not for casual customer use, only for use with guidance from a qualified Mustang Dynamometer technician.</td> </tr> <tr> <td>INI File editor</td> <td>This allows the operator to edit the application’s main INI file.</td> </tr> <tr> <td>Toggle Debug Window</td> <td>Shows a small diagnostic message window, only used by Mustang Dynamometer technicians.</td> </tr> <tr> <td></td> <td></td> </tr> </tbody> </table>	Sub Menu Item	Description	PowerDyne Driver Setup NI6221 Driver Setup ADA1100 Driver Setup	This is the configuration screen for the driver for the I/O board used to control the dynamometer.	I/O board diagnostic	Shows a simple diagnostic screen for the I/O board(s) used to control the dynamometer. Not for casual customer use, only for use with guidance from a qualified Mustang Dynamometer technician.	Gas Bench Diagnostic	Shows a diagnostic screen for the exhaust gas analyzer. Not for casual customer use, only for use with guidance from a qualified Mustang Dynamometer technician.	INI File editor	This allows the operator to edit the application’s main INI file.	Toggle Debug Window	Shows a small diagnostic message window, only used by Mustang Dynamometer technicians.		
Sub Menu Item	Description														
PowerDyne Driver Setup NI6221 Driver Setup ADA1100 Driver Setup	This is the configuration screen for the driver for the I/O board used to control the dynamometer.														
I/O board diagnostic	Shows a simple diagnostic screen for the I/O board(s) used to control the dynamometer. Not for casual customer use, only for use with guidance from a qualified Mustang Dynamometer technician.														
Gas Bench Diagnostic	Shows a diagnostic screen for the exhaust gas analyzer. Not for casual customer use, only for use with guidance from a qualified Mustang Dynamometer technician.														
INI File editor	This allows the operator to edit the application’s main INI file.														
Toggle Debug Window	Shows a small diagnostic message window, only used by Mustang Dynamometer technicians.														

Load Cell #1 Calibration (Load Cells #2, #3, and #4 are identical)

This screen allows the operator to calibrate load cell #1 (torque) input.

Load Cell Calibration [Load Cell #1]

Calibration Instructions

- 1) Verify that the torque arm length and calibration weight below are correct.
- 2) Stop the dynamometer and remove any weight from the load cell arm.
- 3) Install the calibration ARM, if required, and press the "Zero" button below.
- 4) Install the calibration WEIGHT and press the "Span" button below.
- 5) Remove the calibration weight, and arm if used.
- 6) If an asymmetric calibration arm was used, press the "ReZero" button below.
- 7) Press the "OK" button when done, or "Cancel" to abort the calibration.

Current Readings

Current Input Voltage:	<input type="text" value="-5.00"/>	(Raw reading from DAC board)
Current Zero Voltage:	<input type="text" value="0.03"/>	(Matches input voltage after Zeroing.)
Current Span Value:	<input type="text" value="189.29"/>	(Torque/(Volt change from zero))
Current Torque Value:	<input type="text" value="-951.53"/>	(Calculated torque)
Calibration Wt: (Lbs)	<input type="text" value="50.00"/>	(From Dyno Parameters Screen)
Torque Arm: (Inches)	<input type="text" value="18.00"/>	(From Dyno Parameters Screen)

Status

Waiting For Zero Command.

Commands

Load cell calibration is a very simple 1-4 step process required to generate a linear calibration. The steps required to perform a load cell calibration are described below.

- If you are calibrating a multiple-PAU dynamometer, make sure that you are working on the correct load cell.
- Since electronic components drift with temperature, it is best to calibrate after the system has been turned on for at least an hour, and the equipment temperature is stable.
- If you just want to zero the input, simply click “Zero”, and then “OK”. Do NOT install any removable calibration arm.
- If you want to do a full calibration, follow the steps below.
- Verify that the displayed calibration weight and torque arm length values are correct. These values are associated with your dynamometer’s physical design, and will not change

after initial configuration. You may change these values, if required, using the “**Dyno Parameters**” screen.

- Remove the PAU cover on your dynamometer to gain access to the load cell area.
- Since the first point in the calibration is at a zero input condition, make sure that there is no weight on the calibration arm or fixture, that the dynamometer’s lift is down, and that no vehicle is on the dynamometer.
- If you are using a dynamometer with a removable load cell calibration arm, install the calibration arm on the PAU.
- Visually verify that the current analog input voltage is nearly 0.0 volts (+/- 0.5 volts typical).
- Click the “**Zero**” button to set the initial zero calibration point.
- Assuming that the zero command worked (otherwise the message box will indicate that the zero calibration failed due to an invalid input voltage), you may proceed with the span point calibration.
- Install your calibration weight on the calibration arm or fixture. If you are using a built-in calibration arm, make sure that the calibration weight is pushed up against the cross-bar to ensure a correct effective calibration arm length. If you are using a separate calibration arm, the calibration weight should be mounted on a locating pin.
- If you have an asymmetric (one-sided) calibration arm, you only have to do (1) span calibration. Click the “**Span**” button. If the span calibration is successful, you can click the “**OK**” button to save the calibration values. If the span calibration is not successful, the message box will indicate that the span calibration failed. If the span calibration fails, it is due to too-small voltage change from the zero point calibration. Please note the zero and span point values and contact Mustang Dynamometer for assistance.
- If you have a symmetric (two-sided) calibration arm, you will need to do (2) span calibrations, first “**+Span**” for positive values (with the weight installed on the end of the arm that generates positive torque), then “**-Span**” for negative values (with the weight on the other end of the calibration arm). (To enable bi-directional span calibrations, the “UsesBiDirectionalSpan” line in the analog input channel configuration section in the “PowerDyne.Ini” file must be set to “True”.)
- If you are using a removable calibration arm (for example, on an MD-1750 dynamometer), you need to perform an additional zero calibration, to account for any offset introduced by the arm itself. (The first zero point calibration was only performed to have a known starting point for the span point calibration.) Simply remove the calibration weight and arm, and click the “**Re-Zero**” button. Assuming that the re-zero function works correctly (check the message box), you can click the “**OK**” button to save your new calibration values.

- **MAKE SURE TO REMOVE BOTH THE CALIBRATION WEIGHT AND (IF YOU ARE USING A SEPARATE CALIBRATION ARM) CALIBRATION ARM FROM YOUR DYNAMOMETER WHEN YOU ARE FINISHED WITH THIS CALIBRATION.**

Analog RPM Input Calibration

This screen allows the operator to calibrate the analog engine RPM input.

Analog RPM Input Calibration

Calibration Instructions

To calibrate the analog RPM input, you must follow these steps:

- 1) Enter the calibration point information for the zero and spanning points in the areas provided below.
- 2) Make sure that the RPM sensor is connected to a 0 RPM signal (turn the vehicle engine off), and press the "Zero" button below.
- 3) Supply the RPM sensor with the RPM signal specified below (run engine faster or use a signal generator), and press the "Span" button below.

Assuming both the zero and span functions are successful, this screen will automatically close itself. You may press "Cancel" at any time.

Current Settings/Readings

	Voltage	RPM	
Zero Point:	-0.04	0.00	(RPM, 0 -> 15000)
Span Point:	5.00	5000.00	(RPM, 0 -> 15000)
Current:	0.00	38.78	

Status

Waiting For Zero Command

Commands

Zero Span OK Cancel

The analog engine RPM input calibration is a very simple two (2) step process required to generate a linear calibration. The steps required to this calibration are described below.

Using an Analog Input from a Device with No Output Calibration Capability

- Make sure that the “**Zero Point**” “RPM” value is set to 0.
- Make sure that the “**Span Point**” “RPM” value is set to an engine RPM value that your calibration vehicle can maintain steadily for several seconds.
- Attach your engine RPM sensor to your calibration vehicle, and make sure that your engine RPM measurement device can properly measure engine RPM on that vehicle.
- Turn your calibration vehicle’s engine off. Your device should now be generating an analog output that represents 0 RPM.
- Click the “**Zero**” button. The “Status” message box will indicate whether the zero point calibration was successful or not.

- Assuming that the zero point calibration was successful, you can perform the span point calibration.
- Start your calibration vehicle, and maintain the engine RPM value you entered in the “**Span Point**” “**RPM**” value field.
- Once you have achieved and are steadily maintaining the span point engine RPM value, click the “**Span**” button. If the span calibration is successful, you can click the “**OK**” button to save the calibration values. If the span calibration is not successful, the message box will indicate that the span calibration failed. If the span calibration fails, it is due to too-small voltage change from the zero point calibration. Please note the zero and span point values and contact Mustang Dynamometer for assistance.

Using an Analog Input from a Device with Output Calibration Capability

- Make sure that the “**Zero Point**” “**RPM**” value is set to the RPM value that your RPM device drives out on its analog output for a zero point (or low calibration point) calibration. This value is typically 0 RPM.
- Make sure that the “**Span Point**” “**RPM**” value is set to the RPM value that your RPM device drives out on its analog output for a span point (or high calibration point) calibration. This value may range from 1,000 to 20,000 RPM, and may depend on the currently selected analog output RPM range of your device.
- Configure your RPM device to drive the zero point (or low calibration point) RPM value out on its analog output.
- Click the “**Zero**” button. The “**Status**” message box will indicate whether the zero point calibration was successful or not.
- Assuming that the zero point calibration was successful, you can perform the span point calibration
- Configure your RPM device to drive the span point (or high calibration point) RPM value out on its analog output.
- Click the “**Span**” button. If the span calibration is successful, you can click the “**OK**” button to save the calibration values. If the span calibration is not successful, the message box will indicate that the span calibration failed. If the span calibration fails, it is due to too-small voltage change from the zero point calibration. Please note the zero and span point values and contact Mustang Dynamometer for assistance.

SmartTach Setup

This menu give the user the access to the following menu items for setting up their Smart Tach unit:

- Download Inductive Configuration
- Download Optical Configuration
- Download TS-1 Configuration
- Download Custom Configuration
- Set Threshold Voltage (Ind)
- Set Pulses/Rev (Ind/TS-1)
- Set Multi-Strike Enabled
- Configuration & Diagnostics

Download Inductive Configuration

Downloads a canned configuration to the SmartTach for inductive RPM measurement.

Download Optical Configuration

Downloads a canned configuration to the SmartTach for optical RPM measurement.

Download TS-1 Configuration

Downloads a canned configuration to the SmartTach for RPM measurement using the TS-1 probe.

Download Custom Configuration

Downloads a custom canned configuration to the SmartTach.

Set Threshold Voltage (Ind)


Sets the threshold input voltage used for RPM measurements. Lower values are more sensitive, but are also affected more by noise.

Set Pulses/Rev (Ind/TS-1)

Sets the number of pulses per revolution generated by the inductive or TS-1 probes when used on your engine.

Set Multi-Strike Enabled


Enables or disables multi-strike filtering, which can help reduce RPM measurement errors on vehicles with multi-strike ignition systems.

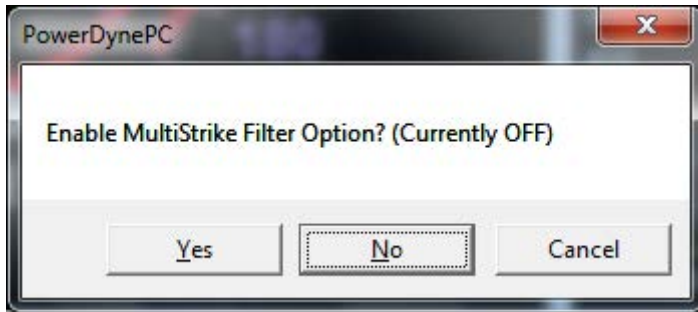

Buttons	Description
Yes	When pressed will enable the Multi-Strike Filter option.
No	When pressed will disable the Multi-Strike Filter option.
Cancel	Dismisses the prompt.

Configuration & Diagnostics

Opens a window that gives the operator full control over the configuration of the SmartTach device.

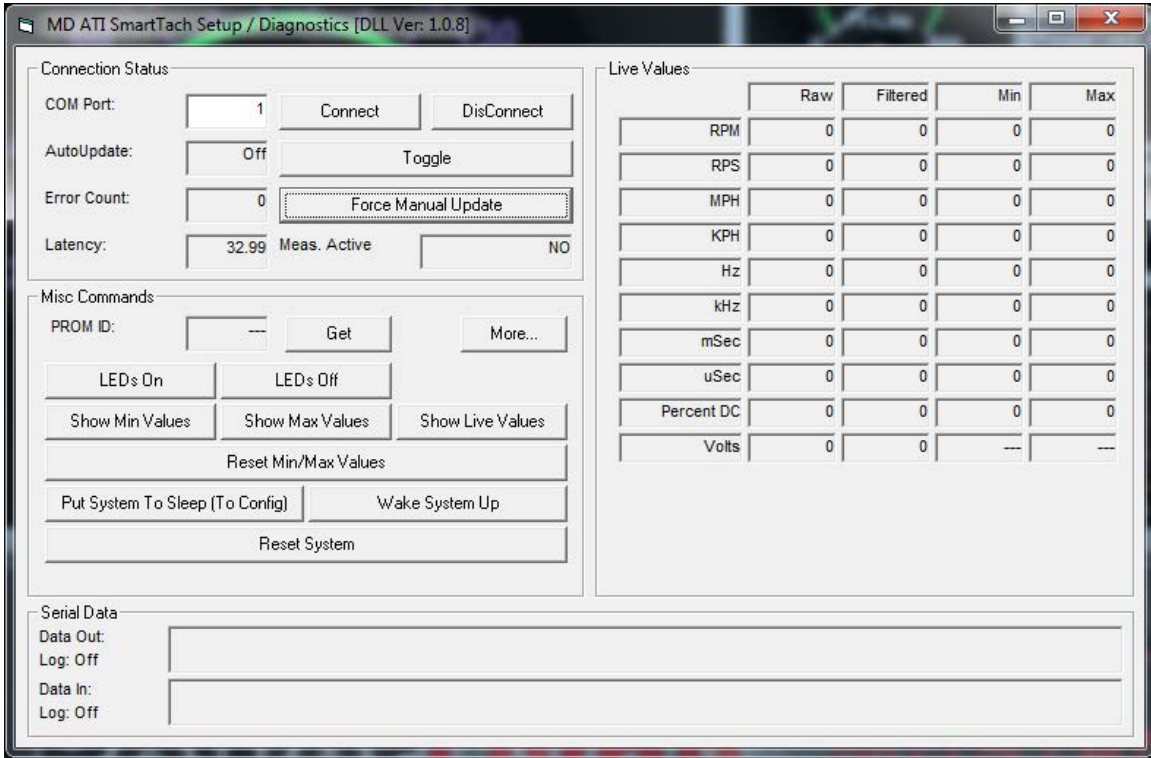

Please note

This is not for casual customer use, but is intended for use with the guidance of a qualified Mustang Dynamometer technician.

COMMAND STATUS

Buttons	Description
Connect	Connects to the SmartTach on the Communication Port specified by field COM Port.
Disconnect	Disconnects from the SmartTach.
Toggle	Toggles Automatic Updates either ON or OFF. If ON then the values will update automatically.
Force Manual Update	Forces and update of the values on the screen every time this button is pressed.

Fields	Description
COM Port	The number of the COM Port to use when connecting to the SmartTach.
AutoUpdate	The current status of Auto update, will be either ON or OFF.
Error Count	The Auto Update error count, this value increments when communication with the SmartTach is lost.
Latency	The time that has transpired since the last update.
Meas. Active	whether or not the Live Flag Measurement is Active.


MISC. COMMANDS

Buttons	Description
Get	When pressed, gets the PROM ID
More...	When pressed, displays a separate screen that allows the user to get/set system parameters.
LEDs On	When pressed, disables LED Display Blanking.
LEDs Off	When pressed, enables LED Display Blanking.
Show Min Values	When pressed, sets display to show minimums.
Show Max Values	When pressed, sets display to show maximums.
Show Live Values	When pressed, sets display to show minimums and maximums.
Reset Min/Max Values	When pressed, resets Min/Max Values.
Put System To Sleep (To Config)	When pressed, puts SmartTach into sleep mode so that it can be configured.
Wake System Up	When pressed, wakes up the SmartTach so that it can be used.
Reset System	When pressed, resets the SmartTach.

Field	Description
PROMID	The Prom ID and is read only!

Please note

When the user presses the button labeled "More..." another screen will be displayed that will allow the user to get and set the system parameters of the SmartTach.

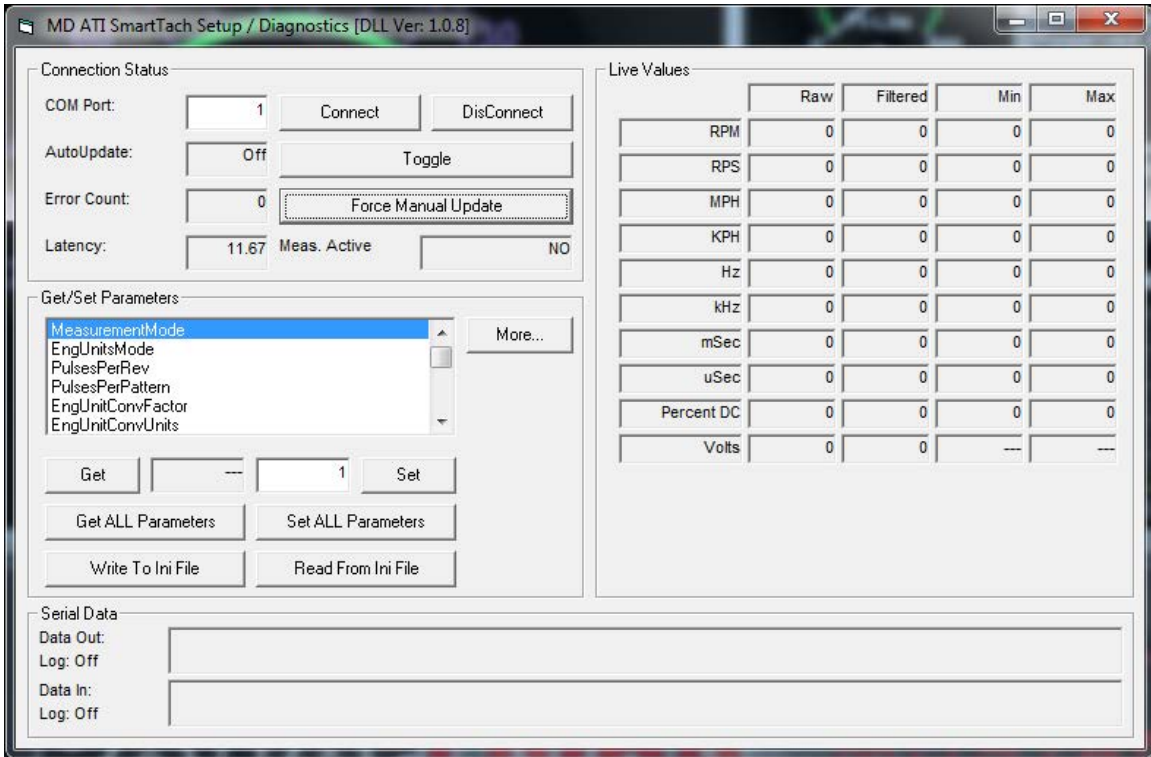

GET/SET PARAMETERS

Buttons	Description
Get	Gets the system parameter that is highlighted in the list box.
Set	Sets the system parameter that is highlighted in the list box.
Get ALL Parameters	Gets all the system parameters of the SmartTach.
Set ALL Parameters	Sets all the system parameters of the SmartTach.

Write To Ini File	Writes all the system parameters to a user selectable INI file.
Read From Ini File	Reads all the system parameters from a user selectable INI file.

The following are a list of system parameters of the SmartTach that the user is able to get and set:

- MeasurementMode
- EngUnitsMode
- PulsesPerRev
- PulsesPerPattern
- EngUnitConvFactor
- EngUnitConvUnits
- InputMode
- LowPassFilterConstant
- MultiStrikeFilterEnabled
- PulsesPerMeasurement
- SparkThresholdVolts
- SparkDelaymSecs
- TriggerLevel
- TriggerPolRising
- TriggerAttenuatorEnabled
- Trigger5VPullUpEnabled
- TriggerThresholdVolts
- TriggerHystVolts
- AOMode
- AOScaler
- AOffset
- AOMaxVoltsLimit
- AOMinVoltsLimit
- AOTestVolts
- AOMsecsPerUpdate
- AImsecsPerUpdate
- AllowPassFilterConstant
- LEDBrightnessMode
- DisplaymsecsPerUpdate

LIVE VALUES

Field	Description
RPM Raw/Filtered/Min/Max	The raw, filtered, minimum and maximum values associated with the RPM.
RPS Raw/Filtered/Min/Max	The raw, filtered, minimum and maximum values associated with the RPS.
MPH Raw/Filtered/Min/Max	The raw, filtered, minimum and maximum values associated with the MPH.
KPH Raw/Filtered/Min/Max	The raw, filtered, minimum and maximum values associated with the KPH.
Hz Raw/Filtered/Min/Max	The raw, filtered, minimum and maximum values associated with the Hz.
kHz Raw/Filtered/Min/Max	The raw, filtered, minimum and maximum values associated with the kHz.
mSec Raw/Filtered/Min/Max	The raw, filtered, minimum and maximum values associated with the mSec.
uSec Raw/Filtered/Min/Max	The raw, filtered, minimum and maximum values associated with the uSec.
Percent DC Raw/Filtered/Min/Max	The raw, filtered, minimum and maximum values associated with the Percent DC.
Volts Raw/Filtered/Min/Max	The raw, filtered, minimum and maximum values associated with the Volts.

Please note

The above mentioned fields are Read Only.

SERIAL DATA

Field	Description
Data Out:	Displays in hexadecimal format the data that was recently sent.
Data In:	Displays in hexadecimal format the data that was recently received.

Please note

The above mentioned fields are Read Only.

Opacity Meter Calibration

This screen allows the operator to calibrate the analog exhaust opacity input.

Opacity Meter Calibration

Calibration Instructions
To calibrate the opacity meter, you must follow these steps:

- 1) Enter the calibration point information for the zero and spanning points in the areas provided below.
- 2) Fix the opacity meter's input at the zero point's opacity (clear the meter or use a calibration sheet), and press the "Zero" button below.
- 3) Fix the opacity meter's input at the span point's opacity (use a calibration sheet), and press the "Span" button below.

Assuming both the zero and span functions are successful, this screen will automatically close itself. You may press "Cancel" at any time.

Current Settings/Readings

	Voltage	Opacity (%)	
Zero Point:	<input type="text" value="0.00"/>	<input type="text" value="0.00"/>	(Opacity, 0 -> 100%)
Span Point:	<input type="text" value="1.00"/>	<input type="text" value="1.00"/>	(Opacity, 0 -> 100%)
Current:	<input type="text" value="-5.00"/>	<input type="text" value="-5.00"/>	

Status
Waiting For Zero Command.

Commands

The analog exhaust opacity input calibration is a very simple two (2) step process required to generate a linear calibration. The steps required to this calibration are described below.

Using an Analog Input from a Device with No Output Calibration Capability

- Make sure that the “Zero Point” “Opacity %” value is set to 0.
- Make sure that the “Span Point” “Opacity %” value is set to the value of a calibration filter/plate that you have available for your opacity meter.
- Remove everything from the measurement path of the opacity meter. Your device should now be generating an analog output that represents 0% opacity.
- Click the “Zero” button. The “Status” message box will indicate whether the zero point calibration was successful or not
- Assuming that the zero point calibration was successful, you can perform the span point calibration.

- Install the calibration filter/plate value you entered in the “**Span Point**” “**Opacity %**” value field.
- Click the “**Span**” button. If the span calibration is successful, you can click the “**OK**” button to save the calibration values. If the span calibration is not successful, the message box will indicate that the span calibration failed. If the span calibration fails, it is due to too-small voltage change from the zero point calibration. Please note the zero and span point values and contact Mustang Dynamometer for assistance.

Using an Analog Input from a Device with Output Calibration Capability

- Make sure that the “**Zero Point**” “**Opacity %**” value is set to the opacity value that your opacity device drives out on its analog output for a zero point (or low calibration point) calibration. This value is typically 0 % opacity.
- Make sure that the “**Span Point**” “**Opacity %**” value is set to the opacity value that your opacity device drives out on its analog output for a span point (or high calibration point) calibration. This value may range from 20 to 100 % opacity.
- Configure your opacity device to drive the zero point (or low calibration point) opacity value out on its analog output.
- Click the “**Zero**” button. The “**Status**” message box will indicate whether the zero point calibration was successful or not.
- Assuming that the zero point calibration was successful, you can perform the span point calibration.
- Configure your opacity device to drive the span point (or high calibration point) opacity value out on its analog output.

Click the “Span” button. If the span calibration is successful, you can click the “OK” button to save the calibration values. If the span calibration is not successful, the message box will indicate that the span calibration failed. If the span calibration fails, it is due to too-small voltage change from the zero point calibration. Please note the zero and span point values and contact Mustang Dynamometer for assistance.

Gas Analyzer Bench – Bench Calibration

This screen allows the operator to calibrate the optional Andros 5-gas analyzer bench.

Gas Analyzer Bench Calibration

Calibration Gas Values
 Cal. Gasses (PPM) Response Times

CO₂: Span CO₂

CO: Span CO

HC: Span HC

NO: Span NO

O₂: Span O₂

Using Propane For HC (Not Hexane)

Calibration Status

Zero Required
 Zeroing
 Zero Failed

Span Required
 Spanning
 Span Failed

Leak Check Active
 Leak Check Failed

Commands

Status/Instructions
 Waiting For Command...

The optional Andros 5-gas analyzer bench supports 3 fully automated self-calibration routines, using ambient atmospheric air for zeroing and a 4-gas blend in a calibration gas bottle for spanning.

Calibration Status Values

Several check boxes are provided to inform the operator of the need for calibrations, the status of calibrations, and the final results of calibration. These checkboxes are explained below.

Checkboxes	Explanation
Zero Required	Indicates that a zero calibration is required.
Zeroing	Indicates that a zero calibration is in process.
Zero Failed	Indicates that the last zero calibration performed failed.
Span Required	Indicates that a span calibration is required.
Spanning	Indicates that a span calibration is in process.
Span Failed	Indicates that the last span calibration performed failed.
Leak Check Active	Indicates that the leak check test is active.
Leak Check Failed	Indicates that the last leak check test performed failed.

To Perform a Zero Point Calibration

- Ensure that the sample probe is not anywhere near a vehicle exhaust source or a significant concentration of the gasses of interest, as may be found around a recent gasoline or chemical spill.
- Click on the “**Zero**” button. The calibration will be performed automatically. The “**Status/Instruction**” box will tell you if the calibration succeeds or fails.

To Perform a Zero & Span Calibration

- Ensure that the calibration gas bottle is connected and turned on, and that the sample probe is not anywhere near a vehicle exhaust source or a significant concentration of the gasses of interest, as may be found around a recent gasoline or chemical spill.
- Ensure that the calibration gas values (all in parts per million (PPM)) match the values printed on the calibration gas bottle. If the concentration values are printed in percent (%), multiply the percentage values by 10,000 to obtain parts per million (PPM) values before entering the PPM values into the on-screen fields.
- If the calibration gas bottle only contains some of the calibration gasses, un-check the corresponding “**Span xxx**” check boxes for any missing gasses.
- Since most calibration gasses use propane for the HC calibration gas, the “**Using Propane For HC (Not Hexane)**” check box should normally be left checked.
- Click on the “**Zero & Span**” button. The calibration will be performed automatically. The “**Status/Instruction**” box will tell you if the calibration succeeds or fails.
- Close the calibration gas bottle valve.

To Perform a Leak Check Test

- Cap the end of the sample probe using the supplied cap.
- Click on the “**Leak Check**” button. The leak check test will be performed automatically. The “**Status/Instruction**” box will tell you if the test succeeds or fails.

Remove the sample probe cap and store it.

ECOM Analyzer

This menu gives the user access to menu items that allow them to perform various operators on the analyzer itself.

Connect

Connects to the ECOM analyzer.

Disconnect

Disconnects from the ECOM analyzer.

Mode: (ModeName)

The current operating mode of the ECOM analyzer and can be one of the following:

- Unknown
- AutoZero
- Sample
- Standby
- Suspend

Standby

Puts the analyzer in standby mode.

Auto-Zero

Performs an auto zero on the analyzer.

Sample

Puts the analyzer in sample mode.

Suspend


Suspends the current operation of the analyzer.

Diagnostics

When pressed, will display the ECOM analyzer diagnostic screen.

ECOM Analyzer - Diagnostics

This screen allows the user to perform diagnostics on the ECOM analyzer:

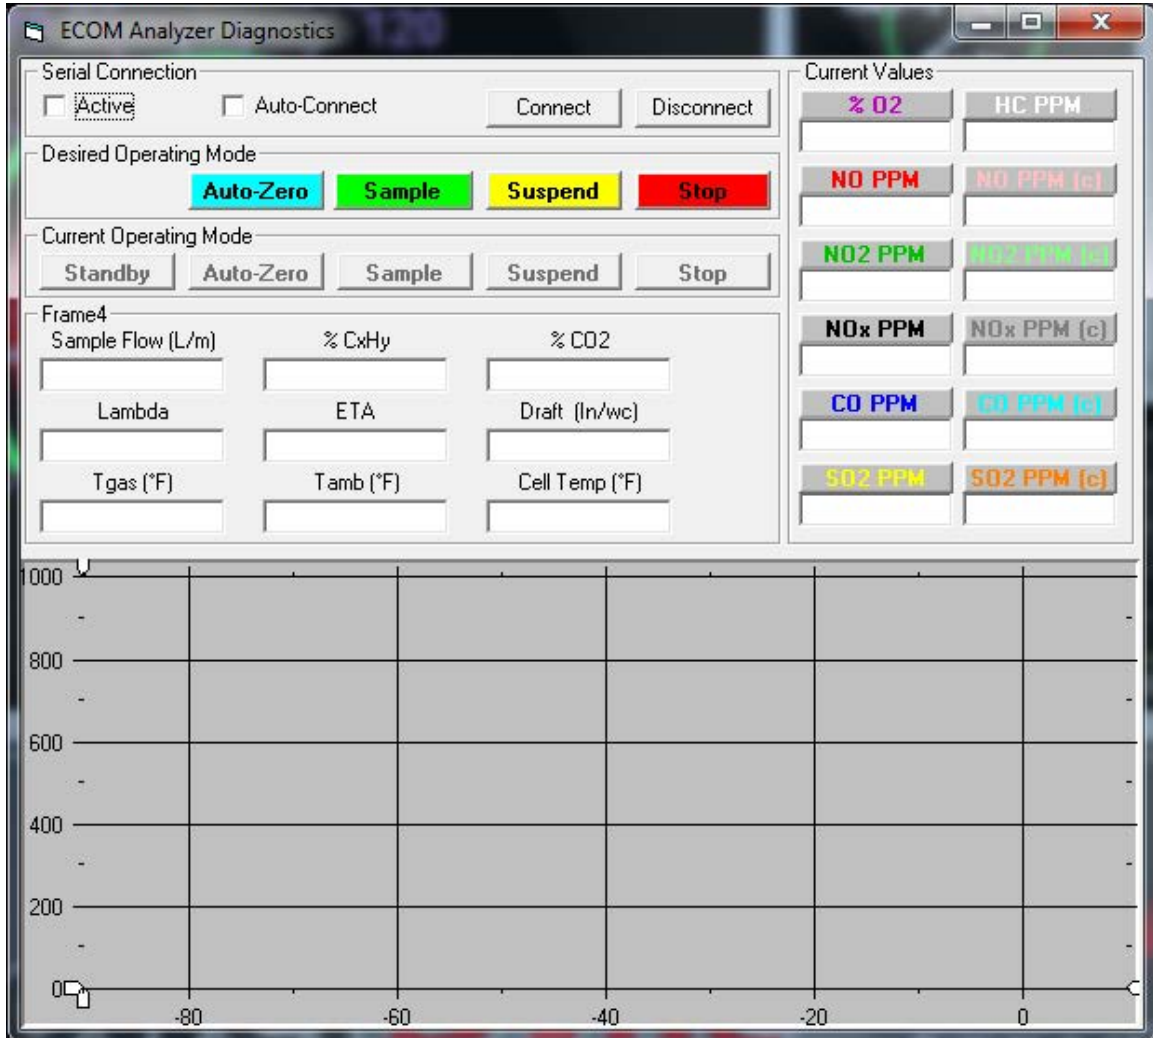

Please note

This is not for casual customer use, but is intended for use with the guidance of a qualified Mustang Dynamometer technician.

SERIAL CONNECTION

Check Box	Description
Active	<p>Makes communication with the ECOM analyzer active so that the values update in real time.</p> <div data-bbox="868 457 1339 720" style="background-color: #f0f0f0; padding: 10px; border: 1px solid #ccc;"> <p>Please note</p> <p>This must first be checked before trying to connect to the ECOM Analyzer using the Connect button.</p> </div>
Auto-Connect	<p>When checked will automatically connect the software to the ECOM analyzer.</p>

Buttons	Description
Connect	<p>When pressed will connect the software to the ECOM analyzer.</p> <div data-bbox="868 1102 1339 1297" style="background-color: #f0f0f0; padding: 10px; border: 1px solid #ccc;"> <p>Please note</p> <p>The user/operator will be prompted for the Comm. Port</p> </div>
Disconnect	<p>When press will disconnect the software from the ECOM analyzer.</p>

DESIRED OPERATING MODE

Buttons	Description
Auto-Zero	When pressed will cause the ECOM Analyzer to go into Auto Zero Mode.
Sample	When pressed will cause the ECOM Analyzer to go into sampling mode Mode.
Suspend	When pressed will Suspend any operation that is currently running on the ECOM Analyzer.
Stop	When pressed will Stop any operation that is currently running on the ECOM Analyzer.

CURRENT OPERATING MODE

Check Box	Description
Standby	When the ECOM Analyzer is Not running in any mode then this option button will be checked.
Auto-Zero	When the ECOM Analyzer is in Automatic Zero mode then this option button will be checked.
Sample	When the ECOM Analyzer is in Sampling mode then this option button will be checked.
Suspend	When the ECOM Analyzer is in suspended mode then this option button will be checked.
Stop	When the ECOM Analyzer is in stop mode then this option button will be checked.

Please note

The above-mentioned fields are read only.

MISCELLANEOUS VALUE

Field	Description
Sample Flow (L/m)	The current sampling rate in liters per minutes
Lambda	The current lambda value of the Gas.
T _{gas} (°F)	The current T _{Gas} temperature.
% C _x H _y	The current C _x H _y Concentration Percent
ETA	The current ETA value
T _{amb} (°F)	The current T _{amb} temperature.
% CO ₂	The current CO ₂ Concentration Percent
Draft (In/wc)	The current Draft reading measured in (In/Wc)
Cell Temp (°F)	The current cell temperature.


CURRENT VALUES

Check Box	Description
% O ₂	When checked will cause the current O ₂ Concentration Percent to appear in the strip chart. If unchecked the reading will not appear.
NO PPM	When checked will cause the current NO Concentration PPM to appear in the strip chart. If unchecked the reading will not appear.
NO ₂ PPM	When checked will cause the current NO ₂ Concentration PPM to appear in the strip chart. If unchecked the reading will not appear.
NO _x PPM	When checked will cause the current NO _x Concentration PPM to appear in the strip chart. If unchecked the reading will not appear.
CO PPM	When checked will cause the current CO Concentration PPM to appear in the strip chart. If unchecked the reading will not appear.

SO2 PPM	When checked will cause the current SO ₂ Concentration PPM to appear in the strip chart. If unchecked the reading will not appear.
HC PPM	When checked will cause the current HC Concentration PPM to appear in the strip chart. If unchecked the reading will not appear.
NO PPM (c)	When checked will cause the current NO Concentration PPM Corrected to appear in the strip chart. If unchecked the reading will not appear.
NO ₂ PPM (c)	When checked will cause the current NO ₂ Concentration PPM Corrected to appear in the strip chart. If unchecked the reading will not appear.
NO _x PPM (c)	When checked will cause the current NO _x Concentration PPM Corrected to appear in the strip chart. If unchecked the reading will not appear.
CO PPM (c)	When checked will cause the current CO Concentration PPM Corrected to appear in the strip chart. If unchecked the reading will not appear.
SO ₂ PPM (c)	When checked will cause the current SO ₂ Concentration PPM Corrected to appear in the strip chart. If unchecked the reading will not appear.

VMAS Mass Emissions Setup

This screen allows the user to setup the VMAS Bench.

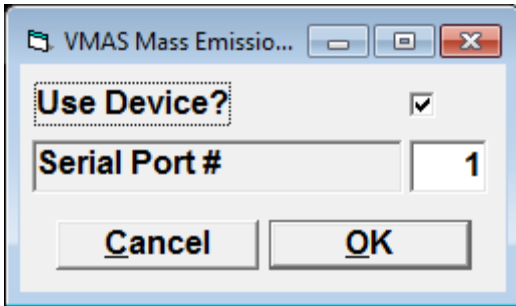

Field	Description
Use Device	When checked, the device is being used, if unchecked means the device is not being used.
Serial Port #	The serial port that the VASM bench is connected to.

Please note

This is not for casual customer use, but is intended for use with the guidance of a qualified Mustang Dynamometer technician.

5-Gas Lambda/AFR Setup

This menu item allows the user to setup the 5-Gas Lambda/AFR Setup.

Please note

This is not for casual customer use, but is intended for use with the guidance of a qualified Mustang Dynamometer technician.

Field	Description
Hcv Value	The ratio between Hydrogen and Carbon.
Ocv Value	The ratio between Oxygen and Carbon.
Analyzer HC Units	The units for HC and can be one of the following: <ul style="list-style-type: none"> • Methane • Propane • Hexane
Fuel Stoichiometric AFR	Fuel Stoichiometric air to fuel ratio

Buttons	Description
US	When pressed fills in values for Hcv and Ocv Hcv= 1.9800 Ocv= 0.0170
Euro	When pressed fills in values for Hcv and Ocv Hcv= 1.7261 Ocv= 0.0176
Gas	When pressed fills in a value for the Fuel Stoichiometric air to fuel ratio: Fuel Stoichiometric AFR = 14.7000
CNG	When pressed fills in a value for the Fuel Stoichiometric air to fuel ratio: Fuel Stoichiometric AFR = 17.4500
LPG	When pressed fills in a value for the Fuel Stoichiometric air to fuel ratio: Fuel Stoichiometric AFR = 15.8700
E10	When pressed fills in a value for the Fuel Stoichiometric air to fuel ratio: Fuel Stoichiometric AFR = 14.0500
E85	When pressed fills in a value for the Fuel Stoichiometric air to fuel ratio: Fuel Stoichiometric AFR = 9.7650
E100	When pressed fills in a value for the Fuel Stoichiometric air to fuel ratio: Fuel Stoichiometric AFR = 9.0078
OK	Saves away any changes made.
Cancel	Closes the screen.

Vehicle Controller Setup – Brake/Throttle Controller Setup

This screen allows the operator to configure the optional integrated vehicle controller.

Screen Fields	Description
Enable Vehicle Control	This is an overall enable switch for the vehicle controller. If this switch is off (not checked), then no vehicle controller inputs or outputs will be read or written. This box must be checked if the vehicle controller is to be used.
Fault (TC, BC)	This display tells if the vehicle fault digital input is faulted (if the input is enabled) for the throttle / brake controllers.
Latched Fault	This display tells if the vehicle controller has latched a fault condition. Note that a dynamometer E-Stop will cause a latched vehicle controller fault, and that the dynamometer E-Stop condition must be cleared before the vehicle controller latched fault can be cleared.
Reset (Latched Fault)	This button will reset any latched fault of the vehicle controller, providing that the vehicle controller fault digital input is not reporting a fault (or is disabled), and that the dynamometer is

	not in an E-Stop condition.
--	-----------------------------

Brake / Throttle Controller Setup

Screen Fields	Description
Use T/C Enable Output	If checked, the specified digital output line will be used to drive an enable digital output to the throttle controller during testing.
Enable With High (Else Low)	Tells what voltage level (0 (low) or 5 (high)) will be driven on the specified output channel to enable the throttle controller.
Board	The I/O board number used to write this output (1 -> 2)
Channel	The digital output channel number used to write this output (0 -> 23)
Use T/C Analog Control Output	If checked, the specified analog output line will be used to drive a reference output to the throttle controller during testing.
Board	The I/O board number used to write this output (1 -> 2)
Channel	The analog output channel number used to write this output (0 -> 1).
Volts, Min	The minimum voltage that should be driven out on this channel, normally 0.
Volts, Max	The maximum voltage that should be driven out on this channel, normally 5.
Reverse Output Range	Reverses the motion of the throttle controller, for vehicles where the closed and full throttle positions are reversed.
Use T/C Analog Feedback Input	If checked, the specified analog input line will be used to measure the current actual position of the throttle controller during testing.
Board	The I/O board number used to read this input

	(1 -> 2)
Channel	The analog input channel number used to read this input (0 -> 7).
Use T/C Fault Input	If checked, the specified analog input line will be used to detect faults from the controller.
Fault When High (Else Low)	If checked, a fault will be generated when the input is at 5 volts, otherwise when the input is at 0 volts.
Board	The I/O board number used to read this input (1 -> 2)
Channel	The digital input channel number used to read this input (0 -> 23).

Brake Controller I/O Setup

The brake controller panel is identical to the throttle controller panel, please see above.

The following is a list of buttons at the bottom of the screen and the functions that they perform.

Buttons	Function
OK	This button will cause all on-screen values to be applied to the controller and written to the software's configuration ("Ini") file, and the screen will close.
Cancel	This button will cause all controller parameters to return to their pre-editing values, and the screen will close.

Vehicle Controller Setup – Brake / Throttle Controller Calibration

This screen allows the operator to calibrate the feedback values for the throttle and brake controllers.

	Throttle	Brake
Feedback Voltage:	0.000	0.000
Feedback Value:	-0.373	0.000
Zero Point Voltage:	0.018	0.000
Span Point Voltage:	4.929	1.000
	Zero	Zero
	Span	Span

OK Cancel

Feedback Voltage

Shows the current analog input voltage for the channel.

Feedback Value

Shows the current calibrated value measured by the analog input.

Zero Point Voltage

Shows the analog input voltage at the zero calibration point.

Span Point Voltage

Shows the analog input voltage at the span calibration point.

Zero Buttons

The throttle / brake controller must be positioned at a “zero” position, ie zero throttle or zero brake application, then the “Zero” button should be clicked, to set the calibration at the zero point.

Span Buttons

The throttle / brake controller must be positioned at a “span” position, ie full throttle or full brake application, then the “Span” button should be clicked, to set the calibration at the span point.

Vehicle Controller Setup – Throttle / Brake Controller Hand Pendant Setup

This screen allows the operator to configure the hand pendant used for manual control of the throttle and brake controllers.

Screen Fields	Description
Use Manual Throttle/Brake Controller Enable	Tells if the digital input that indicates that the operator wants to use the hand pendant to control the throttle/brake controllers should be used.
Active High	If checked, 5 volts indicates a “True” value, otherwise 0 volts.
Board	The board this input is on (1-2)
Channel	The channel this input is on (0-23)
Use Throttle Manual Enable	Tells if the digital input that indicates that the operator wants to enable the throttle controller via the hand pendant should be used.

Active High	If checked, 5 volts indicates a “True” value, otherwise 0 volts.
Board	The board this input is on (1-2)
Channel	The channel this input is on (0-23)
Use Brake Manual Enable	Tells if the digital input that indicates that the operator wants to enable the brake controller via the hand pendant should be used.
Active High	If checked, 5 volts indicates a “True” value, otherwise 0 volts.
Board	The board this input is on (1-2)
Channel	The channel this input is on (0-23)
Use Manual Throttle Analog Input	Tells if the analog input that reports the selected throttle position from the hand pendant should be used.
Board	The board this input is on (1-2)
Channel	The channel this input is on (0-7)
Filter (% Old)	A value between 0 and 99 telling how heavily the input should be filtered – 0 means no filtering, 99 means a very heavy filter. Typically between 50 and 95.
Slew Rate	A value between 0 and 10000 telling how many percent the input can change by per 0.01 second sample – typically between 1 and 10.
Zero	This button is used to set the zero point calibration for this input. The controller must have the command value knob set to the zero (0%) point, then this button can be pressed to set the calibration point.
Span	This button is used to set the span point calibration for this input. The controller must have the command value knob set to the span (100%) point, then this button can be pressed to set the calibration point.
Use Manual Brake Analog Input	Tells if the analog input that reports the

	selected brake position from the hand pendant should be used.
Board	The board this input is on (1-2)
Channel	The channel this input is on (0-7)
Filter (% Old)	A value between 0 and 99 telling how heavily the input should be filtered – 0 means no filtering, 99 means a very heavy filter. Typically between 50 and 95.
Slew Rate	A value between 0 and 10000 telling how many percent the input can change by per 0.01 second sample – typically between 1 and 10.
Zero	This button is used to set the zero point calibration for this input. The controller must have the command value knob set to the zero (0%) point, then this button can be pressed to set the calibration point.
Span	This button is used to set the span point calibration for this input. The controller must have the command value knob set to the span (100%) point, then this button can be pressed to set the calibration point.

Current Values	Description
Manual Control Enabled	Tells if the hand pendant control enable input is on.
Throttle Enable Requested	Tells if the hand pendant throttle enable input is on.
Brake Enable Requested	Tells if the hand pendant brake enable input is on.
Throttle Enable Commanded	Tells if the software has actually enabled the throttle controller based on the request above.
Brake Enable Commanded	Tells if the software has actually enabled the brake controller based on the request above.
Throttle Manual Input %	The throttle position request value read on the

	analog input from the hand pendant.
Throttle Manual Input Volts	The analog input voltage read from the throttle position request analog input from the hand pendant.
Brake Manual Input %	The brake position request value read on the analog input from the hand pendant.
Brake Manual Input Volts	The analog input voltage read from the brake position request analog input from the hand pendant.

Calibration Values	Description
Man Throttle Zero (V)	The zero calibration point voltage.
Man Throttle Span (V)	The span calibration point voltage.
Man Throttle Span (% / V)	The %-per-volt calibration value for the input.
Man Brake Zero (V)	The zero calibration point voltage.
Man Brake Span (V)	The span calibration point voltage.
Man Brake Span (% / V)	The %-per-volt calibration value for the input.

- Test Speed The speed the dynamometer will hold during testing. This must be a speed that the dynamometer can achieve, and where the dynamometer can hold the vehicle speed constant at heavy throttle positions.
- Max Throttle % The maximum throttle position that will be used in testing. 100% is ideal, but sometimes a lower % value must be used, due to dynamometer capacity, tire slip, etc.
- %Throttle/Step The size of steps between throttle positions. For example, a value of “10” (a good value to use) will make the test measure the force generated at every 10% of throttle position.
- Shutdown Force If the force generated by the vehicle ever exceeds this value, the test will automatically terminate. This is used to guard against unexpected things from happening, if the throttle actuator or vehicle responds in an unexpected fashion. A good value to enter here would be about 85% of the drive axle weight of the vehicle.


As the routine progresses, small table of “Point / %Throttle / Lbs” values will be filled in with the actual test results.

The routine requires that larger throttle openings generate larger forces, which seems obvious, but is not always the case. If the measured force values are not strictly increasing with throttle position, then the routine will report failure. Since this generally happens at larger throttle positions (which don’t change the generated force much), you can address this in one of two ways:

- a) Reduce the “Max Throttle %” value, to say 80%, or even 70%, to avoid those points.
- b) Increase the “%Throttle/Step” value, to give the vehicle a better chance of producing more force at each throttle position.

Vehicle Controller Setup – Automatic Brake Linearization

This screen allows the user to perform an automatic linearization on the brake actuator.

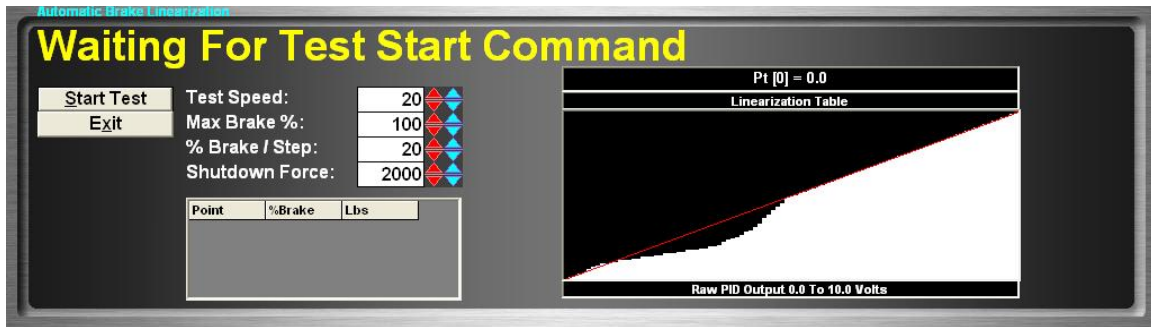

This routine is the same as the throttle linearization above, so please see that section.

Note: The span point for the brake actuator is different from the span point for the throttle actuator. The throttle actuator span point can be set at 100% pedal motion, but the brake actuator span must be set elsewhere. The best approach to setting the span position for the brake actuator seems to be: push on the actuator (not the pedal) with the maximum braking force that you expect to need during testing, then set the span at that position. Using this method makes it difficult to re-install the actuator with the same span point, which effectively changes the PID loop gain for the brake actuator, requiring re-tuning of the PID constants. You can improve the repeatability of this process by using a scale or force sensor to push on the actuator when setting the span point.

Auxiliary I/O Setup - Auxiliary Analog Input Setup

The "Auxiliary Analog Input Setup" menu item allows access to the setup screen used to configure the auxiliary analog inputs used for extra data acquisition hardware, e.g. exhaust gas oxygen sensors, pressure sensors, etc.

Input Configuration												
External Inputs												
Ch.	Active	Name	Units	Current Volts	--- Zero Point --- Volts	Value	--- Neg Point --- Volts	Value	--- Pos Point --- Volts	Value	Filter (%Old)	Slew Rate
1:	<input checked="" type="checkbox"/>	Meter Channel 1	Volts	0.000	0	0			5	5	0	1000
2:	<input checked="" type="checkbox"/>	Meter Channel 2	Volts	0.000	1	1			5	5	0	1000
3:	<input checked="" type="checkbox"/>	Meter Channel 3	Volts	0.000	1	1			5	5	0	1000
4:	<input checked="" type="checkbox"/>	Meter Channel 4	Volts	0.000	0	0			1	1	0	1000
5:	<input checked="" type="checkbox"/>	Meter Channel 5	Volts	0.000	0	0			1	1	0	1000
6:	<input checked="" type="checkbox"/>	Meter Channel 6	Volts	0.000	0	0			1	1	0	1000
7:	<input checked="" type="checkbox"/>	Meter Channel 7	Volts	0.000	0	0			1	1	0	1000
8:	<input checked="" type="checkbox"/>	Meter Channel 8	Volts	0.000	0	0			1	1	0	1000
9:	<input type="checkbox"/>	Engine Torque	Ft-Lbs	0.000	0	0			1	1	0	1000
10:	<input type="checkbox"/>	Engine/Roll RPM	Ratio	0.000	0	0			1	1	0	1000
11:	<input type="checkbox"/>	SAE Factor	%	0.000	0	0			1	1	0	1000
12:	<input type="checkbox"/>	FrontSpeed	%	0.000	0	0			1	1	0	1000
13:	<input type="checkbox"/>	RearSpeed	%	0.000	0	0			1	1	0	1000
14:	<input type="checkbox"/>	FrontAccel	Volts	0.000	0	0			1	1	0	1000
15:	<input type="checkbox"/>	RearAccel	Volts	0.000	0	0			1	1	0	1000
16:	<input type="checkbox"/>	Meter Channel 1	Volts	0.000	0	0			1	1	0	1000

Your electronics system provides for several additional analog inputs that can be connected to additional data acquisition sensors. For example, various pressures and temperatures may be monitored during testing.

Note

Most electronics systems sold are capable of handling up to seven (7) auxiliary analog inputs, although options such as a 2nd PAU, analog engine RPM, opacity and/or weather station inputs may reduce the number of available analog inputs. If you purchased a second data acquisition board with your system, you will have an additional eight (8) analog input available for monitoring additional sensors.

By double-clicking on the “**Name**” column, a drop-down list of predefined channels names can be displayed. These are “**magic**” names that the system looks for; if any of these names is used for a channel name, then the value of that channel will be over-written with the value described by the “**magic**” name, even if the channel is active and reading an analog input channel. These named channels are generally used only on analog input channels that are not physically present, ie channels 9-16, which are read from the second I/O board, which is frequently not installed.

It is important to note that any sensor connected to an auxiliary analog input must meet the following conditions:

- The input voltage must fall in the range –5.0 to +5.0 volts.
- The input voltage must represent a linear input value (non-linear inputs are not yet supported).
- Any electrical isolation required to prevent hardware damage is the operators responsibility, unless Mustang Dynamometer provides the sensor.

Configuring an Auxiliary Analog Input

To configure and/or calibrate an auxiliary analog input, the name of the input channel, the units monitored, and several calibration values must be entered. The process for configuring and calibrating an auxiliary analog input is shown below.

- Select an input channel. The “**Channel**” column lists the available analog input channels. If you have only one (1) data acquisition board installed, you only actually have channels 1-8; channels 9-16 require the 2nd data acquisition board be installed.
- Make sure that the analog input channel is actively being read by checking the “**Active**” box.
- Enter the name of the input channel in the “**Name**” field (for example, “Oil Pressure”).
- Enter the units that the input channel will be measured in the “**Units**” field (for example, “PSI”).
- The “**Current Volts**” field reports the current input voltage for each channel.
- In the “**Lo Cal Point**” “**Volts**” field, enter the input voltage measured at (or known to be present at) the zero/low calibration point value (for example, 0.0 volts).
- In the “**Lo Cal Point**” “**Values**” field, enter the input value for the zero/low calibration point.
- In the “**Hi Cal Point**” “**Volts**” field, enter the input voltage measured at (or known to be present at) the span/high calibration point value (for example, 5.0 volts).
- In the “**Hi Cal Point**” “**Values**” field, enter the input value for the span/high calibration point.

- To apply a FIR type filter to the input value, you can specify a value between 0 (no filtering) and 100 (solid filter, value will never change) in the “**Filter (% Old)**” field. Since the analog inputs are normally updated at 100 Hz, a filter value of 90 will result in a 90% response to a step change in 0.2 seconds, while significantly reducing noise. A filter value of 50 will result in a 90% response to a step change in 0.03 seconds, while reducing noise by approximately 50%.

To apply a slew rate (clipping) filter to the input, you can enter a maximum slew rate value in the “**Slew Rate**” field. These values represent the maximum value by which any two consecutive values may differ; if the difference between two consecutive measurements varies by more than this amount, the reported value is clipped off at the maximum allowed change. These values are between-samples values, so the update rate is important consideration for selecting these values. Since the normal update rate of our systems is 100 Hz, simply take the maximum valid rate of change that you believe your sensor will ever report (in units per second), and divide that value by 100 to determine the value to enter for your “**Slew Rate**” value. For example, if you believe that a temperature sensor will not change by more than 50 degrees per second, then your “**Slew Rate**” value would be $(50 / 100) = 0.5$.

Magic Auxiliary Analog Input Names

For those familiar with the MD-7000 series software, the list of “magic” names (“SAE Factor”, “Engine Torque”, etc) is no longer used – all of the related values are now available as system channels.

Auxiliary I/O Setup - Auxiliary Analog Output Setup

The "Auxiliary Analog Output Setup" menu item allows access to the setup screen used to configure the speed/RPM and torque/force analog outputs supported by the ADA-1100 I/O boards.

The screenshot shows a dialog box titled "Auxiliary Analog Output Setup". It is divided into two main sections: "Analog Speed Output" and "Analog Torque Output".

Analog Speed Output Section:

- Enable This Output
- Board: 1, Max Volts: 5.000
- Channel: 1, Min Volts: 0.000
- Max Speed: 100.0
- Report Roll RPM (Not MPH/KPH)

Analog Torque Output Section:

- Enable This Output
- Board: 1, Max Volts: 5.000
- Channel: 1, Min Volts: 0.000
- Max Torque: 500.0
- Report Crankshaft Values (Not Roll Values)

At the bottom of the dialog are two buttons: "OK" and "Cancel".

Since some dynamometer operators use external data acquisition systems, your system can be configured to drive two (2) analog outputs proportional to the speed and torque measured by your dynamometer. These outputs can be fed to the analog inputs of a data acquisition system.

Note

Since the data acquisition boards that we currently use are limited to two (2) analog outputs per board, and our PAU control uses one of them, you must purchase a second data acquisition board if you wish to drive both of these channels simultaneously. Also, if you have a multiple PAU dynamometer, you will need the second data acquisition board to drive either of these channels.

Analog Speed Output

This output is proportional to the dynamometer's roll speed, in either MPH/KPH or RPM. Configuration is as described below.

Screen Field	Description
Enable This Output	This option must be checked for the output to be driven.
Board	The data acquisition board to be used. Normally board #2, although board #1 can be used for single PAU systems where only one auxiliary analog output is required.
Channel	The data acquisition analog output channel to be used. Values for output channels are either 0 or 1. Note that board #1, channel #0 is always reserved for the PAU reference output.
Max Volts	The maximum voltage to be driven out, when the maximum reportable speed is measured. This value must be less than or equal to 5.0 volts.
Min Volts	The minimum voltage to be driven out, when the minimum reportable speed is measured. This value must be greater than or equal to -5.0 volts if the analog output is configured as a bi-polar output, or greater than or equal to 0.0 volts if the analog output is configured as a uni-polar output.
Max Speed	The maximum reportable speed. This value may be in MPH/KPH (depends on " Use Metric Units " setting in " System Parameters ") or RPM, depending on the setting of the " Report Roll RPM (Not KPH/MPH) " option.
Report Roll RPM	Determines if this output is scaled against dynamometer shaft RPM or (Not KPH/MPH) MPH/KPH.

Analog Torque Output

This output is proportional to the total torque measured by the dynamometer, in either Ft-Lbs/N-M. Configuration is as described below.

Screen Fields	Description
Enable This Output	This option must be checked for the output to be driven.
Board	The data acquisition board to be used. Normally board #2, although board #1 can be used for single PAU systems where only one auxiliary analog output is required.
Channel	The data acquisition analog output channel to be used. Values for output channels are either 0 or 1. Note that board #1, channel #0 is always reserved for the PAU reference output.
Max Volts	The maximum voltage to be driven out, when the maximum reportable torque is measured. This value must be less than or equal to 5.0 volts.
Min Volts	The minimum voltage to be driven out, when the minimum reportable torque is measured. This value must be greater than or equal to -5.0 volts if the analog output is configured as a bipolar output, or greater than or equal to 0.0 volts if the analog output is configured as a uni-polar output.
Max Torque	The maximum reportable torque. This value may be in Ft-Lbs or N-M (depends on "Use Metric Units" setting in "System Parameters").
Report Crankshaft Values (Not Roll Values)	Determines if this output is scaled against dynamometer shaft torque or engine crankshaft torque. Please see the section on Values Reported by a Chassis Dynamometer for more information on this important difference. The torque values reported include ALL torque measured by the dynamometer, not any single component (such as PAU torque, etc).

Auxiliary I/O Setup - External DAC Board Setup

The "External DAC Board Setup" menu item allows access to the setup screen used to configure the analog output boards used to drive system values out to external data acquisition systems.

Board #	Board Type	Active	
1:	CB-DAC-08	Active	Setup...
2:	No Board	In-Active	Setup...
3:	No Board	In-Active	Setup...
4:	No Board	In-Active	Setup...

OK Cancel

This screen is used to configure any I/O boards that have been installed to drive system values out to external data acquisition systems via analog outputs.

Warning: enabling a board that is not present will prevent your system from operating, due to missing hardware and/or driver software! Correcting this issue requires editing the file "... \Data Files \Hardware Configs \ExtDACConfig.Ini", and setting "Active=False" everywhere.

Up to four (4) I/O boards are supported.

Currently, only the Computer Boards CB-DAC-08 (ISA) and PCI-DDA08/12 (PCI) 8-channel, 12-bit analog output I/O boards are supported.

Each of the possible four (4) I/O boards can be configured as "No Board" or as a valid board type. Additionally, each I/O board can be enabled ("Active") or disabled ("In-Active").

Once a valid board type (other than "No Board") has been selected, the I/O board can be configured using the "Setup..." button beside the board definition fields. For PCI boards, you only have to specify the "Board Number" for the board, as setup in Universal Library. For ISA boards, you must specify the board's base address, as well as Voltage range values for each channel.

This screen allows the operator to configure a Computer Boards CIO-DAC-08 (ISA) 8 channel, 12-bit analog output I/O board.

The "**DLL Version**" and "**Driver Handle**" displays tell which version of the I/O board interface DLL is in use, and the driver handle that has been allocated for communicating with the board that is currently being configured.

The "**Base Address**" field displays the base port address of the selected board in decimal notation (768 decimal = 300 hexadecimal). The operator may enter base port address values in either decimal (768) or in hexadecimal (in which case the value must be entered as &h300, or &h240, or &hXXX in general).

NOTE

SETTING THE BASE PORT ADDRESS INCORRECTLY WILL CAUSE THE I/O BOARD TO NOT WORK, AND MAY PREVENT OTHER BOARDS FROM WORKING CORRECTLY.

For each output channel the following parameters may be set:

Parameter	Description
Max Voltage	The maximum voltage (magnitude, positive or negative) that the output is configured to drive.
Uni-/Bi-Polar	Tells if the output is configured as a uni-polar or bi-polar output.

Auxiliary I/O Setup - External DAC Channel Setup

The "External DAC Channel Setup" menu item allows access to the setup screen used to configure the values sent out via the analog outputs to external data acquisition systems.

#	Value	Min Val	Max Val	Min Volts	Max Volts	Board	Ch
1	Engine RPM	0.000	10000.000	0.000	5.000	1 (No Board)	0
2	Total Power	-500.000	500.000	-5.000	5.000	1 (No Board)	1
3	Engine Torque	-500.000	500.000	-5.000	5.000	1 (No Board)	2
4	Total Force	-5000.000	5000.000	-5.000	5.000	1 (No Board)	3
5	Speed	0.000	250.000	0.000	5.000	1 (No Board)	4
6	Acceleration	-40.000	40.000	-5.000	5.000	1 (No Board)	5
7	SAE Factor	0.000	100.000	0.000	5.000	1 (No Board)	6

This screen allows the operator to configure the external DAC channels used to drive system values out to external data acquisition systems via analog outputs.

Up to 32 system values can be driven to external D/A systems (if sufficient I/O boards are installed), and each output can be written to any desired analog output I/O board/channel.

By clicking on an entry in the list box, the complete configuration for the selected system value output can be specified. Clicking on any item in the list box will cause the currently displayed configuration data to be updated.

Hardware Configuration Items	Description
Output #	The number (1 -> 32) of the system output that is being displayed.
Value	The system value that will be driven out, available from a drop-down list.
Board	The analog output I/O board (from the "External DAC Board Setup" screen) that the system value will be driven out on.
Ch	The analog output channel on the selected I/O board that the

	system value will be driven out on. Note that the value displayed in this box will be 1 greater than the value displayed in the list box.
Active	If this value is set to “Yes”, the selected system value will be written out on the selected I/O line, otherwise the system value will not be written out.
Use Default	If this value is set to “Yes”, the default value (specified in volts, below) will always be written out on the selected output line.
Default Value	The default voltage to write out when the output is not active, if desired. This simply allows the system to drive a constant, specified voltage out to any external D/A system when the operator does not want to drive the selected system value out.

Output Scaling Values	Description
Max Units / Volts	These values establish the maximum voltage (within the analog output’s capabilities) which will be driven on the selected analog output line, and the system value that will correspond to that voltage.
Min Units / Volts	These values establish the minimum voltage (within the analog output’s capabilities) which will be driven on the selected analog output line, and the system value that will correspond to that voltage.

Calibration Values	Description
Span Pt Units	The system units value (not voltage) that will be driven on the selected analog output line when the selected channel is put into “ Span ” mode. The voltage that will be driven out will be determined by scaling the specified system value using the min/max voltage/values data pairs entered above.
1/2 Span Pt Units	The system units value (not voltage) that will be driven on the selected analog output line when the selected channel is put into “ Half Span ” mode. The voltage that will be driven out will be determined by scaling the specified system value using the min/max voltage/values data pairs entered above.

Zero Pt Units	The system units value (not voltage) that will be driven on the selected analog output line when the selected channel is put into “ Zero ” mode. The voltage that will be driven out will be determined by scaling the specified system value using the min/max voltage/values data pairs entered above.
Output Mode	<p>The output mode that the channel is to be in. When this field is changed, the output voltage will NOT change until the operator either:</p> <ul style="list-style-type: none"> a) Clicks on another entry in the list box, or b) The clicks the “Update” button. <p>By placing an output channel in “Zero”, “Half Span” or “Span” mode, any of three (3) calibration point values can be driven out on the selected analog output line to allow for calibration of any external data acquisition system inputs.</p> <div style="border: 1px solid black; background-color: #f0f0f0; padding: 5px; margin-top: 10px;"> <p>NOTE:</p> <p>All analog output channels will be returned to “Normal” output mode when this screen is exited.</p> </div>

Current Output Values	Description
Units	The current system value that is being driven out on the selected output channel. This value will be one of the following: (Normal mode) The selected system value, (Zero mode) the specified “ Zero ” point value, (Half Span mode) the specified “ Half Span ” point value, or (Span mode) the specified “ Span ” point value.
Volts	The current voltage that is being driven out on the selected output channel. This value will be the scaled value of the displayed “ Units ” value, using the min/max units/volts data values entered above.

The following is a list of buttons that appear at the bottom of the screen along with a description of their functionality:

Buttons	Function
The "Update" button	Can be used to manually update the selected channel's calibration values. This button will normally be used to update the "Output Mode" value during calibration of external D/A systems, since all fields (including "Output Mode") are updated when the operator clicks on any item in the main list box on this screen (for example, when moving on to configure another channel).
The "OK" button	Will cause all editing values to be updated and written to the software's calibration ("Ini") file.
The "Cancel" button	Will cause all calibration values to revert to their pre-editing values.

Auxiliary I/O Setup - Auxiliary Digital Output Setup

This menu item allows access to the setup screen used to configure the digital outputs supported by the digital boards.

Output Name	Active?	Board #	Channel #	Normal Logic	Lock @ Speed	Inhibits Start
AuxDO01	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	<input type="checkbox"/> Yes	<input type="checkbox"/> Yes
AuxDO02	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	<input type="checkbox"/> Yes	<input type="checkbox"/> Yes
AuxDO03	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	<input type="checkbox"/> Yes	<input type="checkbox"/> Yes
AuxDO04	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	<input type="checkbox"/> Yes	<input type="checkbox"/> Yes
AuxDO05	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	<input type="checkbox"/> Yes	<input type="checkbox"/> Yes
AuxDO06	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	<input type="checkbox"/> Yes	<input type="checkbox"/> Yes
AuxDO07	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	<input type="checkbox"/> Yes	<input type="checkbox"/> Yes
AuxDO08	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	<input type="checkbox"/> Yes	<input type="checkbox"/> Yes
AuxDO09	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	<input type="checkbox"/> Yes	<input type="checkbox"/> Yes
AuxDO10	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	<input type="checkbox"/> Yes	<input type="checkbox"/> Yes
AuxDO11	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	<input type="checkbox"/> Yes	<input type="checkbox"/> Yes
AuxDO12	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	<input type="checkbox"/> Yes	<input type="checkbox"/> Yes
AuxDO13	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	<input type="checkbox"/> Yes	<input type="checkbox"/> Yes
AuxDO14	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	<input type="checkbox"/> Yes	<input type="checkbox"/> Yes
AuxDO15	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	<input type="checkbox"/> Yes	<input type="checkbox"/> Yes
AuxDO16	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	<input type="checkbox"/> Yes	<input type="checkbox"/> Yes

Enable Use Of Auxiliary Digital Outputs

OK Cancel

Please note

This is not for casual customer use, but is intended for use with the guidance of a qualified Mustang Dynamometer technician.


Field	Description
Output Name	The name associated with the digital output.
Active	When checked means that the digital output is active. If unchecked means it is not active.
Board #	The actual number of the board that the digital output is on.
Channel #	The actual number of the channel associated with this digital output.
Normal Logic	When checked means that the digital output will use normal logic, otherwise reverse logic.

Lock @ Speed	When checked means that the digital output channel inhibits changes when spinning.
Inhibits Starts	When checked means that the digital output channel inhibits starts when enabled.
Enable Use Of Auxiliary Digital Outputs	When checked means that Auxiliary Digital Outputs are enabled, if unchecked means that they are disabled.

Buttons	Description
OK	Saves the Auxiliary Digital Output setup away
Cancel	Dismisses the screen.

Auxiliary I/O Setup - Extended Analog Input Setup

This menu item allows access to the setup screen used to configure the extended analog inputs used for extra data acquisition hardware, e.g. exhaust gas oxygen sensors, pressure sensors, etc. These inputs are read via OnTrak ADR-2000 serial I/O boards, which can be daisy-chained, so that only one RS232 serial port (or USB<->Serial adapter) is required for 1..3 ADR-2000 I/O boards. This interface requires the 56k Baud version of these boards.

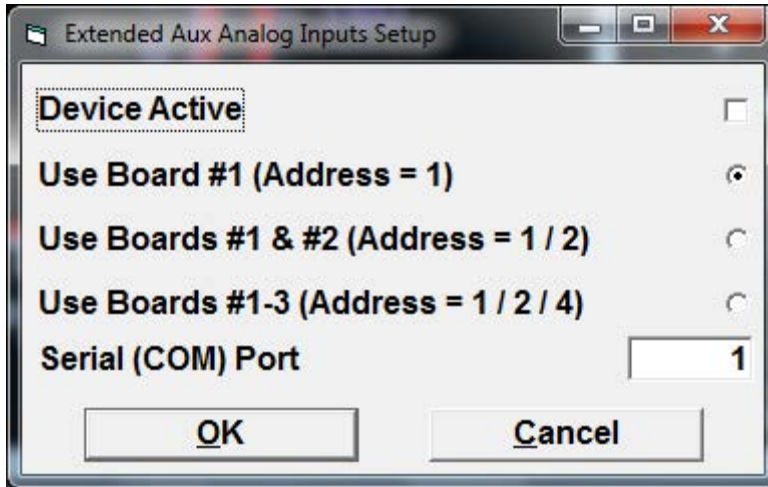


Please note

This is not for casual customer use, but is intended for use with the guidance of a qualified Mustang Dynamometer technician.

Field	Description
Device Active	When checked, means the device is active, If unchecked means the device is not active.
Use Board #1 (Address = 1)	When selected means that only one board is being used.
Use Board #1 & #2 (Address = 1 / 2)	When selected means that boards #1 & #2 are being used.
Use Board #1 - #3 (Address = 1 / 2 / 4)	When selected means that boards #1 through #3 are being used.
Serial (COM) Port	Which communication port is being used.

Auxiliary I/O Setup - Extended Analog Input Calibrations

This menu item allows access to the setup screen used to calibrate the extended analog inputs used for extra data acquisition hardware, e.g. exhaust gas oxygen sensors, pressure sensors, etc.

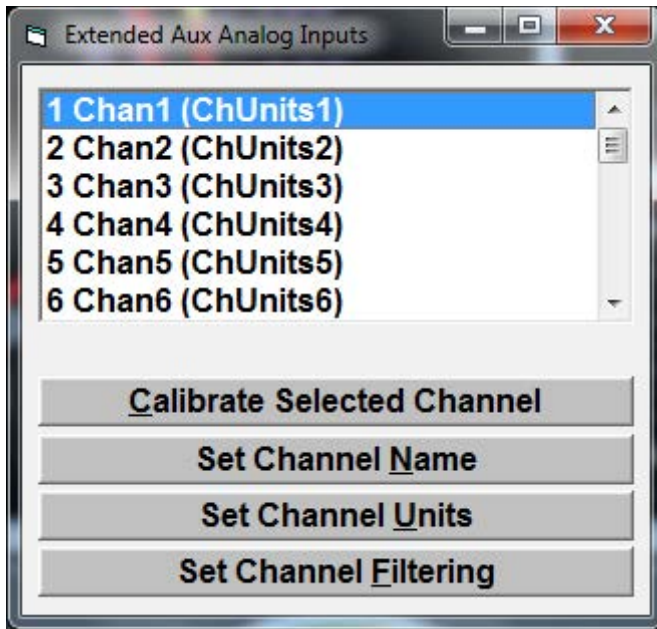

List box	Description
Channel list	The list of all channels, when configuring a channel, all the user/operator has to do is select it and then press the buttons below to configure it.

Buttons	Description
Calibrate Selected Channel	Displays a screen that will allow the user/operator to calibrate the selected channel.
Set Channel Name	Allows the user/operator to give a name to the selected channel.
Set Channel Units	Allows the user/operator to assign a unit of measure to the selected channel.
Set Channel Filtering	Allows the user/operator to assign filtering to the selected channel.

Calibrate Selected Channel

This screen give the user the ability to calibrate an analog input channel.

Extended Aux Analog Input Calibration		
Input Name	Some analog input...	
Current Voltage	0	Volts
Current Value	0	(Units)
Zero Calibration Point Value	0	(Units)
+ Span Calibration Point Value	0	(Units)
- Span Calibration Point Value	0	(Units)
Zero Offset Voltage	0	Volts
+ Span Units / Volt	0	(Units) / Volt
- Span Units / Volt	0	(Units) / Volt
Zero		OK
Span (+ and -)		Cancel
+ Span	- Span	


Field	Description
Input Name	The name of the analog input channel. Please note that this is read only.
Current Voltage	The current voltage of the analog input channel. Please note that this is read only.
Current Value	The current value of the analog input channel. Please note that this is read only.
Zero Calibration Point Value	The current value of the calibration point when it is zeroed.
+ Span Calibration Point Value	The current value of the calibration point when it is positive spanned.
- Span Calibration Point Value	The current value of the calibration point when it is negative spanned.

Zero Offset Voltage	The corresponding zero voltage when the calibration point is zeroed.
+ Span Units / Volt	The corresponding positive span voltage when the calibration point is positively spanned.
- Span Units / Volt	The corresponding negative span voltage when the calibration point is negatively spanned.

Buttons	Description
Zero	When pressed will perform a zero on the selected analog input channel.
Span (+ and -)	When pressed will perform a plus and minus span on the selected analog input channel.
+ Span	When pressed will perform a plus span on the selected analog input channel.
- Span	When pressed will perform a minus span on the selected analog input channel.
OK	When pressed will save the calibration values away.
Cancel	When pressed will dismiss the screen. Please note that if any calibration values have changed then the user will be prompted to save away any values.

Auxiliary I/O Setup - Extended Analog Input Diagnostics

This menu item allows access to the setup screen used to diagnose the extended analog inputs used for extra data acquisition hardware, e.g. exhaust gas oxygen sensors, pressure sensors, etc.

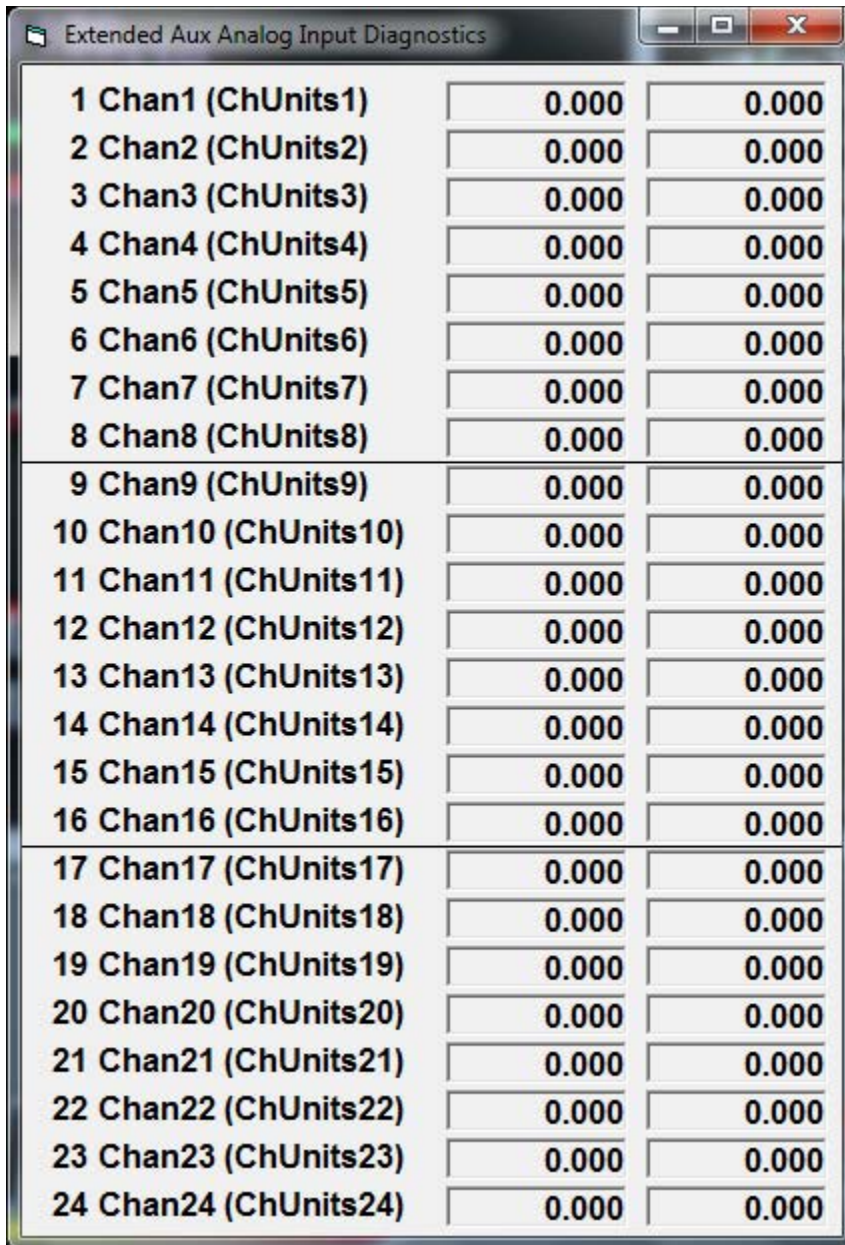

Channel	Channel Name	Voltage	Value
1	Chan1 (ChUnits1)	0.000	0.000
2	Chan2 (ChUnits2)	0.000	0.000
3	Chan3 (ChUnits3)	0.000	0.000
4	Chan4 (ChUnits4)	0.000	0.000
5	Chan5 (ChUnits5)	0.000	0.000
6	Chan6 (ChUnits6)	0.000	0.000
7	Chan7 (ChUnits7)	0.000	0.000
8	Chan8 (ChUnits8)	0.000	0.000
9	Chan9 (ChUnits9)	0.000	0.000
10	Chan10 (ChUnits10)	0.000	0.000
11	Chan11 (ChUnits11)	0.000	0.000
12	Chan12 (ChUnits12)	0.000	0.000
13	Chan13 (ChUnits13)	0.000	0.000
14	Chan14 (ChUnits14)	0.000	0.000
15	Chan15 (ChUnits15)	0.000	0.000
16	Chan16 (ChUnits16)	0.000	0.000
17	Chan17 (ChUnits17)	0.000	0.000
18	Chan18 (ChUnits18)	0.000	0.000
19	Chan19 (ChUnits19)	0.000	0.000
20	Chan20 (ChUnits20)	0.000	0.000
21	Chan21 (ChUnits21)	0.000	0.000
22	Chan22 (ChUnits22)	0.000	0.000
23	Chan23 (ChUnits23)	0.000	0.000
24	Chan24 (ChUnits24)	0.000	0.000


Please note

There are no label for the columns of data, just be aware that the 1st column is the channel name, the 2nd column is the channel voltage and the 3rd column is the channel value.

Field	Description
Channel Name	The name of the analog input channel.
Channel Voltage	The current voltage of the analog input channel.
Channel Value	The current value of the analog input channel.

Auxiliary I/O Setup - PDAQ3000 Input Calibrations

This menu item allows access to the setup screen used to calibrate the extended analog inputs used for extra data acquisition hardware, e.g. exhaust gas oxygen sensors, pressure sensors, etc. These inputs are provided by the PersonalDaq/300x USB I/O board.

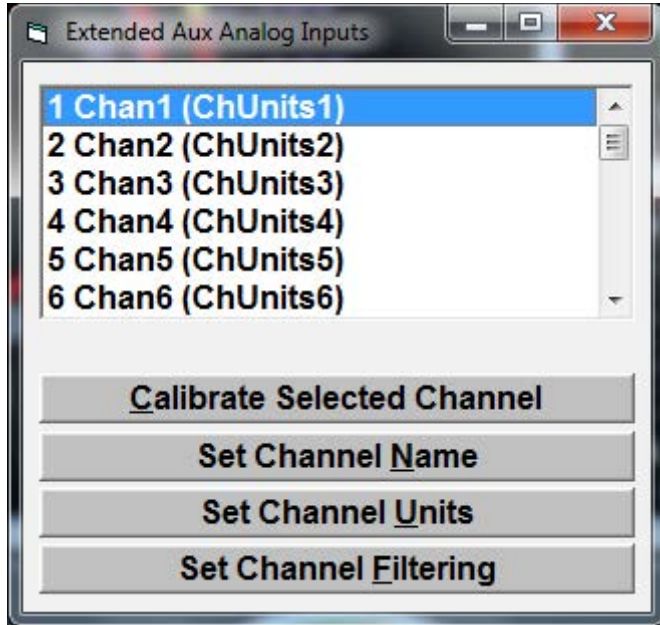


List box	Description
Channel list	The list of all channels, when configuring a channel, all the user/operator has to do is select it and then press the buttons below to configure it.

Buttons	Description
Calibrate Selected Channel	Displays a screen that will allow the user/operator to calibrate the selected channel.
Set Channel Name	Allows the user/operator to give a name to the selected channel.
Set Channel Units	Allows the user/operator to assign a unit of measure to the selected channel.
Set Channel Filtering	Allows the user/operator to assign filtering to the selected channel.

Calibrate Selected Channel

This screen give the user the ability to calibrate an analog input channel.

Extended Aux Analog Input Calibration		
Input Name	Some analog input...	
Current Raw Voltage	0	Volts/Hz
Current Raw Value	0	(Units)
Current Filtered Voltage	0	Volts/Hz
Current Filtered Value	0	(Units)
Zero Calibration Point Value	0	(Units)
+ Span Calibration Point Value	0	(Units)
- Span Calibration Point Value	0	(Units)
Zero Offset Voltage	0	Volts/Hz
+ Span	0	(Units) / Volt/Hz
- Span	0	(Units) / Volt/Hz
Zero		OK
Span (+ and -)		Cancel
+ Span	- Span	

Field	Description
Input Name	The name of the analog input channel. Please note that this is read only.
Current Raw Voltage	The current voltage of the analog input channel. Please note that this is read only.
Current Raw Value	The current value of the analog input channel. Please note that this is read only.
Current Filtered Voltage	The current filtered voltage of the analog input channel. Please note that this is read only.
Current Filtered Value	The current filtered value of the analog input channel. Please note that this is read only.

Zero Calibration Point Value	The current value of the calibration point when it is zeroed.
+ Span Calibration Point Value	The current value of the calibration point when it is positive spanned.
- Span Calibration Point Value	The current value of the calibration point when it is negative spanned.
Zero Offset Voltage	The corresponding zero voltage when the calibration point is zeroed.
+ Span	The corresponding positive span voltage when the calibration point is positively spanned.
- Span	The corresponding negative span voltage when the calibration point is negatively spanned.

Buttons	Description
Zero	When pressed will perform a zero on the selected analog input channel.
Span (+ and -)	When pressed will perform a plus and minus span on the selected analog input channel.
+ Span	When pressed will perform a plus span on the selected analog input channel.
- Span	When pressed will perform a minus span on the selected analog input channel.
OK	When pressed will save the calibration values away.
Cancel	When pressed will dismiss the screen. Please note that if any calibration values have changed then the user will be prompted to save away any values.

Auxiliary I/O Setup - PDAQ3000 Input Diagnostics

This menu item allows access to the setup screen used to diagnose the extended analog inputs used for extra data acquisition hardware, e.g. exhaust gas oxygen sensors, pressure sensors, etc.

Differential Analog Inputs				Thermocouple Inputs			
1	UNKNOWN (UNKNOWN)	0.000	0.000	1	UNKNOWN (Deg F)	0.000	0.000
2	UNKNOWN (UNKNOWN)	0.000	0.000	2	UNKNOWN (Deg F)	0.000	0.000
3	UNKNOWN (UNKNOWN)	0.000	0.000	3	UNKNOWN (Deg F)	0.000	0.000
4	UNKNOWN (UNKNOWN)	0.000	0.000	4	UNKNOWN (Deg F)	0.000	0.000
5	UNKNOWN (UNKNOWN)	0.000	0.000	5	UNKNOWN (Deg F)	0.000	0.000
6	UNKNOWN (UNKNOWN)	0.000	0.000	6	UNKNOWN (Deg F)	0.000	0.000
7	UNKNOWN (UNKNOWN)	0.000	0.000	7	UNKNOWN (Deg F)	0.000	0.000
8	UNKNOWN (UNKNOWN)	0.000	0.000	8	UNKNOWN (Deg F)	0.000	0.000
Single-Ended Analog Inputs				Frequency Inputs			
1	UNKNOWN (UNKNOWN)	0.000	0.000	9	UNKNOWN (Deg F)	0.000	0.000
2	UNKNOWN (UNKNOWN)	0.000	0.000	10	UNKNOWN (Deg F)	0.000	0.000
3	UNKNOWN (UNKNOWN)	0.000	0.000	11	UNKNOWN (Deg F)	0.000	0.000
4	UNKNOWN (UNKNOWN)	0.000	0.000	12	UNKNOWN (Deg F)	0.000	0.000
5	UNKNOWN (UNKNOWN)	0.000	0.000	13	UNKNOWN (Deg F)	0.000	0.000
6	UNKNOWN (UNKNOWN)	0.000	0.000	14	UNKNOWN (Deg F)	0.000	0.000
7	UNKNOWN (UNKNOWN)	0.000	0.000	15	UNKNOWN (Deg F)	0.000	0.000
8	UNKNOWN (UNKNOWN)	0.000	0.000	16	UNKNOWN (Deg F)	0.000	0.000
				1	UNKNOWN (UNKNOWN)	0.000	0.000
				2	UNKNOWN (UNKNOWN)	0.000	0.000
				3	UNKNOWN (UNKNOWN)	0.000	0.000
				4	UNKNOWN (UNKNOWN)	0.000	0.000

Please note

There are no label for the columns of data, just be aware that the 1st column is the channel name, the 2nd column is the channel voltage and the 3rd column is the channel value.

Field	Description
Channel Name	The name of the analog input channel.
Channel Voltage	The current voltage of the analog input channel.
Channel Value	The current value of the analog input channel.


- 1- 8 = differential analog inputs on main unit
- 9-16 = single ended analog inputs on PDQ30 add-on unit
- 17-32 = type-K thermocouple inputs on PDQ30 add-on unit
- 33-36 = frequency inputs on main unit

Auxiliary I/O Setup - JBox

This menu item allows access to the setup screens for the JBox data acquisition device.

Auxiliary I/O Setup - JBox – RPM Options

This menu item allows the user to configure the engine RPM input options on the JBox.

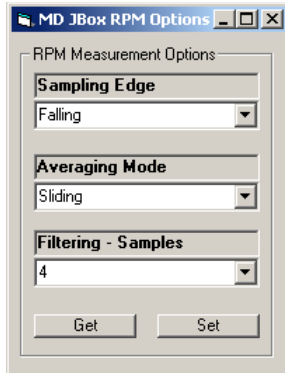

Sampling Edge

Specifies whether the falling or rising edge of a pulse should be used for triggering.

Averaging Mode

Specifies whether Framing or Sliding mode averaging of multiple samples should be used.

Filtering – Samples

Specifies how many RPM pulses should be used for averaging.

Auxiliary I/O Setup - JBox - Enable

Clicking this item will attempt to start communicating with the JBox.

Auxiliary I/O Setup - JBox - Disable


Clicking this item will stop communicating with the JBox.

Auxiliary I/O Setup - JBox – COM Port

This menu item allows the user to specify the RS232/COM port (via USB<->RS232 bridge in the JBox) for the JBox data acquisition device.

Auxiliary I/O Setup - JBox - Diagnostics

This menu item allows access to the diagnostic screen for the JBox data acquisition device.

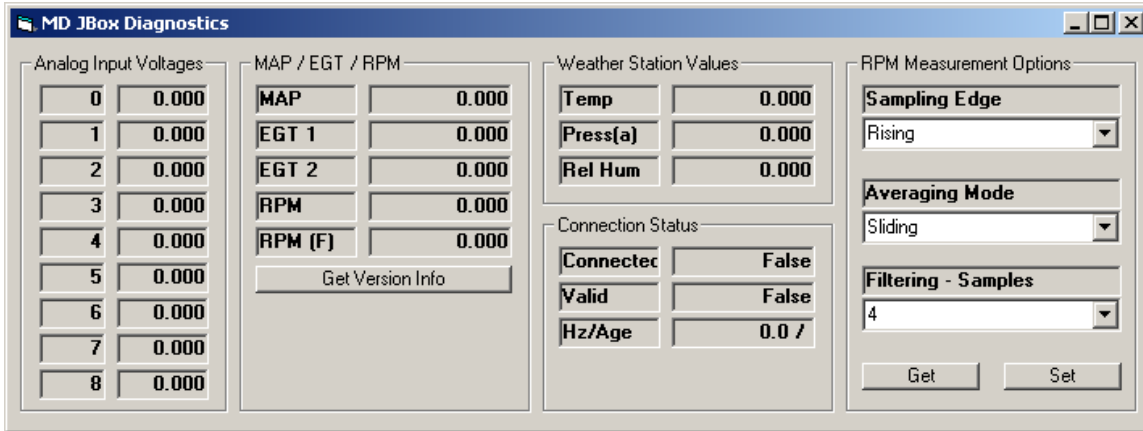


MAP = Manifold Absolute Pressure

EGT = Exhaust Gas Temperature

(F) = Filtered (for RPM)

Auxiliary I/O Setup – MD-DAC32 Data Acquisition

This menu item allows access to the setup screens for the using 1/2 MD DAC32 boards as data acquisition devices.

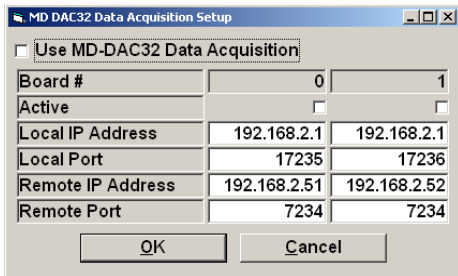

Board # Either 0 or 1

Active Must be checked to be used

Local IP Address The PC's IP address – must be the same base network as the device

Local Port The PC's IP port number to use

Remote IP Address The device's IP address – must be the same base network as the PC

Remote Port The device's IP port number to use

AWD Base Setup

This screen allows the operator to setup the various I/O channels used by the all-wheel-drive base hardware.

FWD Base Setup

Enable FWD Base

Latched Fault:

Parameters

Max Wheelbase:

Min Wheelbase:

Input Channels

Use Extend Limit D/I

Active High

Board: Channel:

Use Retract Limit D/I

Active High

Board: Channel:

Use Analog Position Feedback

Board: Channel:

Status

Feedback Voltage:

Feedback Position:

Calibration

Zero Position Feedback:

Span Position Feedback:

Movement

Target Wheelbase:

Screen Fields	Description
Enable FWD Base	Tells if the Four Wheel Base control sub-system should be used or not.
Latched Fault	Shows if the sub-system has encountered a fault condition.
Reset	Use this button to clear any latched faults from the sub-system.
Max Wheelbase	The maximum wheelbase distance the dynamometer is physically capable of.
Min Wheelbase	The minimum wheelbase distance the dynamometer is physically capable of.
Input Setup	Use this button to view the input channel setup panel.
Output Setup	Use this button to view the output channel

	setup panel.
INPUT CHANNEL VALUES	
Use Extend Limit D/I	Tells if the extend limit switch digital input should be used.
Active High	If checked, 5 volts indicates a “True” value, otherwise 0 volts.
Board	The board this input is on (1-2)
Channel	The channel this input is on (0-23)
Use Retract Limit D/I	Tells if the retract limit switch digital input should be used.
Active High	If checked, 5 volts indicates a “True” value, otherwise 0 volts.
Board	The board this input is on (1-2)
Channel	The channel this input is on (0-23)
Use Analog Position Feedback	Tells if the wheelbase measuring analog input should be used.
Board	The board this input is on (1-2)
Channel	The channel this input is on (0-7)
OUTPUT CHANNEL VALUES	
Use Base Extend D/O	Tells if the extend digital output should be used.
Enable With High (Else Low)	If checked, 5 volts will be driven out to enable the device, otherwise 0 volts.
Board	The board this input is on (1-2)
Channel	The channel this input is on (0-23)
Use Base Retract D/O	Tells if the retract digital output should be used.
Enable With High (Else Low)	If checked, 5 volts will be driven out to enable the device, otherwise 0 volts.

Board	The board this input is on (1-2)
Channel	The channel this input is on (0-23)
Use Base Lock Brake D/O	Tells if the base locking brake digital output should be used.
Enable With High (Else Low)	If checked, 5 volts will be driven out to enable the device, otherwise 0 volts.
Board	The board this input is on (1-2)
Channel	The channel this input is on (0-23)

Status Values	Description
Feedback Voltage	The voltage measured on the wheelbase measuring analog input.
Feedback Position	The calibrated wheelbase distance measured on the wheelbase measuring analog input.
Extending	Indicates if the base is in motion, extending.
At Limit	Indicates that the base has encountered the extend limit switch.
Base Lock	Indicates that the base locking brake is enabled.
Retracting	Indicates if the base is in motion, retracting.
At Limit	Indicates that the base has encountered the retract limit switch.

Calibration Commands	Description
Zero	Click this button to set the zero calibration point, after positioning the base to the minimum achievable wheelbase.
Span	Click this button to set the span calibration point, after positioning the base to the maximum achievable wheelbase.

Movement Commands	Description
Retract To Limit	Starts moving the base to the retract limit (minimum wheelbase).
Extend To Limit	Starts moving the base to the extend limit (maximum wheelbase).
Set Wheelbase	Starts moving the base to the target wheelbase.
Target Wheelbase	The target wheelbase to move the base to.
Stop FWD Base Movement	Immediately stops all movement of the FWD base.

AWD Speed Follower Modes

This is where the user can setup the control mode and options for the dynamometer.

AWD Speed Follower Modes

Control Mode

Disabled

Front Follows Rear

Rear Follows Front

Control Options

Use Feed-Forward Control

Lbs / Volt 1000.0

Base Speed (MPH) 50.0

Closing Time (Seconds) 1.0

OK Cancel

CONTROL MODE

Field	Description
Disabled	If checked On then the control mode is disabled.
Front Follows Rear	If checked On then the front rolls follow the rear rolls.
Rear Follows Front	If checked On then the rear rolls follow the front rolls.

Please note


Disabled, Front Follows Rear and Rear Follows Front are mutually exclusive so only one can be selected.

CONTROL OPTIONS

Field	Description
Use Speed Forward Control	When checked will cause the dynamometer to use feed forward (really, open-loop) control.
Lbs/Volt	The Lbs/Volt generated by PAUs controlled by the speed follower (PAUs are specified in the Dyno Parameters screen).
Base Speed (MPH)	The speed follower base speed in MPH. This is a MPH value corresponding to the base RPM for motors, or can be set to 200 for eddy-current PAUs.
Closing Time (Seconds)	Speed follower open loop close time in seconds, i.e. how fast the speed-follower tries to approach its target speed.

Timing Light Tree Setup

This screen allows the operator to manually control the drag racing timing lights.

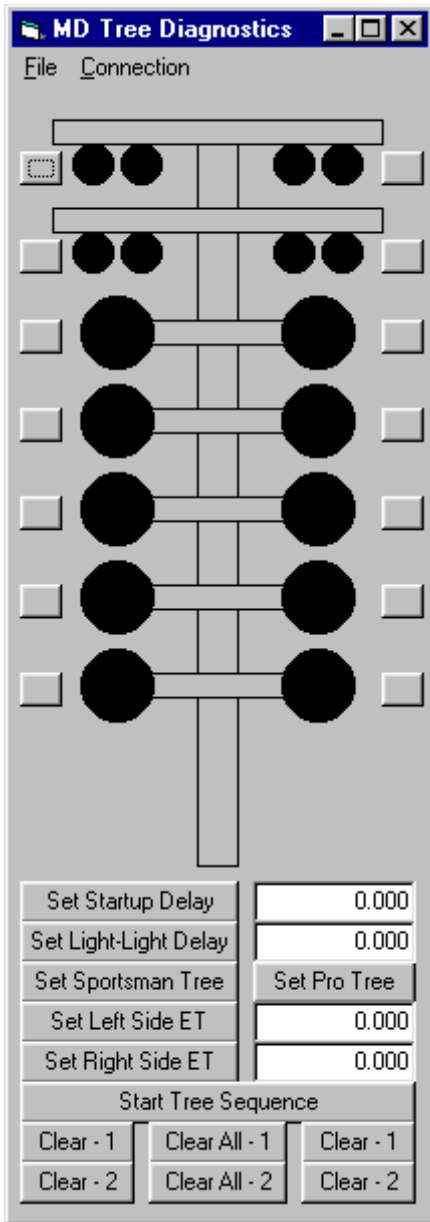

You can turn individual lights on/off by clicking on the small buttons beside each light.

The “File” menu lets you run a little “dancing tree” routine that makes the timing lights flash through various patterns, and it lets you exit this screen.

The “Connection” menu lets you connect or disconnect from the timing lights.

NOTE: If you successfully connect to the timing lights using this screen, the PowerDynePC software will remember the serial port that you connected on.

Set Startup Delay

Lets you set the startup delay (time from when the tree sequence is started to when the lights start moving down the tree).

Set Light-Light Delay

Lets you set the light-to-light delay used in the tree sequence. Sportsman tree is 0.5 seconds light-to-light, a pro tree is run at 0.4 seconds light-to-light.

Set Sportsman Tree

Sets the tree to use the sportsman tree sequence (yellow-yellow-yellow-green).

Set Pro Tree

Sets the tree to use the pro tree sequence (yellow- green).

Set Left Side ET

Sets the estimated ET for the driver using the left side of the tree, in seconds, for staggered timing.

Set Right Side ET

Sets the estimated ET for the driver using the right side of the tree, in seconds, for staggered timing.

Start Tree Sequence

Starts the tree sequence.

Clear – 1 / Clear All – 1 / Clear – 1

Clear – 2 / Clear All – 2 / Clear – 2

Various ways to turn the lights on the tree off.

Scan Tool Setup

This menu item gives the user access to the following screen used to configure the DPA III Plus:




Field	Description
Device Active	When checked means that the device (DPA III Plus) is active and connected to the vehicle. If unchecked means it is not active.
Com (Serial) Port	The communication port that is being used.
Bus Type	The protocol to use when talking to the vehicle through the DPA III Plus <ul style="list-style-type: none">• J1708• J1939• J1708 & J1939
Lock Chs To Bus	Lock down data bus, when checked means to always use the selected Bus Type

Engaged Gear	<p>A drop down list box that specifies where The engaged transmission gear will come from and can be one of the following:</p> <ul style="list-style-type: none"> • Try J1708 First • Try J1939 First • J1708 Always • J1939 Always
Eng CInt Temp	<p>A drop down list box that specifies where The engine coolant temperature will come from and can be one of the following:</p> <ul style="list-style-type: none"> • Try J1708 First • Try J1939 First • J1708 Always • J1939 Always
Eng Oil Press	<p>A drop down list box that specifies where The engine oil pressure will come from and can be one of the following:</p> <ul style="list-style-type: none"> • Try J1708 First • Try J1939 First • J1708 Always • J1939 Always
Eng Oil Temp	<p>A drop down list box that specifies where The engine oil temperature will come from and can be one of the following:</p> <ul style="list-style-type: none"> • Try J1708 First • Try J1939 First • J1708 Always • J1939 Always

Eng RPM	<p>A drop down list box that specifies where The engine RPM will come from and can be one of the following:</p> <ul style="list-style-type: none"> • Try J1708 First • Try J1939 First • J1708 Always • J1939 Always
Fuel Rate	<p>A drop down list box that specifies where The fuel rate will come from and can be one of the following:</p> <ul style="list-style-type: none"> • Try J1708 First • Try J1939 First • J1708 Always • J1939 Always
Inst Econ	<p>A drop down list box that specifies where The instantaneous MPG will come from and can be one of the following:</p> <ul style="list-style-type: none"> • Try J1708 First • Try J1939 First • J1708 Always • J1939 Always
Speed	<p>A drop down list box that specifies where The road speed will come from and can be one of the following:</p> <ul style="list-style-type: none"> • Try J1708 First • Try J1939 First • J1708 Always • J1939 Always

CAN Export Setup

This menu item gives the user access to the following screen used to configure CAN exporting.

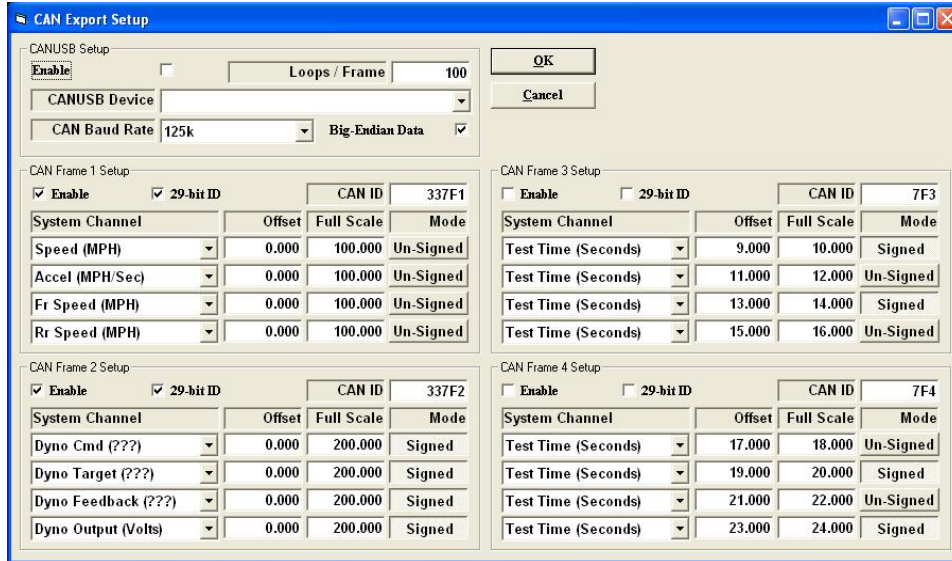


Item	Description		
Enable	Enables use of the CANUSB device for exporting of system channel values via a CAN network.		
Loops/Frame	Specifies how many 0.01 second update loops per CAN frame write. A value of "1" will generate 100 CAN frames/second, a value of "100" will generate only 1 CAN frame/second.		
CANUSB Device	Specifies the D2XX device name for the CANSUB device used to export data to a CAN network. A CANSUB device, configured to use the "D2XX" drivers (rather than VCP or Virtual Com Port drivers), must be installed and configured to populate this list.		
CAN Baud Rate	Specifies the Baud rate to use on the CAN bus.		
Big-Endian Data	If checked, exported data will be "Big Endian" (Motorola) format, otherwise it will be in "Little Endian" (Intel) format. This applies to the actual data fields only.		
CAN Frame Setup (1..4)	Each of 1..4 CAN frames can be defined. Each enabled CAN frame will be transmitted sequentially in a loop. If only (1) frame is enabled, and "Loops/Frame" is set to "1", then (100) CAN updates per second will be available for (4) system channel values. With more enabled CAN frames, or a larger "Loops/Frame" value, less updates will be possible.		
	<table border="1"> <thead> <tr> <th>Item</th> <th>Description</th> </tr> </thead> <tbody> </tbody> </table>	Item	Description
Item	Description		

	Enable	Enables transmission of the selected frame.	
	29-Bit ID	Selects use of 29-bit CAN IDs (else 11-bit CAN IDs will be used).	
	CAN ID	Specifies the CAN ID value to use for the selected frame, in hexadecimal . For 29-bit IDs this will be an 8-hex-character value (“1FFFFFFF”), for 11-bit IDs this will be a 3-hex-character value (“7FF”).	
	Value Setup (1..4)	System Channel	Specifies a system channel for this slot
	Offset	An offset to be applied to the system channel value, before scaling to “Full Scale”.	
	Full Scale	The full scale value, that will correspond to 65535 (unsigned) or 32727 (signed).	
	Mode	Signed (+/- 32767) or unsigned (0..65535) scaling mode.	

Calibration / Verification Routines - Warmup

This screen allows the operator to perform an automatic dynamometer warm-up routine.

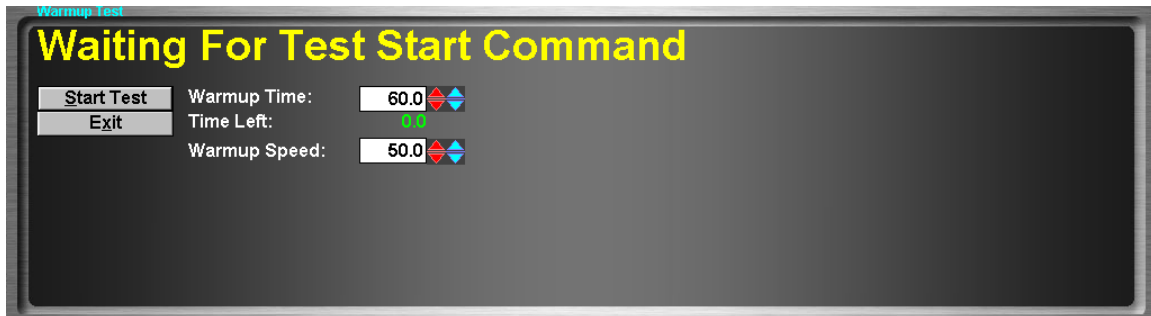


This test is used to bring the dynamometer's bearings, belts, etc. up to a warmed up condition.

To perform a warmup test, follow the procedure below.

- Enter the desired warm-up time, in seconds.
- Click the “**Start Test**” button.
- The dynamometer will automatically enable its built-in warm-up motor, and run for the specified time. When the warm-up period is expired, the dynamometer will automatically stop.

Calibration / Verification Routines - Parasitics Measurement

This screen allows the operator to perform an automatic dynamometer parasitics measurement routine.

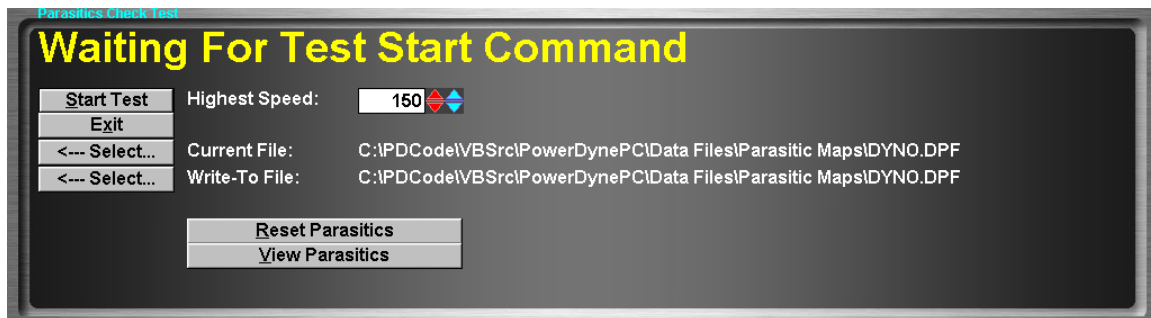

This test is used to measure and record the dynamometer's parasitic losses due to bearings, belts, etc. The recorded data is reported as **"Parasitics Torque"**, **"Parasitics Force"**, etc., and is a component in the **"Static Torque"**, **"Static Force"**, etc. and **"Total Torque"**, **"Total Force"**, etc. values.

There are two (2) methods for keeping track of parasitic losses of a dynamometer. The traditional and simplest method is to measure the parasitic losses of the dynamometer with no vehicle on the dynamometer. This provides a consistent value that can be used with all vehicles tested. A second method, which accounts for increased dynamometer bearing loadings, tire-to-roll interface losses, etc. is to perform a parasitic losses measurement test with the vehicle to be tested on the dynamometer. This second method is more convenient for those using dynamometers without built-in calibration motors, and leads to greater repeatability and higher reported power values for the vehicles tested.

Since the parasitic losses data measured with a vehicle on a dynamometer is specific to the vehicle that was on the dynamometer when the test was performed, we have provided a method for storing and using as many parasitic losses data sets as required.

To Zero The Parasitic Losses Data

It is occasionally desirable to set the parasitic losses data to all 0 values. This can be accomplished by clicking on the **"Reset Parasitics"** button. This will create a new parasitic data set that indicates no parasitic losses at any speed, and it will save the all-zero data in a parasitic data set file name **"Zero.DPF"**.

To Select a Parasitic Losses Data Set from the Existing Data Sets

In the event that vehicle-specific parasitic losses data is being used, a method is required to recall the parasitic losses data for a specific vehicle. This screen may be used for this purpose, by simply clicking on the **"Select..."** button next to the **"Current File"** field, and using the typical Windows file-open dialog box to select the parasitic losses data file to be used. Once a data file has been selected, the dynamometer will report the parasitic losses for that vehicle.

To Perform a Parasitic Losses Measurement Test


Whether dynamometer-only or dynamometer-vehicle parasitic losses data is in use, a parasitic losses measurement test must be performed at some point in order to measure the parasitic losses of the dynamometer or the dynamometer-vehicle system.

To perform a parasitics measurement test, follow the procedure below.

- Enter the maximum speed for which parasitics data should be measured and recorded.
- Use the “**Select...**” button to specify the “**Write-To File**”. You may name your file anything you desire, but you may wish to name a dynamometer-only parasitic losses file “**Dyno.DPF**”, and vehicle-specific parasitic losses data files “**<LicensePlate>.DPF**”, “**<CustomerName>.DPF**”, “**<VIN>.DPF**”, etc., to make finding old data files easier.
- Click the “**Start Test**” button to start the test. The software will wait until the measured speed goes above the maximum testing speed + 5.0 MPH, and then indicate that it has started measuring the parasitic losses of the dynamometer (and vehicle). If the vehicle is left on the dynamometer during testing, the transmission must be placed in neutral, and the brakes must not be touched during the coast-down phase of testing.
- Once the system’s speed decreases to ≤ 2.5 MPH, the test will automatically complete and save the recorded data to the selected “**Write-To**” file.
- If a vehicle is used to spin the dynamometer, and the vehicle is not to be left on the dynamometer during testing, **EXTREME CAUTION MUST BE USED. LIFT-OFF TYPE PARASITIC TESTING IS EXTREMELY DANGEROUS AND MAY CAUSE EQUIPMENT DAMAGE, VEHICLE DAMAGE, FACILITY DAMAGE, PERSONAL INJURY AND/OR DEATH. IF YOU CAN NOT ENSURE THE SAFETY OF YOURSELF, THOSE AROUND YOU AND ALL MATERIAL ITEMS WITHIN THE TESTING FACILITY, DO NOT ATTEMPT LIFT-OFF TYPE PARASITIC MEASUREMENTS.**

Calibration / Verification Routines - Parasitic Viewer

This screen allows the operator to view the current parasitic losses data as a graph.

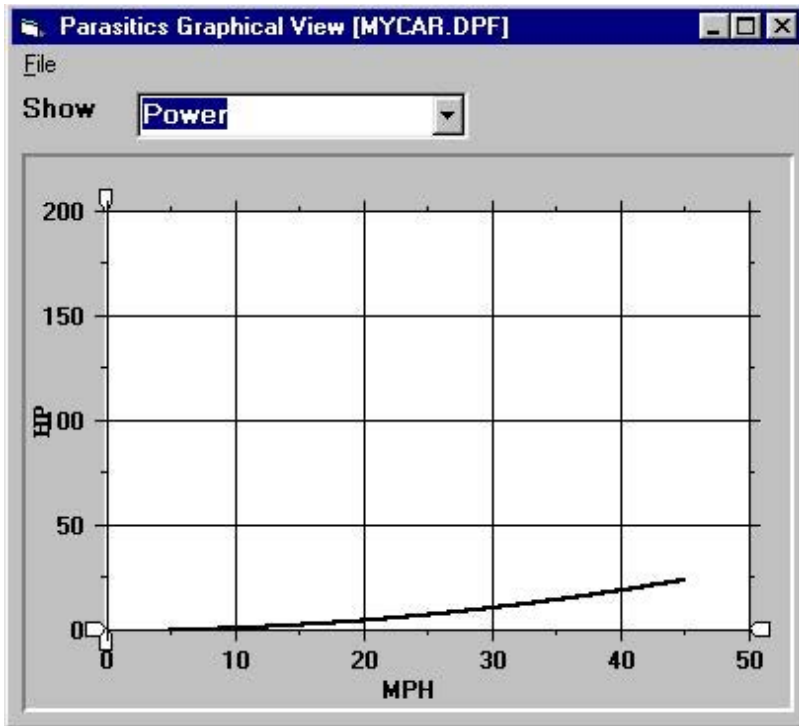


This screen allows the operator to view the current parasitic losses data in a graphical format. The parasitic losses data may be viewed as torque (dynamometer roll shaft torque), power (hp) or force versus system speed.

You can also print the graph using the "File – Print" command on the menu.

Note: Several of these screens can be visible at one time, so that the operator can compare different parasitic losses data sets.

Calibration / Verification Routines - CoastDown Check

This screen allows the operator to perform an automatic dynamometer coast-down test.

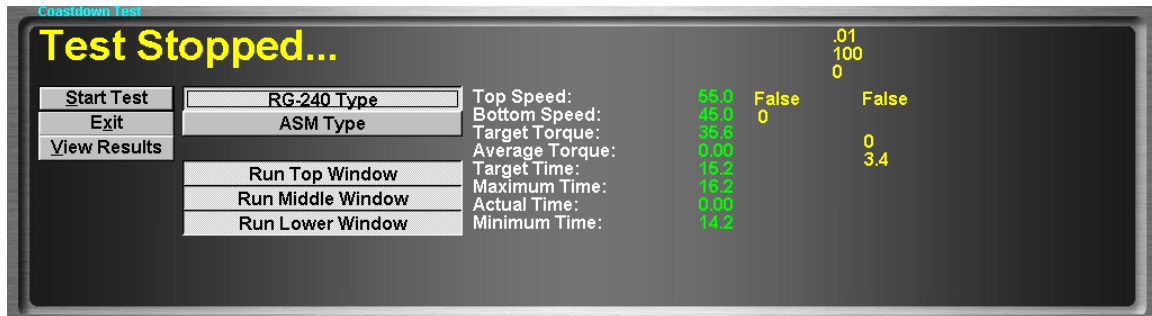


This test is used to perform an automatic coast-down verification test. Coast-down tests are used to verify that the dynamometer is properly calibrated by decelerating the dynamometer's inertia using the dynamometer's PAU. The time required to decelerate a known mass by a known amount using a known force can be calculated, and the actual time required is compared against the calculated time.

To Perform a CoastDown Test

- Select the desired coast-down test type, either RG-240 type or ASM type.
- Select the desired windows to be run using the “**Run xxx Window**” check boxes.
- Click the “**Start Test**” button.
- This test requires a built –in warm-up motor. Attempting to perform vehicle-lift-off coast-down tests is **EXTREMELY DANGEROUS (SEE THE WARNINGS IN THE PARASITIC MEASUREMENT TEST AND ELSEWHERE IN THIS DOCUMENT)**, and it is very difficult to achieve repeatable results in that fashion.
- The dynamometer will automatically engage its built-in warm-up motor, accelerate to the highest required speed, apply the required load, and time the system's deceleration through the selected windows.
- Once the dynamometer has come to a stop, the test results can be viewed, partially on this screen, and in more detail by viewing the screen available via the “**View Results**” button.

Calibration / Verification Routines - Inertia Check Test

This screen allows the operator to perform an automatic dynamometer inertia measurement routine.

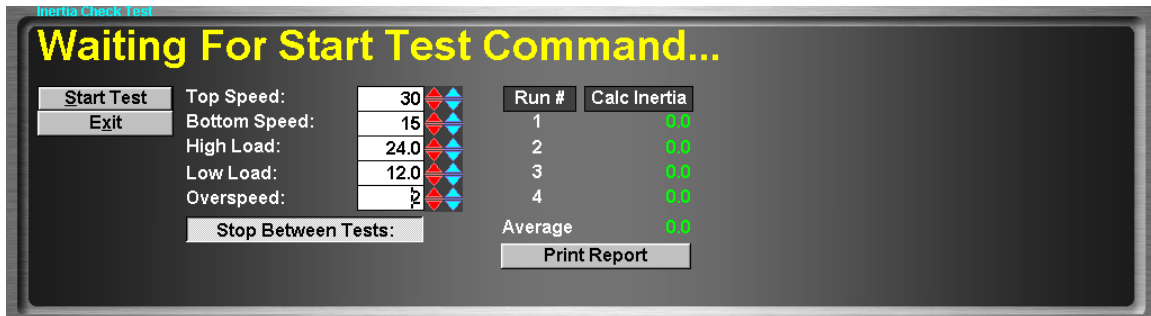

This test is used to measure the inertia (actually, vehicle-equivalent weight) or the dynamometer.

This test is used in manufacturing and test-out at Mustang Dynamometer, and is not normally used in the field, unless mechanical changes are made to the dynamometer.

This test performs 4 sets of 2 coast-down test pairs, and uses the measured differences in deceleration at various loading forces to determine the inertia of the dynamometer.

To Perform an Inertia Check Test

- Enter the desired coast-down window top speed, in MPH. (Please use the default value, 30)
- Enter the desired coast-down window bottom speed, in MPH. (Please use the default value, 15)
- Enter the desired coast-down window high load value, in HP. (Please use the default value, 24)
- Enter the desired coast-down window low load value, in HP. (Please use the default value, 12)
- Enter the desired over-speed value for the coast-down window (Please use the default value, 10)
- Click the “**Start Test**” button.
- This test requires the built-in warm-up motor option. **DO NOT ATTEMPT TO PERFORM THIS TEST USING VEHICLE-LIFT-OFFS, AS THEY ARE EXTREMELY DANGEROUS.**
- Four (4) sets of two (2) coast-down windows will be performed. When the final coast-down test has been performed, the dynamometer’s inertia (vehicle-equivalent-weight) value will be known.

Calibration / Verification Routines - Automatic PID Calculator

This screen allows the operator to perform an automatic PID tuning routine.

This routine allows a knowledgeable operator to calculate appropriate PID constant values for the dynamometer at hand. This routine is normally only used by Mustang Dynamometer personnel, since considerable knowledge is required to successfully use this routine.

Screen Fields	Description
Torque / Speed Mode Selection	Determines if the PID values for torque or speed mode will be tuned.
Loop Update Rate	The loop update time, expressed as the number of updates per second, typically 100.
Initial P Constant Value	The starting value for the P constant.
Initial I Constant Value	The starting value for the I constant (0)
Initial D Constant Value	The starting value for the D constant.
Test Target	The target loading value to be used during step

	testing.
Starting Value	The starting loading value to be used during step testing.
Desired Response Time	The desired control loop response time, in seconds (torque \approx 0.1 to 0.6 seconds, speed \approx 1 to 10 seconds).
Max Response Time	The maximum time that the control loop will be given to achieve a 90% step response before the next loop of the test routine is started – should be several times the desired response time.
Max Settling Abs. Error	The maximum absolute error between the feedback value and the target value that can be considered part of a settled response (typically a few percent of the target value).
Desired Settling Time	The desired control loop response time, in seconds (torque \approx 0.1 to 0.6 seconds, speed \approx 1 to 10 seconds).
Max Settling Time	The maximum time that the control loop will be given to achieve a 90% step response before the next loop of the test routine is started – should be several times the desired response time.

Current Values	Description
Target	The current target for the control loop – may be the starting value or the actual target value.
Feedback	The current feedback value for the control loop.
Response Time	The measured 90% step response time from the last test loop.
Settling Time	The measured step settling time from the last test loop.
Output Voltage	The current control loop output voltage (to the PAU amplifier).


Calculated Values	Description
P Constant	The calculated P constant for the control loop.
D Constant	The calculated D constant for the control loop.
Response Time	The measured response time using the P/I/D constants above.
Settling Time	The measured settling time using the P/I/D constants above.

To Perform Automatic PID Tuning

- Two (2) operators are required to perform this routine.
- Select either “**Torque**” or “**Speed**” mode tuning.
- Enter the initial values for the PID constants.
- Enter the testing routine parameters (not described here; if you don’t know how to do this, please don’t try as you may cause yourself more trouble than benefit).
- Start a **SECURELY RESTRAINED** vehicle with **AN EXPERIENCED DRIVER** running on the dynamometer.
- Click the “**Start Testing**” button. The software will perform numerous step-response tests to obtain PID values that meet the specified response criteria.
- The “**View Response**” button may be used to view a graph of the actual response achieved.

Calibration / Verification Routines - Map Speed Encoder

This routine allows the operator to create a noise-canceling map of a speed encoder input, which is then used during testing to map the noise generated by the encoder itself out of the speed input. Use of these speed-canceling maps can greatly reduce speed/acceleration/force/torque/power noise during testing, particularly on dynamometers with large diameter rolls.

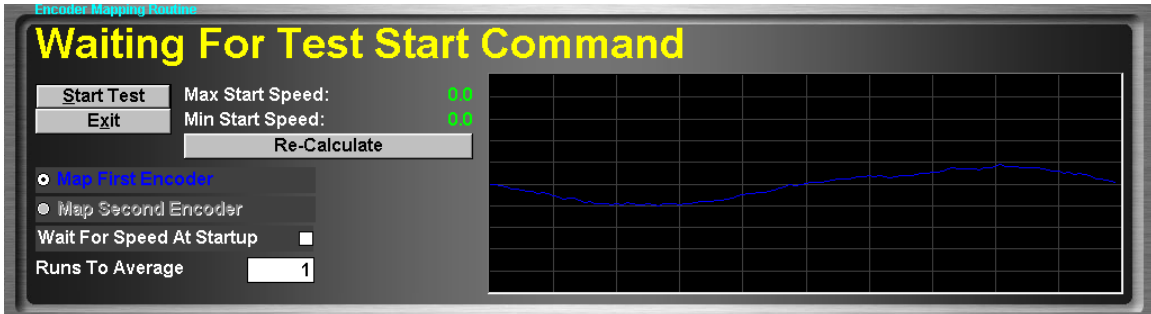

Map First Encoder	These select which encoder should be mapped during the routine. The first encoder is Map Second Encoder associated with the primary roll set of the dynamometer (the TWD roll set for configurable AWD systems).
Wait For Speed At Startup	If checked, the test routine will allow several seconds for the operator to accelerate the system up to an appropriate testing speed. 50 MPH is generally ideal for encoder mapping.
Runs To Average	Tells the mapping routine how many data sets to acquire and average into the final noise-canceling map. This value should generally be set to 5.
Min Start Speed	These values show the operator the minimum and maximum speeds that can be used Max Start Speed during the mapping routine.
Re-Calculate	Tells the software to re-calculate the minimum and maximum start speed values. These values depend on the physical configuration of the dynamometer, as well as on the I/O speed of your computer system.

Running A Mapping Routine

Ideally, noise mapping should be done without a vehicle present on the dynamometer, to avoid measurement errors due to vehicle inputs. However, vehicle-on-dynamometer mapping is possible, and generally works well. The routine is to simply accelerate the system up to approximately 50 MPH, click the “**Start Test**” button, and place the vehicle in neutral (or hold the clutch firmly to the floor). The test display will prompt the operator during testing, but the only requirement is that the system start at approximately 50 MPH, and that the system be freely

coasting during the mapping routine. Once the mapping routine has completed, a graph of the newly acquired noise-canceling map will be displayed, and the new data will be saved to disk.

Dyno Parameters

This screen allows the operator to specify dynamometer-specific parameters.

This screen is used to enter the dynamometer-specific information for the dynamometer in use. Various physical properties, along with several option values, can be entered on this screen.

Screen Fields	Description
Roll Diameter Rear	The diameter of the dynamometer's rolls, in inches/CM. Normally 8.575, 10.7 or 17.8, 30.0 or 50.0 inches.
Equivalent Weight Fr / Rr:	The vehicle-equivalent weight of the dynamometer, in pounds/Kg, usually 2000 pounds. The "Fr / Rr:" values are only used by the speed-follower logic, when feed-forward control is enabled (not recommended).
Parasitics Multiplier	A multiplier applied to the measured parasitic losses of the dynamometer. This value should be left at 1.0 for all

	dynamometers except those with very unusual designs (custom units only).
Start At Zero Speed	If checked, then dynamometers with motors (vs eddy-current PAUs) will be able to start from zero speed, for warmup, parasitic losses measurement, etc.
Cal Arm Length	The length of the PAU load-cell calibration arm, in inches/CM, usually 12.0, 18.0 or 24.0 inches.
Calibration Weight	The calibration weight value, normally stamped into the calibration weight at manufacture time, in pounds/Kg. The nominal value is typically 50.0 pounds.
Gear Ratio	The gear ratio between the dynamometer's rolls and the dynamometer's PAU(s). This value is normally 1.0, except on MD-1750 dynamometers, for which the value is 2.769. The value is (PAU-shaft revolutions per roll-shaft revolution).
Asymmetric Cal Arm	If an asymmetric external calibration fixture is used for the PAU load-cell calibration, then this box should be checked. This box is normally un-checked, except for MD-1750 dynamometers.
Front Speed Follower Uses	Specifies which PAUs are used by the speed follower in front speed follower mode.
Rear Speed Follower Uses	Specifies which PAUs are used by the speed follower in rear speed follower mode.
Use Absolute PAU Torque	If checked, the torque measured by the PAU load-cells is taken as its absolute value. This is convenient for eddy-current PAU type dynamometers that are operated in both directions. WARNING: This option must NOT be checked for motor-type dynamometers.
PAU #1 Is A Motor	Tells the system that it has a motor, rather than eddy-current PAUs. A motor can be used in warmup tests, parasitic losses measurements, etc.
Use PAU w/ Drag Brake	If checked, then on units with a "drag brake" (normally only used to stop inertia-only units), the PAU(s) will be enabled whenever the "drag brake" is enabled.
% Output	How hard the PAU(s) will be enabled when the option above is enabled and the "drag brake" output is on.

Test Stop Rate (MPH/Sec)	The speed ramp rate used to stop the dynamometer at the end of tests. Typical values are 3.0 to 8.0.
PAU Enable Delay	Certain motor drives (ABB), do not enable immediately as expected in response to a digital input – this results in wind-up of the PID loop in this software, and sudden loading changes at startup. For these drives, it is sometimes helpful to set this value to correspond to the time required for the drives to actually enable.
Maximum Testing Speed	The maximum allowed testing speed, based on the system’s design. If the actual speed exceeds this value, the system will trip out on a fault.
Wheel Speed Roll Diameter	The diameter of a fifth-wheel type speed sensor used to measure actual wheel speed.
Total Distance Travelled	The total distance driven on the dynamometer, in miles/KM. This value is reset if PowerDynePC.Ini is re-installed.
Total Running Hours	The total running time on the dynamometer, in hours. This value is reset if PowerDynePC.Ini is re-installed.
% Old Weight	For the speed/torque/acceleration inputs, an FIR filter constant used to filter the associated input values. This value must be in the range 0 to 99. 0 represent no filtering, while 99 represent a very heavy filter. These values should normally be left at 0, although values up to approximately 90 can be used to smooth measured values.
Max Change / Sample	For the speed/torque/acceleration inputs, a clipping value that limits the amount by which the associated input value can change per sample. Since the normal sampling rate is 100 Hz, you can establish these values by taking the maximum expected rate of change for a channel and dividing by 100. These values should normally be left at the default values, which are very large, and therefore do not impose any clipping on the input values.
Avg Front/Rear Speeds	If enabled, a second speed input will be used to create a weighted average speed input for the dynamometer. This is generally only used for shaft-coupled AWD dynamometers while in AWD mode to eliminate measurement noise due to driveshaft flex. If using ADA-1100 I/O boards, then the second ADA-1100 board must be installed and connected to a

	second speed encoder for this to be available.
Front Speed Weight	This value is used in creating the weighted average speed value discussed above. For a dynamometer with equal inertia values for each axle, this value should be nominally set to 0.500; for systems with different front/rear inertia values, this should be set to the fraction of the total inertia value accounted for by the front axle of the dynamometer. In practice, this value must be set to a slightly different value based upon tire/wheel/drive train inertia as applied to the front and rear roll sets. The ideal value for this parameter can be established by monitoring the “ Front Accel ” and “ Rear Accel ” channels, along with the “ Primary Accel MPH/sec ” value. When this value is set correctly, the “ Primary Accel MPH/sec ” value will track directly between the “ Front Accel ” and “ Rear Accel ” values, as can be seen using the Trace Graph Viewer , or any on-screen graph.

Engine RPM Input Source

Several input methods are supported for engine RPM measurement.

Engine RPM Input Source	Description
None	No engine RPM source is available.
Pulses	An engine RPM pulse train is routed through an on-board pulse train input. This input is not currently supported.
Analog	An analog input representing engine RPM is provided from an external RPM measurement device.
Calculated From Roll Speed	The engine RPM value is computed based on the dynamometer’s measured speed. This input yields a very high quality engine RPM value, but may not be accurate if wheel slip is encountered, and can only be used in a single gear, and only with manual transmissions.
From OBD-II Scan Tool	The engine RPM will be acquired via the OBD-II scan tool. This requires that the scan tool be configured to monitor engine RPM.
From Heavy Duty Scan Tool	The engine RPM will be acquired via the DPA-III+ scan tool interface. This requires that the scan tool be configured to

	monitor engine RPM.
RP1210-1708	The engine RPM will be acquired via the DPA-III/IV/V or NetBridge scan tool RP1210 interface using J1708. This requires that the scan tool be configured to monitor engine RPM.
RP1210-1939	The engine RPM will be acquired via the DPA-III/IV/V or NetBridge scan tool RP1210 interface using J1939. This requires that the scan tool be configured to monitor engine RPM.
JBox	The engine RPM will be acquired via the pulse input on the JBox data acquisition device.
Generic CAN	The engine RPM will be acquired via the specified signal in the generic CAN signal list.
Use Smart Filtering	This option enables a filtering scheme that works well with accurate RPM values from a slowly-updating source. It projects current values from past values, which works well when RPM is moving in one direction, but does not work well when RPM peaks.
Filter Value (0-99)	A filter value between 0 and 99, where 0 represents no filtering, and 99 represents a very heavy filter.

RPM Calibration	Description
Roll To Engine RPM Conversion	If engine RPM is being calculated from the dynamometer's speed input, then this value represent the multiplier used to go from dynamometer roll-shaft RPM to engine crankshaft RPM. This value is the calibration value resulting from the calibration routine discussed below.
RPM Adjuster	This value is a “ fix-all ” multiplier applied to the raw engine RPM value, to account for various problems encountered in engine RPM measurement.
Calibrate Analog RPM	This button will display a calibration screen used to calibrate the analog engine RPM input. Please see the section titled “ Analog RPM Input Calibration ” for information on this calibration screen.
Calibrate Speed Based RPM	This button will display a calibration screen used to calibrate the dynamometer's roll shaft speed to the engine's RPM. The

	operator has only to specify the engine RPM value to calibrate to, drive the vehicle in the gear that will be used for testing at the specified RPM, and click the “ OK ” button.
--	--

Options

The Options	Description
Use Fan During Tests	If checked, the optional vehicle-cooling fan will be automatically turned on/off at the beginning/end of tests.
Use Fan 2 During Tests	If checked, the second vehicle-cooling fan will be automatically turned on/off at the beginning/end of tests.
Allow Remote Test Start	If checked, a digital input may be configured to automatically start the current test remotely. This option is used in synchronizing multiple dynamometers, etc.
Use Encoder Noise Mapping	Noise on speed/accel/torque/power/force values can be greatly reduced (particularly on dynamometers with large diameter rolls) by using noise canceling maps for the encoders. If you enable this feature, you must create maps of the various speed encoders, using the mapping routine in this software. Also, at the start of any test routine, you will have to synchronize the encoder with the speed maps, either manually (by aligning the rolls with a mark on the dynamometer's frame) or automatically (by using the auto-synch feature described below).
Use Auto Speed Synch	Enables automatic synch detection for the encoder noise canceling logic, using a second one (1) pulse per revolution speed input associated with each (1 or 2) normal speed input. This will cause the auto-synch to pop up a small screen whenever a test routine is started anytime the dynamometer's speed has fallen below 2 mph.

Buttons

The following is a list of buttons that appear at the bottom of the screen along with the brief description of their functionality:

The Buttons	Functionality
Clear E-Stop & Shutdown Codes	This button will attempt to clear any E-Stop or shutdown codes.
More Hardware Options	Clicking on this button allows access to the hardware I/O channel assignments for the digital inputs and outputs used by the dynamometer control system.
OK	Save away any changes and close out of this screen.
Cancel	Just close out of this screen, nothing will be saved.

More Hardware Options - Digital Input Setup

This view of this screen allows the operator to specify the I/O channels used by the dynamometer control system for digital inputs.

Input Name	Active?	Board #	Channel #	Normal Logic	Read Filter	Name
E-Stop	<input checked="" type="checkbox"/> Yes	1	16	<input checked="" type="checkbox"/> Yes	1	EStop
Remote Run	<input checked="" type="checkbox"/> Yes	1	17	<input checked="" type="checkbox"/> Yes	1	Remote Run
Front Spinning Backwards	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	1	FrontSpinningBack
Rear Spinning Backwards	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	1	RearSpinningBack
FWD GearBox Engaged	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	1	FWDGear BoxEnga
FWD GearBox DisEngaged	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	1	FWDGear BoxDisEn
Motor Fault	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	1	MotorFault
Misc Fault 1	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	1	Misc Fault 1
Misc Fault 2	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	1	Misc Fault 2
Misc Fault 3	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	1	Misc Fault 3
Misc Fault 4	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	1	Misc Fault 4
Lift Override	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	1	LiftOverridden
Axle Speed Sw 1	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	1	AxleSpeedSwitch
Axle Speed Sw 2	<input checked="" type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes	1	AxleSpeedSwitch

Digital Inputs	Description
Name	The logical name for the signal
Active?	If checked, then the output will be read, otherwise the default value specified in the software's configuration ("Ini") file will be used.
Board	The I/O board used to read the input (1 -> 2)
Channel	The I/O channel used to read the input (8 -> 23)
Normal Logic	If this box is checked, the input will be taken to be active when the input voltage level is high, and inactive when the input level is low; otherwise, these levels will be reversed.

Read Filter	Specifies the number of consecutive input reads that must have the same value, before the actual input value will be changed.
Name	A name to display for this input.

More Hardware Options - Digital Input Channels

The following is a list of Digital Input Channels along with a description of their functionality:

Digital Input Channels	Description
Estop	This input tells the control software that an E-Stop condition has occurred, which will put the dynamometer into an unloaded coast-stop, disable and set to 0% reference the throttle controller (if connected), and prevent further testing until the E-Stop condition is resolved.
Remote Run	This input can be used to trigger the start of a test via an external signal. For this functionality to work, the test to be started must be active in the software (i.e. the test screen must be showing), and all required parameters must be set to acceptable values. When this input is triggered, the test will begin, and will run until this input returns to a “false” condition.
Front Spinning Backwards	This input indicates that the “Front Speed” channel is turning backwards, normally from a Hall-effect sensor with direction sensing.
Rear Spinning Backwards	This input indicates that the “Rear Speed” channel is turning backwards, normally from a Hall-effect sensor with direction sensing.
FWD Gearbox Engaged	This input indicates that the four-wheel-drive gearbox is engaged, from a feedback sensor.
FWD Gearbox DisEngaged	This input indicates that the four-wheel-drive gearbox is disengaged, from a feedback sensor.
Motor Fault	This input indicates a fault from a dynamometer motor drive.
Misc Fault 1/2/3/4	These user-configurable inputs indicate a fault from a fault sensor.
Lift Overridden	This input indicates that the manual lift-override is engaged.

More Hardware Options - Analog Input Setup

This view of this screen allows the operator to specify the I/O channels used by the dynamometer control system for analog inputs.

Input Name	Active?	Board #	Channel #	Use Frequency Input
Torque Input #1	<input checked="" type="checkbox"/> Yes	1	3	<input checked="" type="checkbox"/> Yes
Torque Input #2	<input type="checkbox"/> Yes	1	1	<input type="checkbox"/> Yes
Torque Input #3	<input type="checkbox"/> Yes	1	1	<input type="checkbox"/> Yes
Torque Input #4	<input type="checkbox"/> Yes	1	1	<input type="checkbox"/> Yes
Analog Engine RPM	<input type="checkbox"/> Yes	1	5	<input type="checkbox"/> Yes
Opacity	<input type="checkbox"/> Yes	1	3	<input type="checkbox"/> Yes

Analog Inputs	Description
Name	The logical name for the signal
Active?	If checked, then the output will be read, otherwise the default value specified in the software's configuration ("Ini") file will be used.
Board	The I/O board used to read the input (1 -> 2)
Channel	The I/O channel used to read the input (0 -> 7)
Use Frequency Input	If checked, then the frequency input with the specified channel number will be used, rather than the specified analog input channel. This is for use with frequency output torque sensors.

More Hardware Options - Analog Input Channels

The following is a list of analog input channels along with a description of their functionality:

Analog Input Channels	Description
Torque #1/2/3/4	These inputs are used to measure the torque applied to the dynamometer's roll shaft by the loading brake(s) (PAU(s)).
Analog Engine RPM	This input is used to read engine RPM from an external engine RPM measurement system, such as MD's own MD-RPM-2000 system.
Opacity	This input is used to measure diesel exhaust opacity using an external opacity-measuring device.

More Hardware Options - Digital Output Setup

This view of this screen allows the operator to specify the I/O channels used by the dynamometer control system for digital outputs.

Input Name	Active?	Board #	Channel #	Normal Logic
Lift Enable	<input type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes
Rear Lift Enable	<input type="checkbox"/> Yes	1	7	<input checked="" type="checkbox"/> Yes
AWD Clutch Enable	<input checked="" type="checkbox"/> Yes	1	5	<input checked="" type="checkbox"/> Yes
PAU #1 Enable	<input type="checkbox"/> Yes	1	0	<input checked="" type="checkbox"/> Yes
PAU #2 Enable	<input type="checkbox"/> Yes	1	2	<input checked="" type="checkbox"/> Yes
PAU #3 Enable	<input type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes
PAU #4 Enable	<input type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes
Fan Enable	<input type="checkbox"/> Yes	1	4	<input checked="" type="checkbox"/> Yes
Warmup Motor Enable	<input type="checkbox"/> Yes	1	2	<input checked="" type="checkbox"/> Yes
Warning Light Enable	<input type="checkbox"/> Yes	1	5	<input checked="" type="checkbox"/> Yes
Test Running	<input type="checkbox"/> Yes	1	6	<input checked="" type="checkbox"/> Yes
Soft E-Stop Out	<input type="checkbox"/> Yes	1	7	<input checked="" type="checkbox"/> Yes
Drag Brake Enable	<input type="checkbox"/> Yes	1	3	<input checked="" type="checkbox"/> Yes
AWD GearBox Engage	<input type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes
AWD GearBox DisEngage	<input type="checkbox"/> Yes	1	1	<input checked="" type="checkbox"/> Yes

Digital Outputs	Description
Name	The logical name for the signal
Active?	If checked, then the output will be read; otherwise the default value specified in the software's configuration ("Ini") file will be used.
Board	The I/O board used to read the output (1 -> 2)
Channel	The I/O channel used to read the output (0 -> 7)
Normal Logic	If this box is checked, the output will be driven high when the signal value is true, and low when the signal value is false; otherwise, these levels will be reversed.

More Hardware Options - Digital Output Channels

The following is a list of digital output channels along with a description of their functionality:

Digital Output Channels	Description
Lift Enable	This output drives the dynamometer's lift up and down.
Lift Power	This output must also be enabled for the main (or front) lift to be enabled (when using a PowerDyne controller board only).
Rear Lift Enable	This output will drive the rear lift of a 4WD dynamometer up and down. If this output is active, the "Rear Lift" control sub-menu will appear on the main menu bar of the software.
Rear Lift Power	This output must also be enabled for the rear lift to be enabled (when using a PowerDyne controller board only).
PAU #1/2/3/4 Enable	These outputs turn the loading PAU(s) of the dynamometer on/off.
Fan Enable	This output will drive a vehicle-cooling fan. If this output is active, the "Fan" sub-menu will appear on the main menu bar of the software.
Warmup Motor Enable	This output will drive a dynamometer warm-up motor during the warm-up, parasitic and coast-down tests, if the dynamometer is so equipped.
Warning Light Enable	This output will drive a warning light any time the dynamometer is actively running a test or the system's speed is above 0.1 MPH.
Test Running	This output would be driven high any time the dynamometer is actively running a test. This can be used to trigger external data acquisition software.
Soft E-Stop Out	This output will send an E-Stop signal to external systems to indicate that the dynamometer is in an E-Stop condition.
Drag Brake Enable	This output will drive the drag brake used on our MD-1750 model dynamometer, which is used to apply a light load to the dynamometer's rolls using the roll-lock brakes.

FWD Gearbox Engage	This output engages the four-wheel-drive gearbox. This output is driven momentarily when changing states, as the engage and disengage arms must not be continuously pushed.
FWD Gearbox DisEngage	This output disengages the four-wheel-drive gearbox. This output is driven momentarily when changing states, as the engage and disengage arms must not be continuously pushed.
Watchdog	This output is toggled at 100 Hz, resulting in a 50% duty cycle square wave output.
Cooling Fan Speed Source Select	This output can be used to select the source for a cooling fan motor drive, e.g. a front-mounted fan vs a rear-mounted fan. This output is always set to “False”, but the actual output level can be controlled by setting the normal/reverse logic level setting – this is saved in the Extended Dynamometer Configuration files, so “2WD.ExtCfg” and “4WD.ExtCfg” files can have different values in them.
Fan #2 Enable	This output echoes the “Fan Enable” output, and can be used to drive a second vehicle cooling fan, for example a squirrel-cage fan used to blow on an intercooler. This output can be controlled automatically during testing if the “Use Fan 2 During Tests” option is enabled.

More Hardware Options - Analog Output Setup

This view of this screen allows the operator to specify the I/O channels used by the dynamometer control system for analog outputs.

Input Name	Active?	Board #	Channel #	Min Volts	Max Volts
PAU #1 Signal	<input type="checkbox"/> Yes	1	0	0	5
PAU #2 Signal	<input type="checkbox"/> Yes	1	1	0	5
PAU #3 Signal	<input type="checkbox"/> Yes	1	1	0	5
PAU #4 Signal	<input type="checkbox"/> Yes	1	1	0	5
Analog Speed Out	<input type="checkbox"/> Yes	1	1	0	5
Analog Torque Out	<input type="checkbox"/> Yes	1	1	0	5
Warmup Motor Signal	<input type="checkbox"/> Yes	1	1	0	5

Analog Output	Description
Name	The logical name for the signal
Active?	If checked, then the current output will be written, otherwise the default value specified in the software's configuration ("Ini") file will be used.
Board	The I/O board used to write the output (1 -> 2)
Channel	The I/O channel used to write the output (0 -> 1)
Min Volts	The minimum voltage that will ever be written to the output channel. Useful for limiting the range of voltages that will be presented to the connected actuator.

Max Volts	The maximum voltage that will ever be written to the output channel. Useful for limiting the range of voltages that will be presented to the connected actuator.
-----------	--

More Hardware Options - Analog Output Channels

The following is a list of analog output channels along with a description of their functionality:

Analog Output Channels	Description
PAU #1/2/3/4 Signals	These outputs drive the amplifier that is used to drive the loading brake(s) (PAU(s)) of the dynamometer.
Analog Speed Out	This output can be used to drive the system's measured speed (or RPM) value out to external data acquisition systems.
Analog Torque Out	This output can be used to drive the system's measured torque (or force) value out to external data acquisition systems.
Warm-up Motor Signal	This output is used to provide an output level reference for the warm-up motor, if the dynamometer is so equipped.

Belt Tension Control

NOT FOR GENERAL USE


Parameter	Value	Unit
Weight To Compensate For	31397.000	Lbs
Max PAU Force	2250.000	Lbs
PAU Base Speed	350.000	RPM
Gs At 0% Compensation	0.070	Gs
Gs At 100% Compensation	0.120	Gs
Phase Out Start Speed	10.000	MPH
Phase Out End Speed	20.000	MPH
Accel Filter Value	0.800	0 - 0.999
Output Scaler	1.000	-10 - +10

This facility is only useful for (1) dynamometer, which you do not have.

DO NOT ENABLE THIS LOGIC.

System Parameters

This screen is used to view and/or set the system-level parameters.

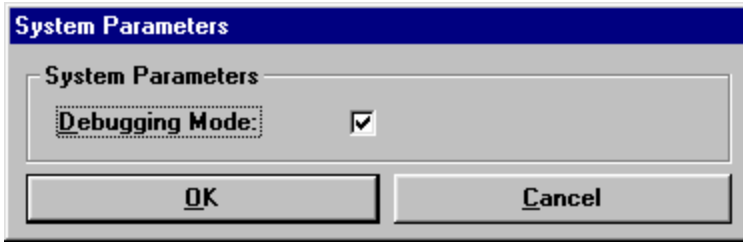

Parameter	Description
Debugging Mode	If selected, numerous debugging/diagnostic display values will be enabled, along with access to several normally disabled diagnostic forms.

Weather Station Parameters

This screen allows the operator to configure and/or calibrate the weather station facility.

In order to perform atmospheric corrections for torque/power values, the ambient atmospheric conditions must be known. This screen allows the operator to configure and/or calibrate the weather station facility of this software.

To Specify a Weather Station Input Type

Select one of the available options:

Options	Meaning
No Inputs Available	When selected means that No weather station values are available, no corrections can be performed.

Use User Supplied Values	The operator will manually enter the ambient atmospheric values.
Use Analog Inputs	An analog interface to weather station sensors is connected.

To Specify User-Supplied Weather Station Values

If no weather station hardware is connected, the operator may manually enter the ambient atmospheric condition values, in the “From User” column in the “Weather Values” group.

To Specify User-Defined Standard Conditions

If you do not wish to use the standard-specified standard conditions, you may specify alternate standard condition values, in the “User Defined” column in the “Standard Conditions” group. If the “Use User Defined Standards” check box is checked, the user defined values will be taken as the standard conditions values, otherwise the standard values from the selected specification will be used.

To Calibrate a Hardware Weather Station

If a hardware weather station is connected to the analog input interface, the operator must supply calibration values for each of the inputs. The appropriate calibration values are supplied with the sensors, and must be entered in the “Weather Values” group, under the “Low Cal Point” and “High Cal Point” headers. The “Low Cal Point” voltages are normally 0.0 volts, and the “High Cal Point” voltages are normally 5.0 volts. The low and high calibration point values for each sensor are sensor dependant.

Local vs Sea-Level Pressures

If you do not have weather station hardware, and wish to manually enter weather condition values, you must enter the local, absolute pressure. However, weather reporting services generally report not the absolute pressure, but the pressure that would be observed at sea-level at their location. To convert a locally reported, but sea-level corrected, pressure to an absolute local pressure, you need to know your altitude. If you enter the reported sea-level pressure and your own altitude, you can click on the “Set Local Pressure” button, to set the “From User” “Loc. Pressure” field to the absolute pressure at your facility.

Math Channel Parameters

This screen allows the operator to configure the math channels provided in the software.

Lin	Output Ch	Source #1	Operation	Source #2
1	Chan1	Distance	+	0 - 0
2	Chan2	Fr Speed	-	2 - 4
3				
4	Chan4	Rr Speed	*	Accel
5				
6				
7				
8				
9				

Channel Parameters

Channel Status In Use

Sourc Ch #1 Fr Speed

Source #1 Channel 0 0

Source Ch #2 Rr Speed

Source #2 Constants 2 4

Operation -

Output Channel Chan2

OK Cancel

Basics

The list at the top of the screen shows all (16) math channel definitions.

When you click on a line in the list, the parameters for that line are displayed in the lower part of the screen, so you can edit them.

To save the changes you make in the lower part of the screen, click on any other line in the list display – your changes will then be reflected in the line in the list you were editing. **Note: You must do this before clicking “OK” if you have made any changes to the line you were last viewing.**

Math values can be based on other system channels, or constants, or a mixture of both. Each line in the list is evaluated during each software update (normally 100 times/second), in order as displayed. This means that you can do math that is more complex than a single operation by using the output of line “X” as an input in line “X+1”. For example:

$$\text{ChX} = (\text{ChY} - 32)$$

$$\text{ChX} = (\text{ChX} * 0.556) \quad (\text{Faster than “* 5” then “/ 9”})$$

Channel Status

The line in the list will only be evaluated if this checkbox is clicked and says “In Use” – otherwise the line will be ignored.

Source Ch #1

A list box where the user can select a source channel from among the entire list of system channels – only used if “Source #1” is set to “Channel”.

Source #1

Lets the operator select whether a system channel (from the list box above), if set to “Channel”, or a constant (from the 2 text boxes to the right), if set to “Constants”, will be used as a source value for the calculation. Each system channel includes values in both internal (generally Imperial) and external (user selectable) units – if you are using a constant value, you can supply a value in both units – left text box is in internal units, right text box is in external (user selected) units. As of software version 1.40, the internal units values are updated, but are not used for any particular purpose, so the value is not critical, and should probably be set to the same value as the right text box. The operator is only really interested in the 2nd (right) text box, where a constant in the users desired units should be used (if units apply to the calculated value).

Source Ch #2 (See Source Ch #1)

Source #2 (See Source #1)

Operation

Lets the operator select the math operation to be performed. The operators work like this: Output = (Source #1 <operation> Source #2).

Output Channel

Lets the operator select a system channel to over-write with the calculated value. There are normally many channels that are not in use in any given system, so these channels are ideal targets for math channel output targets. For example, you can select from the (16) auxiliary analog inputs, or the (24) extended analog input channels – these are preferable because you can easily specify a name for those channels in the related setup screens. You may find it easier to select an output channel in this editor by first going to “Calibrations | Auxiliary I/O Setup | Extended Analog Input Calibrations” and selecting channels to use (overwrite) and naming them, then using this editing screen.

Display Units

This screen allows the operator to specify different units of measure for the following units:

Unit Category	Selected Unit	Unit Category	Selected Unit of Measure
Speed Units	MPH	Spec Fuel Cons, Vol	Gal/HP-Hr
Acceleration Units	MPH/Sec	Spec Fuel Cons, Mass	Lb/HP-Hr
Torque Units	Ft-Lbs	Fuel Volume	Gallons
Force Units	Pounds	Fuel Rate, Volume	Gal/Hr
Power Units	HP	Fuel Mass	Gallons
Temperature Units	Deg F	Fuel Rate, Mass	Lb/Hr
Pressure Units	In Hg	Fuel Eff, Vol	MPG
Short Length Units	Inches	Fuel Eff, Mass	Miles/Lb
Length Units	Feet	Inertia	Slug-FtSq
Weight Units	Lbs		
Distance Units	Miles		


The following is a list of units and all the corresponding units of measure:

Units	Unit Of Measure
Speed	MPH, Ft/Sec, KPH, M/Sec
Acceleration	MPH/Sec, Ft/Sec/Sec, KPH/Sec, Meters/Sec/Sec, Gs
Torque	Ft-Lbs, In-Lbs, In-Oz, Kg-M, Kg-CM, N-M, N-CM
Force	Pounds, Kg, Newtons
Power	HP, KW, Watts, PS
Temperature	Deg F, Deg R, Deg C, Deg K
Pressure	In Hg, In H2O, PSI, mm Hg, mm H2O, Kg/M, Kg/CM, Pascals, Kpascals, Bar, Atmospheres
Length	Inches, CM, Feet, Meters
Weight	Lbs, Kg
Distance	Miles, KM
Spec(ific) Fuel Cons(umption), Vol(umetric)	Gal/HP-Hr, Gal/kW-Hr,

	L/HP-Hr, L/kW-Hr
Spec(ific) Fuel Cons(umption), Mass	Lb/HP-Hr, Lb/kW-Hr kG/HP-Hr, kG/kW-Hr
Fuel Volume	Gallons, Liters
Fuel Rate, Volume	Gal/Hr, Gal/Min, Gal/Sec Liters/Hr, Liters/Min, Liters/Sec
Fuel Mass	Pounds, kg
Fuel Rate, Mass	Lb/Hr, Lb/Min, Lb/Sec kG/Hr, kG/Min, kG/Sec
Fuel Eff(iciency), Vol(ume)	MPG, k/l, l/k, l/100-km
Fuel Eff(iciency), Mass	Miles/Lb, km/kg, kg/km
Inertia	Slug-Ft ² (Lb-Ft-Sec ²) Pound-Ft ² Kg-m ²

Languages

This screen allows the operator to select the current language for display and printing.

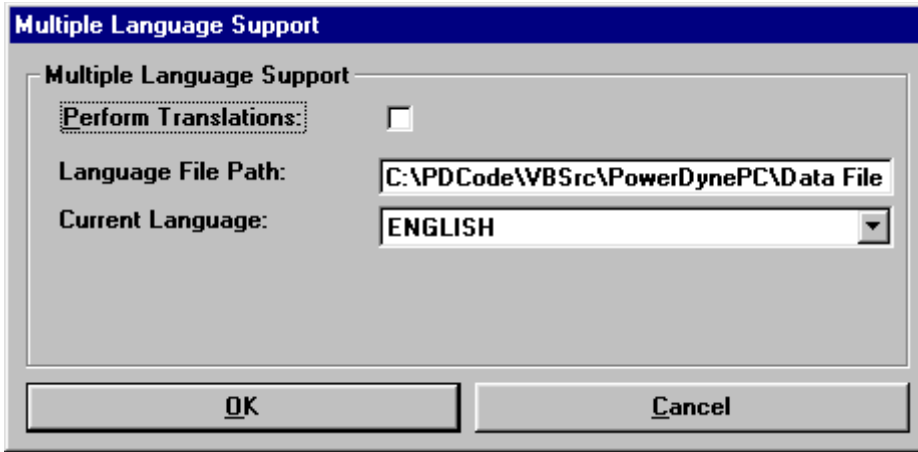


This software supports several languages in addition to English. This screen allows the operator to select a language for the operator interface.

Perform Translations	If selected, language translations will be performed to the selected language.
Language File Path	Specifies the directory path to the foreign language files used for non-English translations.
Current Language	Indicates the language currently selected for the operator interface. If operator can change to language by selecting from the list of available languages from the drop-down.

View Change Log

This will open a text file in “Notepad”, which contains information about when and how various system values were changed. An example is shown below.

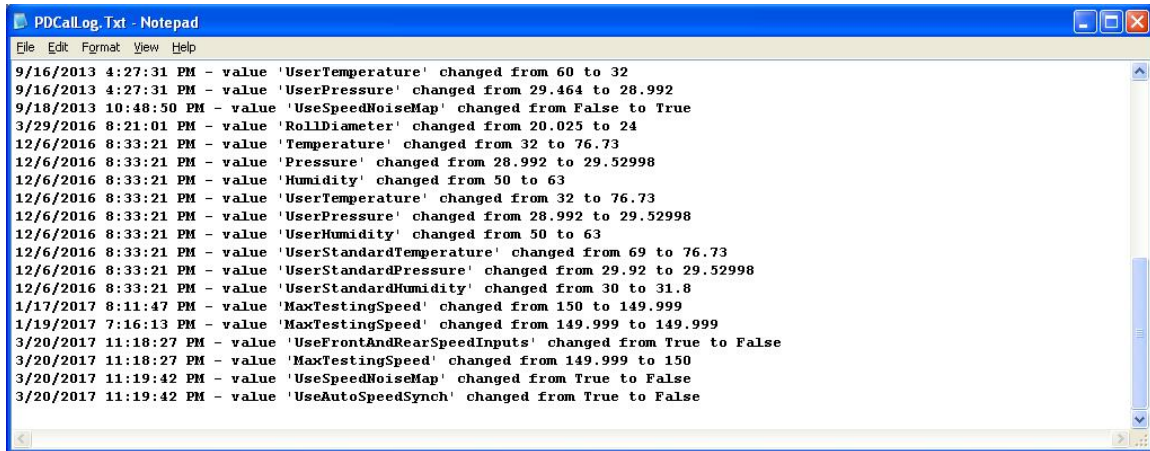


```
File Edit Format View Help
9/16/2013 4:27:31 PM - value 'UserTemperature' changed from 60 to 32
9/16/2013 4:27:31 PM - value 'UserPressure' changed from 29.464 to 28.992
9/18/2013 10:48:50 PM - value 'UseSpeedNoiseMap' changed from False to True
3/29/2016 8:21:01 PM - value 'RollDiameter' changed from 20.025 to 24
12/6/2016 8:33:21 PM - value 'Temperature' changed from 32 to 76.73
12/6/2016 8:33:21 PM - value 'Pressure' changed from 28.992 to 29.52998
12/6/2016 8:33:21 PM - value 'Humidity' changed from 50 to 63
12/6/2016 8:33:21 PM - value 'UserTemperature' changed from 32 to 76.73
12/6/2016 8:33:21 PM - value 'UserPressure' changed from 28.992 to 29.52998
12/6/2016 8:33:21 PM - value 'UserHumidity' changed from 50 to 63
12/6/2016 8:33:21 PM - value 'UserStandardTemperature' changed from 69 to 76.73
12/6/2016 8:33:21 PM - value 'UserStandardPressure' changed from 29.92 to 29.52998
12/6/2016 8:33:21 PM - value 'UserStandardHumidity' changed from 30 to 31.8
1/17/2017 8:11:47 PM - value 'MaxTestingSpeed' changed from 150 to 149.999
1/19/2017 7:16:13 PM - value 'MaxTestingSpeed' changed from 149.999 to 149.999
3/20/2017 11:18:27 PM - value 'UseFrontAndRearSpeedInputs' changed from True to False
3/20/2017 11:18:27 PM - value 'MaxTestingSpeed' changed from 149.999 to 150
3/20/2017 11:19:42 PM - value 'UseSpeedNoiseMap' changed from True to False
3/20/2017 11:19:42 PM - value 'UseAutoSpeedSynch' changed from True to False
```

Diagnostics Menu – I/O Board Driver Setup

Since this software supports three I/O boards (PowerDyne controller, NI-PCI-6221 and RTD ADA-1100), the driver setup screen you see will be specific to the hardware you have.


PowerDyne I/O Board Driver Setup

Digital Inputs

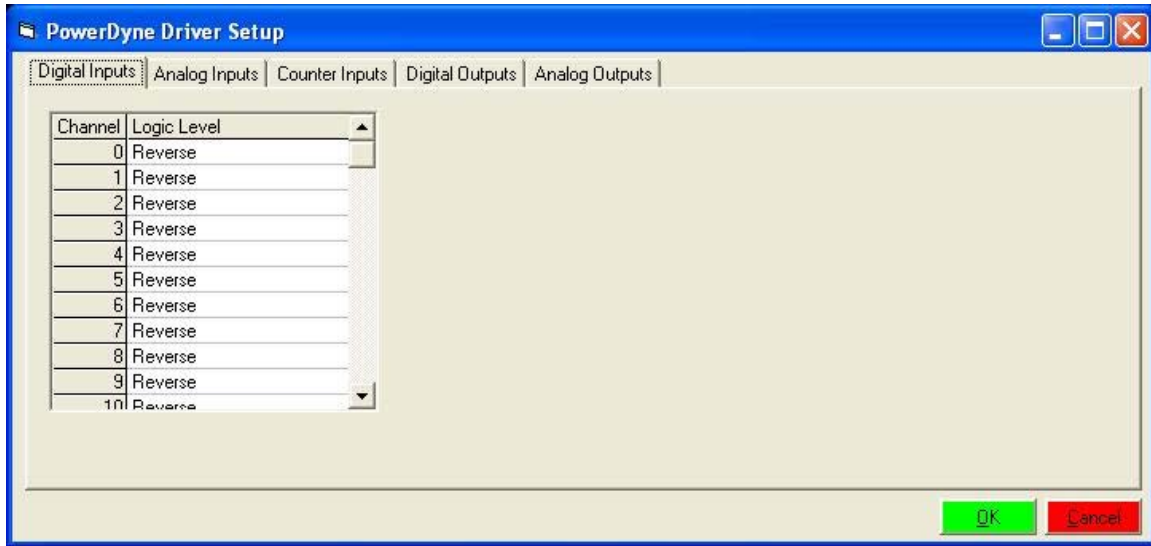


Parameter	Meaning
Logic Level	Either Normal ("on" = 5V, "off" = 0V), or Reverse ("on" = 0V, "off" = 5V).

Analog Inputs

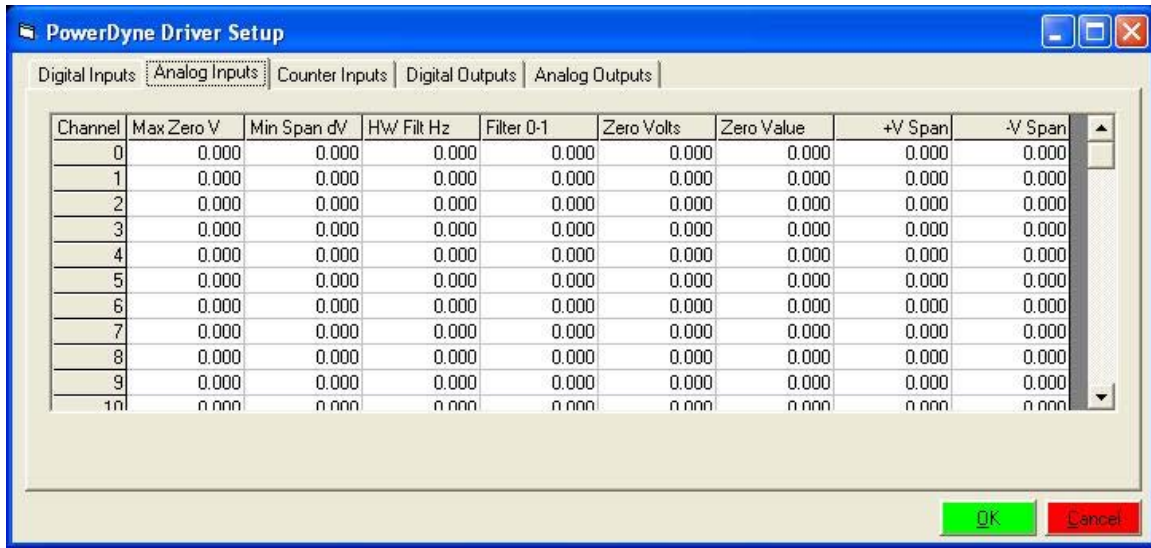


Parameter	Meaning
Max ZeroV	N/A in PowerDynePC application.
Min Span dV	N/A in PowerDynePC application.
HW Filter Hz	N/A in PowerDynePC application.
Filter 0-1	N/A in PowerDynePC application.
Zero Volts	N/A in PowerDynePC application.
Zero Value	N/A in PowerDynePC application.
+V Span	N/A in PowerDynePC application.
-V Span	N/A in PowerDynePC application.

Counter Inputs

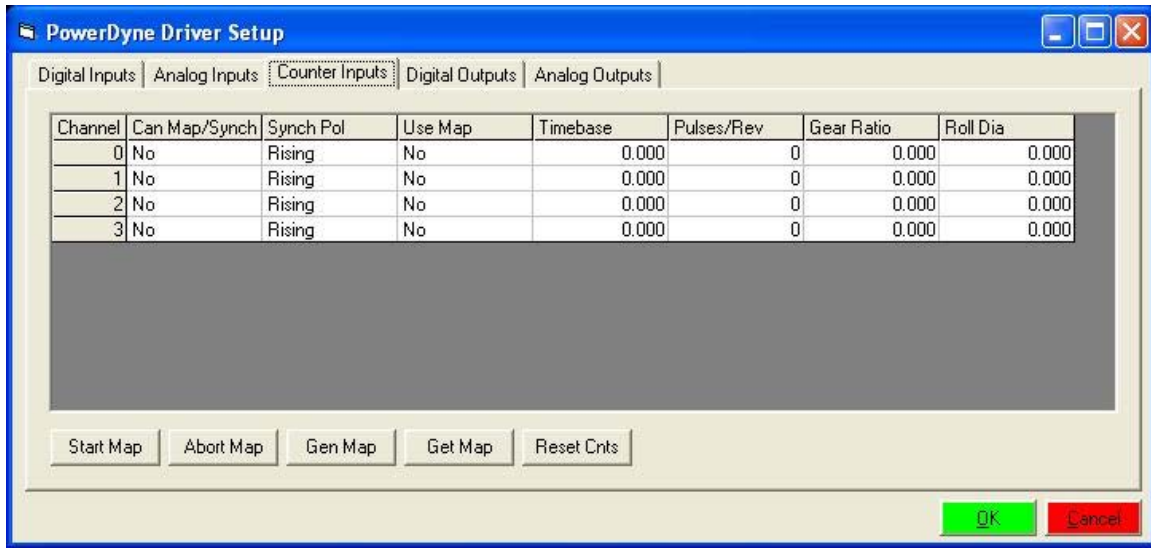


Parameter	Meaning
Can Map/Synch(ronize)	Tells if this hardware channel can use encoder mapping and synchronization.
Synch(ronization) Pol(arity)	Specifies if the synchronization (1 pulse/revolution) input is triggered on rising or falling edges.
Use Map	Specifies if encoder mapping and synchronization should be used on this input.
Timebase	The timebase used for frequency measurements, in seconds. 0.100 seconds is the default, and is recommended. Lower values will be more responsive, but noise goes up fast. Larger values will increase speed measurement lag, but noise goes down fast.
Pulses/Rev(olution)	The number of pulses/revolution generated by the attached speed sensor.
Gear Ratio	The gear ratio from the shaft with the speed sensor to the dynamometer rollers.
Roll Dia(meter)	The roller diameter.

Digital Outputs

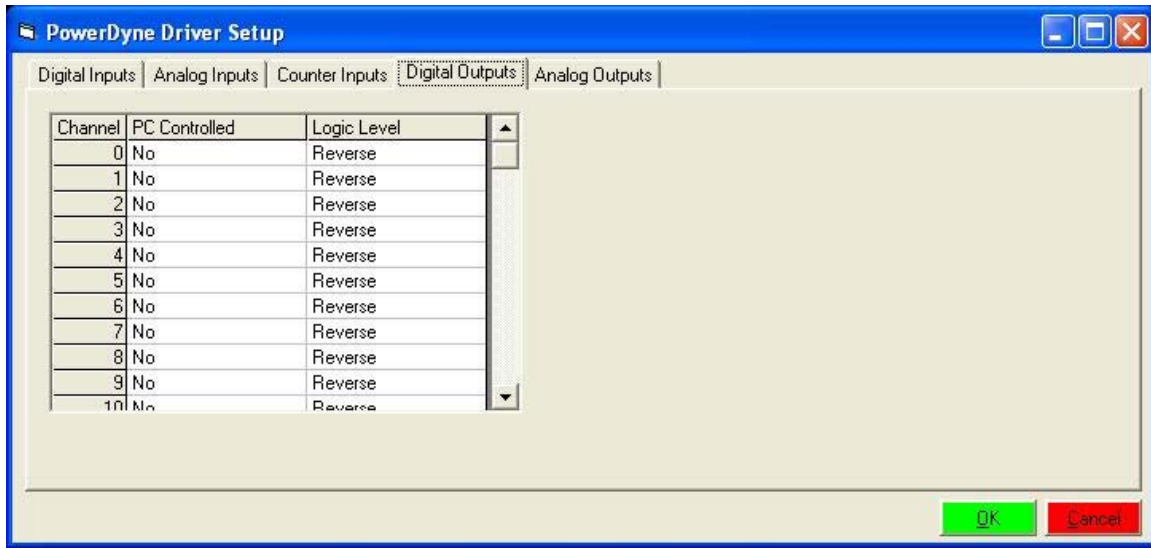

Parameter	Meaning
PC Controlled	Specifies if this hardware channel is controlled by the (PowerDynePC) PC software, or by logic on the controller.
Logic Level	Either Normal (“on” = 5V, “off” = 0V), or Reverse (“on” = 0V, “off” = 5V).


Analog Outputs

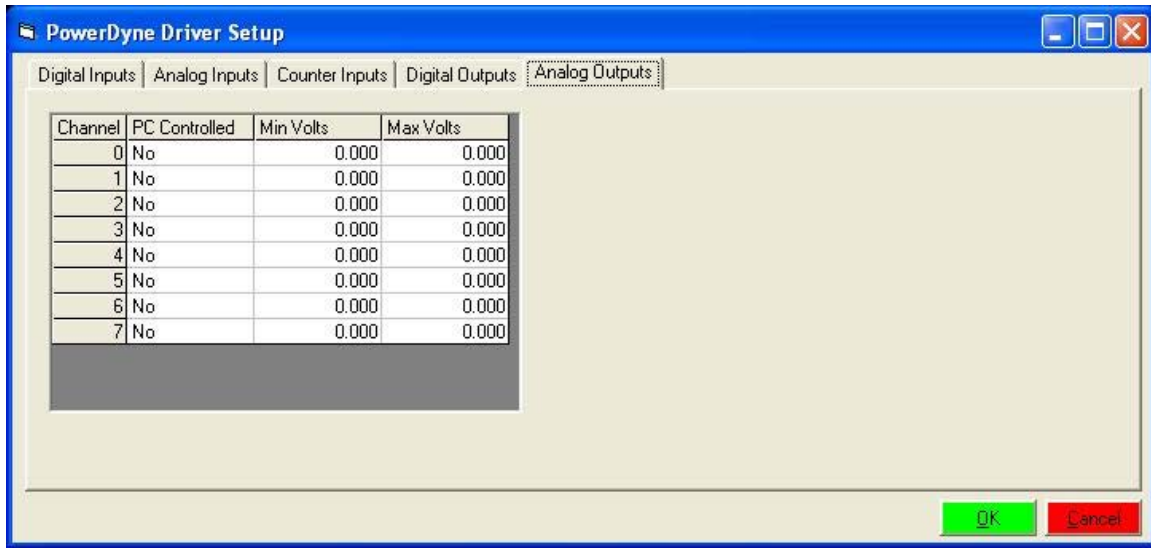

Parameter	Meaning
PC Controlled	Specifies if this hardware channel is controlled by the (PowerDynePC) PC software, or by logic on the controller.
Min Volts	The minimum output Voltage to be driven.
Max Volts	The maximum output Voltage to be driven.


NI PCI-6221 I/O Board Driver Setup

Digital I/O

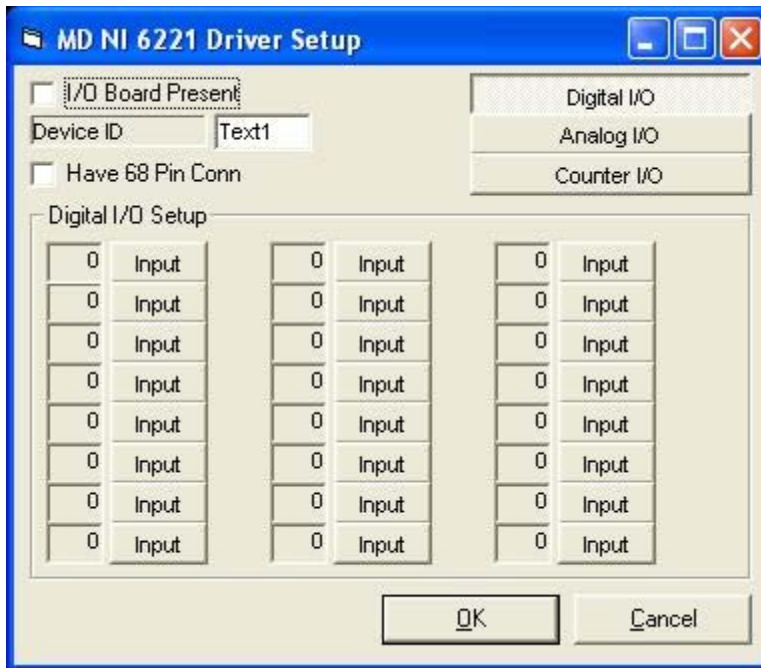


Parameter	Meaning
I/O Board Present	Indicates if you have an NI-PCI-6221 I/O board installed.
Device ID	Indicates the device ID your NI-PCI-6221 I/O board has been assigned in NI's "MAX" software.
Have 68 Pin Conn(ector)	Indicates if you have an NI-PCI-6221 I/O board with the 68-pin connector (else the other connector type).
Input / Output	Configures each digital I/O channel as an Input or an Output.

Analog I/O

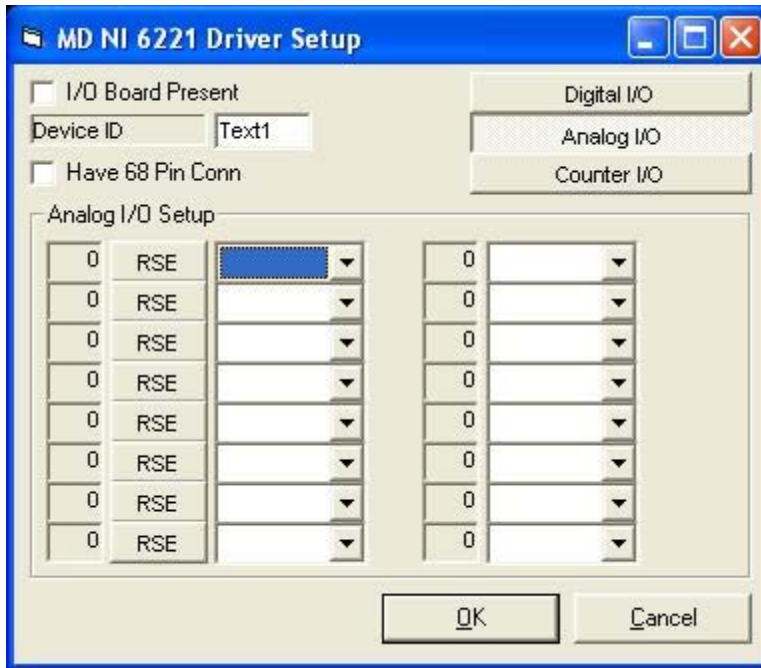


Parameter	Meaning
RSE / Diff	Configures each analog input for “RSE” (Referenced Single-Ended) or “Diff” (Differential) mode.
Gain options list	Configures each analog input for measurement in the specified Voltage range.

Counter I/O

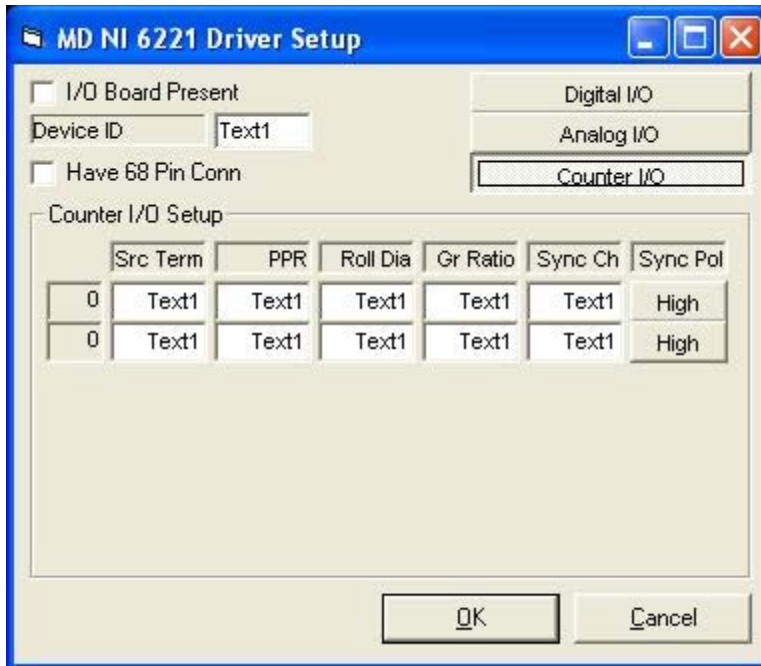

Parameter	Meaning
Src Term	Specifies the source terminal for the counter input, using NI terminal names.
PPR	Pulses/revolution generated by the attached speed sensor.
Roll Dia	Roll diameter.
Gr Ratio	Gear ratio between the shaft the speed sensor is mounted on and the dynamometer's roller shaft.
Synch Ch	The digital input channel used to synchronize to an encoder map, when encoder mapping is in use, using NI channel names.
Synch Pol	Synchronization input terminal polarity, indicates if the synchronization input triggers on rising or falling edges.

ADA-1100 I/O Board Driver Setup

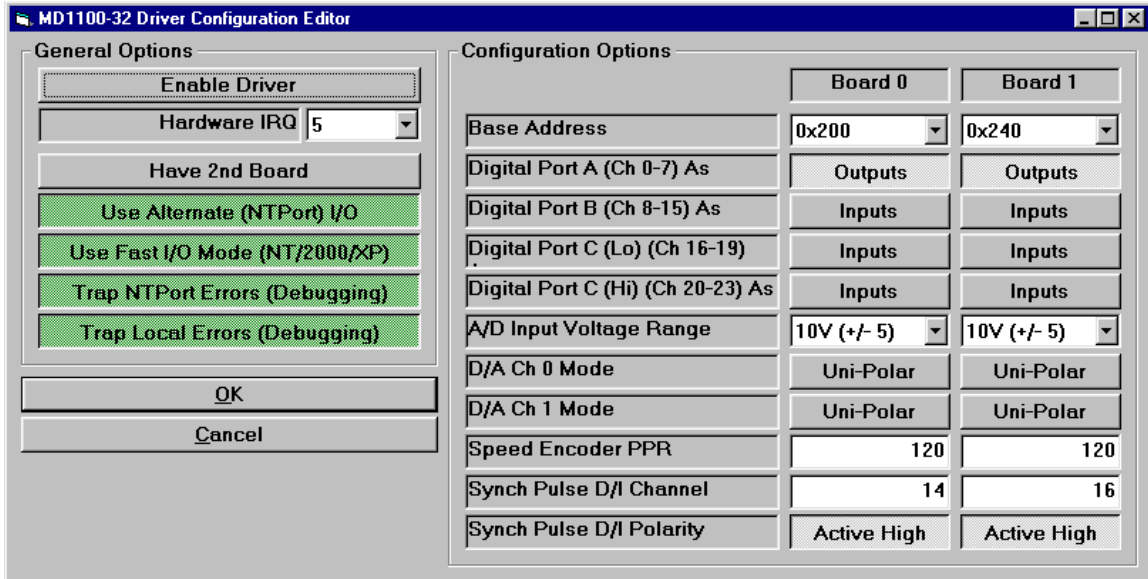

This is the configuration screen for the driver for the ADA-1100 I/O board used to control the dynamometer. This screen is generally only used once, to configure the driver for your particular hardware.

NOTE:

Use of this screen should be restricted to operators with the knowledge required to correctly configure this driver. Invalid settings may render your equipment inoperative, and may require a service call or reinstallation of your software to correct the problem.

Enable Driver	Should be enabled; the sole exception is when the software is configured in “ Demo ” mode. If not enabled, the I/O driver will not work at all.
Hardware IRQ	Must be set to match the physical IRQ jumper setting on the ADA-1100 I/O board. Note that for systems with two (2) I/O boards, only the first board will have an IRQ jumper installed; the second board must NOT have the jumper installed. Note that the selected IRQ must not be in use by any other I/O boards (sound board, parallel port, etc), and must not be reserved by the operating system for PCI boards (if your BIOS supports this, it should be reserved for ISA boards).
Have 2nd Board	Must be enabled if and only if you have two (2) ADA-1100 I/O boards installed, typically to gain an additional 8 analog inputs,

	or for a second speed channel on AWD dynamometers.
Use Alternate (NTPort) I/O	Configures the driver to use an alternative method of accessing the I/O board. The alternative method is faster on Windows 98 systems, and may or may not be faster on NT/2000/XP systems.
Use Fast I/O Mode (NT/2000/XP)	If the alternate (NTPort) I/O configuration is used, this option will increase I/O speed on NT/2000/XP systems.
Trap NTPort Errors (Debugging)	Enables message boxes for any errors encountered when using the alternate (NTPort) I/O routines.
Trap Local Errors (Debugging)	Enables message boxes for internal driver errors.

Buttons

OK	Saves the current configuration values and closes this screen.
Cancel	Closes this screen without saving any changes.

ButtonBase	Address Sets the base port address for the I/O board(s). MUST be set correctly, ie this value must match the physical jumper setting on the I/O board(s).
Digital Port A (Ch 0-7) As	Configures this group of digital I/O lines as inputs or outputs.
Digital Port B (Ch 8-15) As	Configures this group of digital I/O lines as inputs or outputs.
Digital Port C (Lo) (Ch 16-19) As	Configures this group of digital I/O lines as inputs or outputs.
Digital Port C (Hi) (Ch 20-23) As	Configures this group of digital I/O lines as inputs or outputs.
A/D Input Voltage Range	Sets the analog input voltage range. MUST match the physical jumper setting on the I/O board(s).
D/A Ch 0 Mode	Sets the analog output mode for this channel. MUST match the physical configuration of the I/O board(s).
D/A Ch 1 Mode	Sets the analog output mode for this channel. MUST match the physical configuration of the I/O board(s).
Speed Encoder PPR	Sets the number of pulses per revolution for the speed input

	encoder connected to the I/O board(s).
Synch Pulse D/I Channel	Sets the digital input channel used for a one (1) pulse per revolution speed input used to synchronize encoder noise mapping values to the current encoder position. Only used when the one (1) pulse per revolution input is installed for auto-synch use.
Synch Pulse D/I Polarity	Sets the polarity of the digital input channel used for a one (1) pulse per revolution speed input used to synchronize encoder noise mapping values to the current encoder position. Only used when the one (1) pulse per revolution input is installed for auto-synch use.

I/O Board Diagnostics

The I/O board diagnostics screen varies depending on the hardware you have.

PowerDyne I/O Board Diagnostics

Digital Inputs		Analog	Counter Inputs			Digital Outputs		Digital Outputs		Analog Outputs	
0-15	16-31	Inputs	Ticks	RPM	RPM/Sec	Current	Desired	Current	Desired	Current	Desired
0	<input type="checkbox"/> 16	0.000	0	0.000	0.000	0	<input type="checkbox"/> 0	<input type="checkbox"/> 16	<input type="checkbox"/> 16	0.000	-00.000
1	<input type="checkbox"/> 17	0.000	0	0.000	0.000	1	<input type="checkbox"/> 1	<input type="checkbox"/> 17	<input type="checkbox"/> 17	0.000	-00.000
2	<input type="checkbox"/> 18	0.000	0	0.000	0.000	2	<input type="checkbox"/> 2	<input type="checkbox"/> 18	<input type="checkbox"/> 18	0.000	-00.000
3	<input type="checkbox"/> 19	0.000	0	0.000	0.000	3	<input type="checkbox"/> 3	<input type="checkbox"/> 19	<input type="checkbox"/> 19	0.000	-00.000
4	<input type="checkbox"/> 20	0.000	Synch <input type="checkbox"/>	0	Map <input type="checkbox"/>	4	<input type="checkbox"/> 4	<input type="checkbox"/> 20	<input type="checkbox"/> 20	0.000	-00.000
5	<input type="checkbox"/> 21	0.000	Synch <input type="checkbox"/>	1	Map <input type="checkbox"/>	5	<input type="checkbox"/> 5	<input type="checkbox"/> 21	<input type="checkbox"/> 21	0.000	-00.000
6	<input type="checkbox"/> 22	0.000	Synch <input type="checkbox"/>	2	Map <input type="checkbox"/>	6	<input type="checkbox"/> 6	<input type="checkbox"/> 22	<input type="checkbox"/> 22	0.000	-00.000
7	<input type="checkbox"/> 23	0.000	Synch <input type="checkbox"/>	3	Map <input type="checkbox"/>	7	<input type="checkbox"/> 7	<input type="checkbox"/> 23	<input type="checkbox"/> 23	0.000	-00.000
8	<input type="checkbox"/> 24	0.000	Mapng <input type="checkbox"/>	0	AcqOK <input type="checkbox"/>	8	<input type="checkbox"/> 8	<input type="checkbox"/> 24	<input type="checkbox"/> 24		
9	<input type="checkbox"/> 25	0.000	Mapng <input type="checkbox"/>	1	AcqOK <input type="checkbox"/>	9	<input type="checkbox"/> 9	<input type="checkbox"/> 25	<input type="checkbox"/> 25		
10	<input type="checkbox"/> 26	0.000	Mapng <input type="checkbox"/>	2	AcqOK <input type="checkbox"/>	10	<input type="checkbox"/> 10	<input type="checkbox"/> 26	<input type="checkbox"/> 26		
11	<input type="checkbox"/> 27	0.000	Mapng <input type="checkbox"/>	3	AcqOK <input type="checkbox"/>	11	<input type="checkbox"/> 11	<input type="checkbox"/> 27	<input type="checkbox"/> 27		
12	<input type="checkbox"/> 28	0.000	No Fault			12	<input type="checkbox"/> 12	<input type="checkbox"/> 28	<input type="checkbox"/> 28		
13	<input type="checkbox"/> 29	0.000	NOTE: Only outputs that are assigned to PC control will actually be driven by these values.			13	<input type="checkbox"/> 13	<input type="checkbox"/> 29	<input type="checkbox"/> 29		
14	<input type="checkbox"/> 30	0.000				14	<input type="checkbox"/> 14	<input type="checkbox"/> 30	<input type="checkbox"/> 30		
15	<input type="checkbox"/> 31	0.000				15	<input type="checkbox"/> 15	<input type="checkbox"/> 31	<input type="checkbox"/> 31		

Input values will NOT be updated unless the “Update Values” button is clicked, or the “Auto-Update” checkbox below that button is checked.

Output values will NOT be updated unless the “Set Desired” button is clicked, or the “Auto-Set” checkbox below that button is checked.

The status of digital, analog and counter inputs can be seen directly.

The value of digital and analog outputs can be controlled directly – note that analog output Voltage values are strictly 0.0 .. 10.0 Volts.

Counter inputs provide the following values:

Ticks The number of ticks counted on the input.

RPM The calculated speed in RPM for the sensed shaft.

RPM/Sec The calculated acceleration in RPM/second for the sensed shaft.

Counter inputs include addition logic, the status of which is also reported:

Synch Shows if the input has been synchronized to an encoder map.

Map Shows if the input is using an encoder map.

Mapng Shows if the input is actively creating an encoder map.

AcqOK Shows if an encoder map has been successfully acquired.

NI PCI-6221 I/O board diagnostics

ADA-1100 I/O board diagnostics

Input Diagnostics			
Analog Inputs (Volts)		Digital Inputs/Outputs	
0: <input type="text" value="0.000"/>	8: <input type="text"/>	<input type="checkbox"/> 0	<input type="checkbox"/> 8
1: <input type="text" value="0.000"/>	9: <input type="text"/>	<input type="checkbox"/> 1	<input type="checkbox"/> 9
2: <input type="text" value="0.000"/>	10: <input type="text"/>	<input type="checkbox"/> 2	<input type="checkbox"/> 10
3: <input type="text" value="0.000"/>	11: <input type="text"/>	<input type="checkbox"/> 3	<input type="checkbox"/> 11
4: <input type="text" value="0.000"/>	12: <input type="text"/>	<input type="checkbox"/> 4	<input type="checkbox"/> 12
5: <input type="text" value="0.000"/>	13: <input type="text"/>	<input type="checkbox"/> 5	<input type="checkbox"/> 13
6: <input type="text" value="0.000"/>	14: <input type="text"/>	<input type="checkbox"/> 6	<input type="checkbox"/> 14
7: <input type="text" value="0.000"/>	15: <input type="text"/>	<input type="checkbox"/> 7	<input type="checkbox"/> 15
Analog Outputs (Volts)		<input type="checkbox"/> 16	<input type="checkbox"/> 17
0: <input type="text" value="0.0"/>	2: <input type="text" value="0.0"/>	<input type="checkbox"/> 18	<input type="checkbox"/> 19
1: <input type="text" value="0.0"/>	3: <input type="text" value="0.0"/>	<input type="checkbox"/> 20	<input type="checkbox"/> 21
		<input type="checkbox"/> 22	<input type="checkbox"/> 23
		<input type="checkbox"/> 24	<input type="checkbox"/> 32
		<input type="checkbox"/> 25	<input type="checkbox"/> 33
		<input type="checkbox"/> 26	<input type="checkbox"/> 34
		<input type="checkbox"/> 27	<input type="checkbox"/> 35
		<input type="checkbox"/> 28	<input type="checkbox"/> 36
		<input type="checkbox"/> 29	<input type="checkbox"/> 37
		<input type="checkbox"/> 30	<input type="checkbox"/> 38
		<input type="checkbox"/> 31	<input type="checkbox"/> 39
		<input type="checkbox"/> 40	<input type="checkbox"/> 41
		<input type="checkbox"/> 42	<input type="checkbox"/> 43
		<input type="checkbox"/> 44	<input type="checkbox"/> 45
		<input type="checkbox"/> 46	<input type="checkbox"/> 47
		<input type="checkbox"/> 47	
Ok			
Counter Inputs		Total Counts	
		RPM	
0: <input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0.0"/>	
1: <input type="text" value="0"/>	<input type="text" value="0"/>	<input type="text" value="0"/>	
(Double-Click "Total Counts" To Reset Counter Channels)			

Panel	Values
Analog Inputs (Volts)	Channels 0-7 are on the 1 st I/O board, channels 8-15 are on the 2 nd I/O board. The displayed values are in volts.
Analog Outputs (Volts)	Channels 0-1 are on the 1 st I/O board, channels 2-3 are on the 2 nd I/O board. The displayed values are in volts, and can be set to any (valid) desired value by the operator.
Digital Inputs/Outputs	Channels 0-23 are on the 1 st I/O board, channels 24-47 are on the 2 nd I/O board. In most applications, channels 0-7 and 24-31 are outputs while the remainder are inputs.
Counter Inputs	Channel 0 is on the 1 st I/O board, channel 1 is on the 2 nd I/O board. The total counts fields represent the number of gear/encoder pulses counted since the last reset.

Gas Bench Diagnostics

This is the diagnostics screen for the Andros gas analyzer bench.

Please note

Due to the complexity of this screen, casual use by the operator is not encouraged. Generally, this screen is only used with the supervision of a qualified Mustang Dynamometer technician.

Serial Communications	
Field	Description
Connected	Whether or not PowerDynePC is connected to the gas bench.
Port #	The serial port that the gas bench is connected to.
Sent	The command that was sent to the gas bench in hexadecimal format.

Received	The response returned from the gas bench after a command has been sent.
Last Error	The error returned from the gas bench after a command has been sent.
Status	The current status of the gas bench. When sending a command the status will be "Sending Message...". If no command is being sent, or the command has been processed, then the status will be "Idle..." .
List of Commands	<p>The list of Analyzer commands that can be sent to the gas bench and include the following:</p> <ul style="list-style-type: none"> • Reset Analyzer • Get Analyzer Status • Get Analyzer Revision Level • Get Analyzer Serial Number • Set Analyzer Gas Values • Span Analyzer • Get Analyzer PEF Value • Set Analyzer PEF Value • Default Analyzer PEF Value • Zero Analyzer & Span O2 • Zero Analyzer • Partial Span Analyzer • Reset Analyzer Span • Set New Analyzer NO Sensor • Get Analyzer Data • Start Cont. Analyzer Data • Stop Cont. Analyzer Data • Get Analyzer System Data • Get Analyzer UnCompensated Data • Get Analyzer O2 Scale Data <p>The list of Bench/subsystem commands that can be sent to the gas bench and include the following:</p> <ul style="list-style-type: none"> • Zero Sub System • Calibrate Sub System • Sub System Solenoid Control • Sub System Pump Control • Read Sub System ADC Ports

	<ul style="list-style-type: none"> • Get Sub System Revision Level • Get Sub System Status • Reset Sub System • Sub System Leak Check • Get Sub System Data • Sub System Gas Leak Check • Zero Sub System & Span O2 • Start Cont. Sub System Data • Stop Cont. Sub System Data <p>The list of special commands that can be sent to the gas bench and include the following:</p> <ul style="list-style-type: none"> • Get Static Data • Enable Auto-Update
--	--

Serial Communications buttons	
Button	Description
Connect	Connects PowerDynePC to the gas bench.
Clear	Clears out anything in the communication buffer.
Send Command	Causes the selected command to be performed on the gas bench.

Status	
Field	Description
Zero In Progress	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - zero is in progress</p> <p>Unchecked- no zero is in progress</p>

In Span Mode	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench. The meaning of this field depends on the command that is being performed.</p> <p>Checked</p> <p>If the "Span Analyzer" command was sent to the bench then this field will be checked.</p> <p>If the "Reset Analyzer Span" command was sent to the bench then this field will be checked.</p> <p>If the " Partial Span Analyzer" command was sent to the bench then this field will be checked.</p> <p>Unchecked - not in span mode.</p>
Span In Progress	<p>The value of this field is updated when the user sends the "Span Analyzer" command to the bench.</p> <p>Checked - span is in progress</p> <p>Unchecked - no span is in progress</p>
Reset Span In Progress	<p>The value of this field is updated when the user sends the "Reset Analyzer Span" command to the bench.</p> <p>Checked - reset span is in progress</p> <p>Unchecked - no reset span is in progress</p>
Startup In Progress	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Analyzer is in progress</p> <p>Unchecked - Analyzer startup complete. Startup is complete when both the source servo and the filter/detector servo has transitioned to their final high gain state. Please note that startup complete does not indicate that the gas bench is thermally warmed up.</p>

NVRAM Write In Progress	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - NVRAM write in progress</p> <p>Unchecked - NVRAM write not in progress</p>
O2 Span Request	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench that has an enhanced O₂ feature:</p> <p>Checked - O₂ Span requested.</p> <p>Unchecked - O₂ Span not requested.</p>
Zero Req: Temp Drift	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Zero requested due to temperature drift.</p> <p>Unchecked - No Zero requested due to temperature drift.</p>
Zero Req: Interval Timeout	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Zero requested due to timeout of zero interval timer.</p> <p>Unchecked - No timer initiated Zero request.</p>
Zero Interval:	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>00000 = Awaiting initial Zero</p> <p>00001 = 1 minute zero interval mode</p> <p>00101 = 5 minute zero interval mode</p> <p>01111 = 15 minute zero interval mode</p> <p>11110 = 30 minute zero interval mode</p>

<p>HC Data Mode</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Reserved</p> <p>Unchecked - HC channel data reported as n-Hexane.</p>
<p>Cont. Data</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Continuous data transmitted mode enabled via command "Start Cont. Analyzer Data"</p> <p>Unchecked - Continuous data transmitted mode disabled via command "Stop Cont. Analyzer Data"</p>
<p>Cont. Comp. Data</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Continuous compensated data transmitted enabled via command "Get Analyzer Data"</p> <p>Unchecked - - Continuous compensated data transmitted disabled</p>
<p>Cont. Sys. Data</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Continuous system data transmitted enabled via command "Get Analyzer System Data"</p> <p>Unchecked - - Continuous system data transmitted disabled</p>

Cont. Raw Data	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Continuous raw data transmitted enabled via command "Get Analyzer Uncompensated Data"</p> <p>Unchecked - - Continuous raw data transmitted disabled</p>
Processor Error	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Processor error</p> <p>Unchecked - No processor error</p>
ROM CheckSum Error	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - ROM CheckSum Error</p> <p>Unchecked - No ROM CheckSum Error</p>
RAM Read/Write Error	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - RAM Read/Write Error</p> <p>Unchecked - No RAM Read/Write Error</p>
RT Int Overrun	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Real Time Interrupt Overrun</p> <p>Unchecked - No Real Time Interrupt Overrun</p>

RS Int Sync Lost	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Real Time Interrupt sync lost</p> <p>Unchecked - Real Time Interrupt sync established</p>
Sys Table CheckSum Error	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - System table NVRAM checksum error on NVRAM write error during NO span calibration.</p> <p>Unchecked - No system table checksum error on NVRAM write error during NO span calibration.</p>
IR Signal Lost	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - IR signal lost</p> <p>Unchecked - IR signal normal</p>
Chopper Blade Driver Error	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Chopper Blade Driver Error</p> <p>Unchecked - No Chopper Blade Driver Error</p>
Source Servo Error	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Source Servo Error detected</p> <p>Unchecked - Source Servo operation normal</p>

Filter/Detector Servo Error	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Filter/Detector Servo Error detected</p> <p>Unchecked - Filter/Detector Servo operation normal</p>
NVRAM Revision Mis-Match Error	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked- NVRAM Revision Mismatch Error after POR</p> <p>Unchecked - NVRAM and ROM revisions match correctly</p>
Gas Data Cycle Over-Run Error	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Gas Data Cycle Over-Run Error</p> <p>Unchecked - No Gas Data Cycle Over-Run Error</p>
Span Factor CheckSum Error	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - NVRAM checksum error in the span factor table</p> <p>Unchecked - No span factor table NVRAM checksum error.</p>
Source Servo Out Of Range	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Source Servo Out Of Range</p> <p>Unchecked - Source Servo operation normal.</p>

Filter/Detector Servo Out Of Range	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Filter/Detector Servo Out Of Range</p> <p>Unchecked - Filter/Detector Servo operation normal.</p>
LZC for CO, CO ₂ and HC:	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Late zero crossing</p> <p>Unchecked - No Late zero crossing.</p>
EZC for CO, CO ₂ and HC:	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Early zero crossing</p> <p>Unchecked - No Early zero crossing.</p>
ZF for CO, CO ₂ and HC:	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - The last specified IR channel zero calibration resulted in one or more zero scale factors calculated outside their normal range.</p> <p>Unchecked - The last zero calibration resulted in zero scale factors calculated within their normal range.</p>
SF for CO, CO ₂ and HC:	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - The last specified IR channel span calibration resulted in one or more zero scale factors calculated outside their normal range.</p> <p>Unchecked - The last span calibration resulted in zero scale factors calculated within their normal range.</p>

<p>CErr for CO, CO₂ and HC:</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - An error occurred during the compensation and calculation of the specified IR channel data.</p> <p>Unchecked - No compensation error.</p>
<p>DOR for CO, CO₂ and HC:</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - The specified channel (HC, CO, CO₂) data just calculated is outside its normal range.</p> <p>Unchecked - IR channel data normal.</p>
<p>NO Temp Out Of Range</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - The NO sensor temperature is outside its range (10 to +45°C)</p> <p>Unchecked - NO sensor temperature normal.</p>

<p>NO Span Fail</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - The last NO channel span calibration failed. Causes of NO span fail are as follows:</p> <ol style="list-style-type: none"> 1. The new NO span constants are out of range. 2. Storing the new NO span constants resulted in an NVRAM write error. 3. During POR self-test, the NVRAM resident NO span constants were found to be out of range. <p>Unchecked -</p> <ol style="list-style-type: none"> 1. The last NO span was executed successfully and. 2. The NO span constants in NVRAM are within range.
<p>New NO Sensor Required</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Low NO Sensor output has been found. Its implication is one of the following:</p> <ol style="list-style-type: none"> 1. After a new NO sensor has been installed, and the &#30 New NO sensor command performed, the NO sensor is found to have less lifetime available than normal. This sensor can be used (if CD4-2=0) but a replacement NO sensor is required is normal lifetime is expected. 2. After POR or after performing NO span calibration the NO sensor's full scale output has dropped by $\geq 20\%$ since its installation. This sensor can still be used for a short period of time (if CD4-2=0), but a replacement NO sensor is required very soon. <p>Unchecked - NO sensor output normal after</p>

	POR span calibration, and NO sensor replacement.
NO Zero Fail	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - The last NO channel zero calibration failed.</p> <p>Unchecked - The last NO channel zero calibration was executed successfully.</p>
O ₂ A/D Range Exceeded	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - O₂ A/D input range exceeded.</p> <p>Unchecked - O₂ A/D input normal.</p>
Pressure A/D Range Exceeded	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Pressure A/D input range exceeded.</p> <p>Unchecked - Pressure A/D input normal.</p>
Temperature A/D Range Exceeded	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - Temperature A/D input range exceeded.</p> <p>Unchecked - Temperature A/D input normal.</p>
O ₂ Data Over Range	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - The O₂ data just calculated is outside its normal range.</p> <p>Unchecked - The O₂ data just calculated is within its normal range.</p>

<p>Pressure Data Over Range</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - The sample cell pressure data just calculated is outside its normal range.</p> <p>Unchecked - The sample cell pressure data just calculated is within its normal range.</p>
<p>Temperature Data Over Range</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - The sample cell Temperature data just calculated is outside its normal range.</p> <p>Unchecked - The sample cell Temperature data just calculated is within its normal range.</p>
<p>O₂ Span Fail</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Status" command to the bench.</p> <p>Checked - The last O₂ span calibration resulted in an O₂ span scale factor outside its normal range.</p> <p>Unchecked - The last O₂ span calibration resulted in an O₂ span scale factor within its normal range.</p>

Vendor/Model	
Field	Description
Vendor Code:	The Vendor Code. The user can get this value when they send "Get Analyzer Revision Level" command to the bench.
Model Number:	The Model Number. The user can get this value when they send "Get Analyzer Revision Level" command to the bench.
Revision Level:	The Revision Level. The user can get this value when they send "Get Analyzer Revision Level" command to the bench.

Vendor/Model	
Field	Description
Serial Number:	The Serial Number. The user can get this value when they send "Get Analyzer Serial Number" command to the bench.

Gas Channel Values/Status	
PEF:	The propane equivalency factor. The user can get this value when they send "Get Analyzer PEF Value" command to the bench. The value can be set when the user sends the "Set Analyzer PEF Value" command to the bench. The user can reset this value when the send the "Reset Analyzer PEF Value" to the bench.
Low Flow/Water Rejection Active	The value of this field is updated when the user sends the " Get Sub System Data" command to the bench. Checked - Low Flow/Water Rejection Active. Unchecked - Low Flow/Water Rejection inactive.

<p>SC Temp (°C)/Check SC Temp (°C):</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Data" command to the bench.</p> <p>The Sample Cell Temperature (°C)</p> <p>Checked - The Sample Cell Temperature needs to be checked.</p> <p>Unchecked - The Sample Cell Temperature does not need to be checked.</p>
<p>SC Press (Torr) /Check SC Press (Torr):</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Data" command to the bench.</p> <p>The Sample Cell Pressure (Torr)</p> <p>Checked - The Sample Cell Pressure needs to be checked.</p> <p>Unchecked - The Sample Cell Pressure does not need to be checked.</p>
<p>CO₂ (%)/Check CO₂ (%):</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Data" command to the bench.</p> <p>CO₂ (%)</p> <p>Checked - CO₂ (%) needs to be checked.</p> <p>Unchecked - CO₂ (%) does not need to be checked.</p>
<p>CO (%)/Check CO (%):</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Data" command to the bench.</p> <p>CO (%)</p> <p>Checked - CO (%) needs to be checked.</p> <p>Unchecked - CO (%) does not need to be checked.</p>

<p>HC (PPM) /Check HC (PPM):</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Data" command to the bench.</p> <p>HC (PPM)</p> <p>Checked - HC (PPM) needs to be checked.</p> <p>Unchecked - HC (PPM) does not need to be checked.</p>
<p>NO (PPM):</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Data" command to the bench.</p> <p>NO (PPM)</p> <p>Checked - NO (PPM) needs to be checked.</p> <p>Unchecked - NO (PPM) does not need to be checked.</p>
<p>O₂ (%):</p>	<p>The value of this field is updated when the user sends the "Get Analyzer Data" command to the bench.</p> <p>O₂ (%)</p> <p>Checked - O₂ (%) needs to be checked.</p> <p>Unchecked - O₂ (%) does not need to be checked.</p>
<p>Sub System</p> <p>SC Temp (°C)/Check SC Temp (°C):</p>	<p>The value of this field is updated when the user sends the "Get Sub System Data" command to the bench.</p> <p>The Sub System Sample Cell Temperature (°C)</p> <p>Checked - The Sub System Sample Cell Temperature needs to be checked.</p> <p>Unchecked - The Sub System Sample Cell Temperature does not need to be checked.</p>

<p>Sub System</p> <p>SC Press (Torr) /Check SC Press (Torr):</p>	<p>The value of this field is updated when the user sends the "Get Sub System Data" command to the bench.</p> <p>The Sub System Sample Cell Pressure (Torr)</p> <p>Checked - The Sub System Sample Cell Pressure needs to be checked.</p> <p>Unchecked - The Sub System Sample Cell Pressure does not need to be checked.</p>
<p>Sub System</p> <p>CO₂ (%) /Check CO₂ (%):</p>	<p>The value of this field is updated when the user sends the "Get Sub System Data" command to the bench.</p> <p>Sub System CO₂ (%)</p> <p>Checked - Sub System CO₂ (%) needs to be checked.</p> <p>Unchecked - Sub System CO₂ (%) does not need to be checked.</p>
<p>Sub System</p> <p>CO (%) /Check CO (%):</p>	<p>The value of this field is updated when the user sends the "Get Sub System Data" command to the bench.</p> <p>Sub System CO (%)</p> <p>Checked - Sub System CO (%) needs to be checked.</p> <p>Unchecked - Sub System CO (%) does not need to be checked.</p>
<p>Sub System</p> <p>HC (PPM) /Check HC (PPM):</p>	<p>The value of this field is updated when the user sends the "Get Sub System Data" command to the bench.</p> <p>Sub System HC (PPM)</p> <p>Checked - Sub System HC (PPM) needs to be checked.</p> <p>Unchecked - Sub System HC (PPM) does not need to be checked.</p>

<p>Sub System NO (PPM):</p>	<p>The value of this field is updated when the user sends the "Get Sub System Data" command to the bench.</p> <p>Sub System NO (PPM)</p> <p>Checked - Sub System NO (PPM) needs to be checked.</p> <p>Unchecked - Sub System NO (PPM) does not need to be checked.</p>
<p>Sub System O₂ (%):</p>	<p>The value of this field is updated when the user sends the "Get Sub System Data" command to the bench.</p> <p>Sub System O₂ (%)</p> <p>Checked - Sub System O₂ (%) needs to be checked.</p> <p>Unchecked - Sub System O₂ (%) does not need to be checked.</p>

Raw Bit Values	
Field	Description
Raw NO:	The value of this field is updated when the user sends the "Get Analyzer System Data" command to the bench. Raw NO bits
NO Temp:	The value of this field is updated when the user sends the "Get Analyzer System Data" command to the bench. NO Temperature
Raw O2:	The value of this field is updated when the user sends the "Get Analyzer System Data" command to the bench. Raw O ₂ bits
Raw Press:	The value of this field is updated when the user sends the "Get Analyzer System Data" command to the bench. Raw Pressure
Raw Temp:	The value of this field is updated when the user sends the "Get Analyzer System Data" command to the bench. Raw Temperature
Sys Servo:	The value of this field is updated when the user sends the "Get Analyzer System Data" command to the bench. System Servo Error Bits
Filter/Det.:	The value of this field is updated when the user sends the "Get Analyzer System Data" command to the bench. Filter Detector Servo Error Bits

Servo Zero:	The value of this field is updated when the user sends the "Get Analyzer System Data" command to the bench. Servo Zero Bits
-------------	--

Raw ADC Values	
Field	Description
CO ₂ Bits:	The value of this field is updated when the user sends the "Get Analyzer UnCompensated Data" command to the bench. The Long Raw CO ₂ Bits
CO Bits:	The value of this field is updated when the user sends the "Get Analyzer Uncompensated Data" command to the bench. The Long Raw CO Bits
HC Bits:	The value of this field is updated when the user sends the "Get Analyzer UnCompensated Data" command to the bench. The Long Raw HC Bits
O ₂ ADC Counts:	The value of this field is updated when the user sends the " Get Analyzer O2 Scale Data" command to the bench. O ₂ A D Counts
O ₂ DAC Scaler:	The value of this field is updated when the user sends the " Get Analyzer O2 Scale Data" command to the bench. O ₂ DAC Scaling Factor
O ₂ Attenuation:	The value of this field is updated when the user sends the " Get Analyzer O2 Scale Data" command to the bench. O ₂ Attenuation

O ₂ mVolts:	The value of this field is updated when the user sends the " Get Analyzer O2 Scale Data" command to the bench. O ₂ mVolts
------------------------	---

ADC Bits/Volts	
Field	Description
Press:	The value of this field is updated when the user sends the "Read Sub System ADC Ports" command to the bench. Sub System AD Pressure Bits
Pump:	The value of this field is updated when the user sends the "Read Sub System ADC Ports" command to the bench. Sub System AD Pump Drive Feed Back Bits
Ch 1:	The value of this field is updated when the user sends the "Read Sub System ADC Ports" command to the bench. Sub System AD Channel #1 Volts
Ch 2:	The value of this field is updated when the user sends the "Read Sub System ADC Ports" command to the bench. Sub System AD Channel #2 Volts
Ch 3:	The value of this field is updated when the user sends the "Read Sub System ADC Ports" command to the bench. Sub System AD Channel #3 Volts
Ch 4:	The value of this field is updated when the user sends the "Read Sub System ADC Ports" command to the bench. Sub System AD Channel #4 Volts

Sub System Status	
Field	Description
SS Sub System Fault	<p>The value of this field is updated when the user sends the "Get Sub System Status" command to the bench.</p> <p>Checked - Sub System Fault</p> <p>Unchecked - No Sub System Fault</p>
SS Analyzer Fault	<p>The value of this field is updated when the user sends the "Get Sub System Status" command to the bench.</p> <p>Checked - Sub System Analyzer Fault</p> <p>Unchecked - No Sub System Analyzer Fault</p>
SS Low Flow Fault	<p>The value of this field is updated when the user sends the "Get Sub System Status" command to the bench.</p> <p>Checked - Sub System Analyzer Fault</p> <p>Unchecked - No Sub System Analyzer Fault</p>
SS Analyzer Comm Fault	<p>The value of this field is updated when the user sends the "Get Sub System Status" command to the bench.</p> <p>Checked - Sub System Analyzer Communications Fault</p> <p>Unchecked - No Sub System Analyzer Communications Fault</p>

SS Zero In Progress	<p>The value of this field is updated when the user sends the "Get Sub System Status" command to the bench.</p> <p>Checked - Sub System Zero In Progress</p> <p>Unchecked - No Sub System Zero In Progress</p>
SS Leak Test In Progress	<p>The value of this field is updated when the user sends the "Get Sub System Status" command to the bench.</p> <p>Checked - Sub System Leak Test In Progress</p> <p>Unchecked - No Sub System Leak Test In Progress</p>
SS 1 Point Span In Progress	<p>The value of this field is updated when the user sends the "Get Sub System Status" command to the bench.</p> <p>Checked - Sub System 1 Point Span In Progress</p> <p>Unchecked - No Sub System 1 Point Span In Progress</p>
SS 2 Point Span Status:	<p>The value of this field is updated when the user sends the "Get Sub System Status" command to the bench.</p> <p>0 = Two point span not in progress</p> <p>1 = Low point span in progress</p> <p>2 = Waiting for high point cal gas</p> <p>3 = High point span in progress</p>
SS Zero Procedure Time Out	<p>The value of this field is updated when the user sends the "Get Sub System Status" command to the bench.</p> <p>Checked - Sub System Zero Procedure Time Out</p> <p>Unchecked - No Sub System Zero Procedure Time Out</p>

SS Leak Test Fail	<p>The value of this field is updated when the user sends the "Get Sub System Status" command to the bench.</p> <p>Checked - Sub System Leak Test Fail</p> <p>Unchecked - No Sub System Leak Test Fail</p>
SS Span Procedure Time Out	<p>The value of this field is updated when the user sends the "Get Sub System Status" command to the bench.</p> <p>Checked - Sub System Span Procedure Time Out</p> <p>Unchecked - No Sub System Span Procedure Time Out</p>
SS Continuous Channel Data	<p>The value of this field is updated when the user sends the "Get Sub System Status" command to the bench.</p> <p>Checked - Sub System Continuous Channel Data mode</p> <p>Unchecked - No Sub System Continuous Channel Data mode</p>


Pump/Solenoid/Switch Status	
Field	Description
Pump 1	<p>The value of this field is updated when the user sends the "Sub System Pump Control" command to the bench.</p> <p>Checked - Enable Pump #1</p> <p>Unchecked - Disable Pump #1</p>
Pump 2	<p>The value of this field is updated when the user sends the "Sub System Pump Control" command to the bench.</p> <p>Checked - Enable Pump #2</p> <p>Unchecked - Disable Pump #2</p>
Pump 3	<p>The value of this field is updated when the user sends the "Sub System Pump Control" command to the bench.</p> <p>Checked - Enable Pump #3</p> <p>Unchecked - Disable Pump #3</p>
Sol 1	<p>The value of this field is updated when the user sends the "Sub System Solenoid Control" command to the bench.</p> <p>Checked - Enable Solenoid #1</p> <p>Unchecked - Disable Solenoid #1</p>
Sol 2	<p>The value of this field is updated when the user sends the "Sub System Solenoid Control" command to the bench.</p> <p>Checked - Enable Solenoid #2</p> <p>Unchecked - Disable Solenoid #2</p>

Sol 3	<p>The value of this field is updated when the user sends the "Sub System Solenoid Control" command to the bench.</p> <p>Checked - Enable Solenoid #3</p> <p>Unchecked - Disable Solenoid #3</p>
Sol 4	<p>The value of this field is updated when the user sends the "Sub System Solenoid Control" command to the bench.</p> <p>Checked - Enable Solenoid #4</p> <p>Unchecked - Disable Solenoid #4</p>
Sol 5	<p>The value of this field is updated when the user sends the "Sub System Solenoid Control" command to the bench.</p> <p>Checked - Enable Solenoid #5</p> <p>Unchecked - Disable Solenoid #5</p>
Sw 1	<p>The value of this field is updated when the user sends the "Get Sub System Status" command to the bench.</p> <p>Checked - Turn Switch #1 On</p> <p>Unchecked - Turn Switch #1 Off</p>
Sw 2	<p>The value of this field is updated when the user sends the "Get Sub System Status" command to the bench.</p> <p>Checked - Turn Switch #2 On</p> <p>Unchecked - Turn Switch #2 Off</p>
Sw 3	<p>The value of this field is updated when the user sends the "Get Sub System Status" command to the bench.</p> <p>Checked - Turn Switch #3 On</p> <p>Unchecked - Turn Switch #3 Off</p>

Sw 4	<p>The value of this field is updated when the user sends the "Get Sub System Status" command to the bench.</p> <p>Checked - Turn Switch #4 On</p> <p>Unchecked - Turn Switch #4 Off</p>
------	--

INI File Editor

This screen allows the operator to edit the PowerDynePC.INI file which is the main application file.

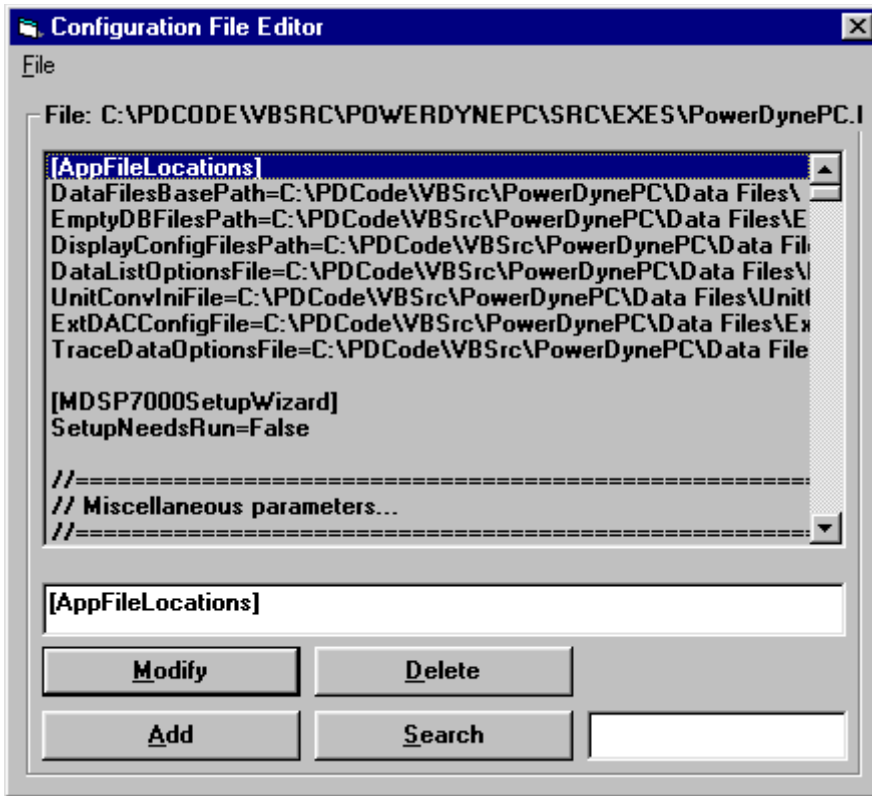

The operator can point and click with the left mouse button on the line that they wish edit, when this is done, the line will be highlighted in blue. The line will be displayed in a textbox underneath where the file is displayed. The operator can then edit the line by typing whatever they want in this textbox and then either press the modify button, or press the <ENTER> key to accept this new value. The operator can also delete a line in the file by pressing the "Delete" button, when this is done, the data will be cascaded upwards. The operator can also add a new line by pressing the button "Add" button, when this is done then a copy of the line that you are on will be made and the remaining lines in the file will be cascaded downwards.

Note

The operator can edit the section and the values for the entries in the file but not the entries themselves.

The following is a list of Buttons that the operator has reference to along with the meaning:

Buttons	Meaning
Modify	Allows the operator to modify the line, the operator can also


	press the <ENTER> key to modify a line in the file.
Delete	Allows the operator to delete a line, and all the remaining line underneath are cascaded upwards.
Add	Allows the operator to add a new line to the file by making a copy of the line that is highlighted, and then the operator can modify this line.
Search	Allows the operator to search the file for any line

The following is a list of menu items that the operator can reference along with their meaning:

Menu	Meaning	
File		
	Menu Item	Meaning
	Save	Allows the operator to save any changes made to the INI file.
Exit	Close out of the screen. If any changes were made to the data upon exiting, then the operator will be prompted if they should want to save any changes or not.	

Toggle Debug Window

This small screen may be displayed to help in unusual diagnostic circumstances.

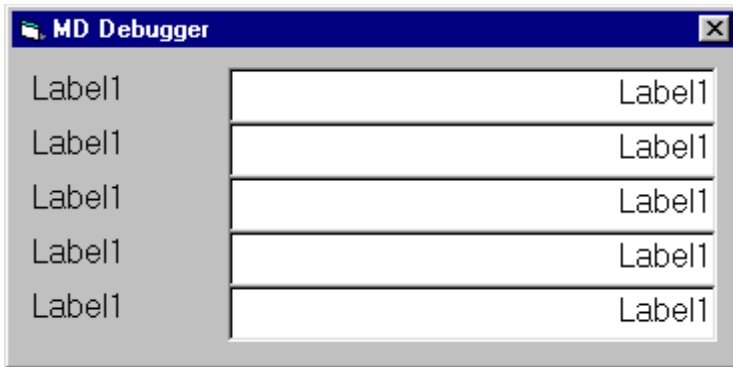

Generally, this screen is only used with the supervision of a qualified Mustang Dynamometer technician.

Lift

This menu allows the operator to control the main (or front) lift. The operator can select from the following menu items

Menu	Meaning
Up	Raise the lift/lock.
Down	Lower the lift/lock.

Rear Lift

This menu allows the operator to control the rear lift. The operator can select from the following menu items

Menu	Meaning
Up	Raise the lift/lock.
Down	Lower the lift/lock.

Drag Brake

This menu allows the operator to control the drag brake. The operator can select from the following menu items

Menu	Meaning
On	Engages the mechanical drag brake, using a lower-pressure regulator to the air brake on the roller's edge.
Off	Releases the mechanical drag brake.
Use Drag Brake At End Of Tests	Enables automatic use of the drag brake at the end of a test routine. This is helpful for high-inertia dynamometer's without loading mechanisms (eddy-current or motor type PAU(s)).

Fan

This menu allows the operator to control the vehicle cooling fan. The operator can select from the following menu items

Menu	Meaning
On	Enables the vehicle cooling fan output.
Off	Disables the vehicle cooling fan output.

AWD Clutch

This menu controls the front/rear coupling clutch in configurable all-wheel-drive dynamometers.

This menu will ONLY appear when your dynamometer is configured to drive a digital output to control this clutch.

DANGER: The dynamometer must not be moving when the clutch position is changed.

Menu	Meaning
AWD Mode	Click on this option to enable the front/rear coupling clutch.
2WD Mode	Click on this option to disable the front/rear coupling clutch
(Inertia Value)	This item will display the dynamometer's equivalent vehicle weight (inertia) value as currently configured.

AWD Gearbox

This menu controls the front/rear coupling clutch in configurable all-wheel-drive dynamometers.

This menu will ONLY appear when your dynamometer is configured to drive a digital output to control this clutch.

DANGER: The dynamometer must not be moving when the clutch position is changed.

Menu	Meaning
AWD Gearbox Engage	Triggers the engagement logic for the gearbox. The engage lever will be pushed by an air cylinder until speed or feedback indicate that the gearbox has shifted.
AWD Gearbox Dis-Engage	Triggers the disengagement logic for the gearbox. The disengage lever will be pushed by an air cylinder until speed or feedback indicate that the gearbox has shifted.
(Inertia Value)	This item will display the dynamometer's equivalent vehicle weight (inertia) value as currently configured.

Vehicle Direction

Lets the operator specify vehicle direction on dynamometers that support bi-directional testing. This has the effect of inverting all speed and torque inputs, and all PAU Signal (torque reference) outputs.

Menu	Meaning
Forward	Indicates that the vehicle is on the dynamometer in the “normal” direction.
Reverse	Indicates that the vehicle is on the dynamometer in the “reverse” direction.

PAU Mode

For certain dynamometers, lets the operator select between (2) and (4) PAU operational modes.

Menu	Meaning
Use (2) PAUs	Enables only the first (2) PAU enable outputs, and the first (2) PAU torque inputs.
Use (4) PAUs	Enables all (4) PAU enable outputs, and all (4) PAU torque inputs.

Scan Tools

This menu offers access to the vehicle interface “scan” tools supported by this application.

Sub-Menu Item	Use
OBD-II	To access the light-duty vehicle “OBD-II” interface.
DPA-III-Plus	To enable the (older) heavy-duty vehicle interface using the DPA-III-Plus scan tool, enabling monitoring of a (short) fixed list of values via J1708 and/or J1939.
RP1210	To enable the (newer) heavy-duty vehicle interface using various Dearborn scan tools (DPA-III/IV/V, NetBridge), enabling monitoring of a (longer) fixed list of values via J1708 and/or J1939.
Generic CAN	To enable the generic CAN monitoring feature, using the “CANUSB” CAN<->USB bridge device. You can monitor 1..10 CAN channels, which are placed on top of the OBD-II channels (so, Generic CAN and OBD-II cannot be used at the same time).
EFI Live FlashScan V2	To enable an interface to the EFI Live FlashScan V2 unit. The intended use of this interface is to allow for simultaneous access to OBD-II values from both the PowerDynePC software and a vehicle tuning tool, as well as to allow the vehicle tuning tool and the dynamometer software to share other values. (This interface has not been implemented by EFI Live as of 2017/05/22.)

OBD-II

Connect / Disconnect

These items allow the operator to connect to or disconnect from the OBD-II scan tool.

Channel Setup

This item allows the operator to specify which channels should be monitored via the OBD-II scan tool.



Monitor Engine Speed


If checked, engine speed will be monitored, regardless of the selections made below. **This option must be checked if the dynamometer's engine RPM source is set to OBD-II.**

Ch 1.. Ch 10

The operator may specify 1..10 OBD-II channels for monitoring. The actual list of channels supplied by the vehicle may be fixed (for standard OBD-II), or vehicle-specific (for enhanced OBD-II).

Get Trouble Codes

This item allows the operator to get/view/reset trouble codes.

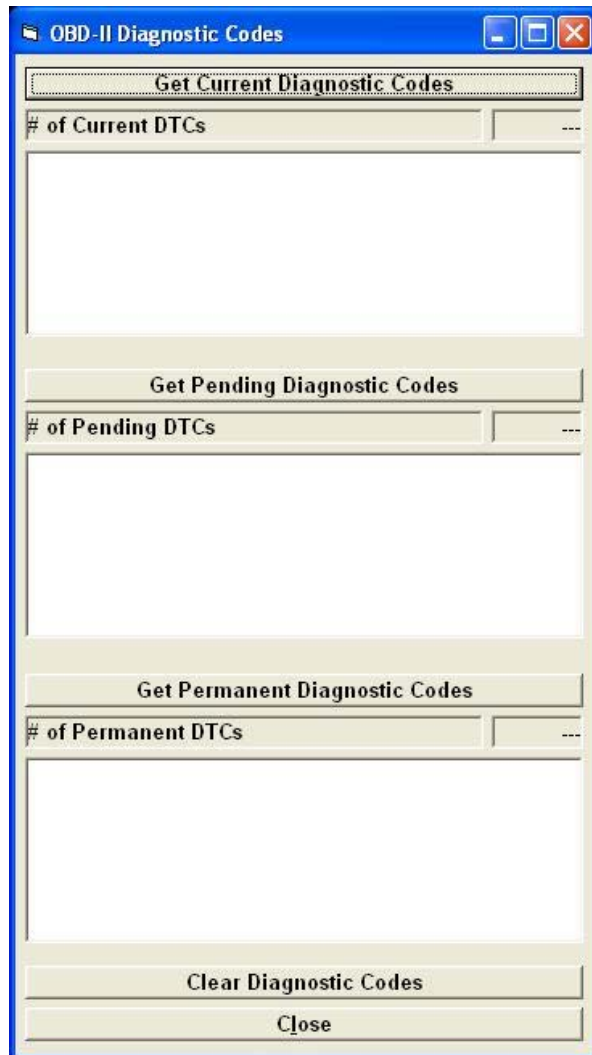

Get Current Diagnostic Codes

Retrieves all current diagnostic codes from the vehicle.

Get Pending Diagnostics Codes

Retrieves all pending diagnostic codes from the vehicle.

Get Permanent Diagnostic Codes

Retrieves all permanent diagnostic codes from the vehicle.

Clear Diagnostics Codes

Clears all diagnostic codes that can be cleared.

Close


Closes this screen.

Save PID Validation Data

This item allows the operator to save OBD-II PID validation data to file, which can improve validation speed after future connections. This will show a standard File-Save dialog box, defaulting to C:\Mustang\Chassis\PowerDynePC\Data Files\OBDII Files.

Select Scan Tool Type


This item allows the operator to select from the supported list of OBD-II scan tool types.

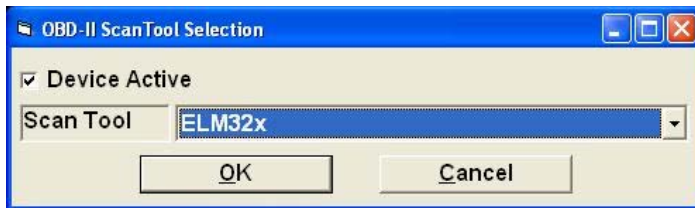

Supported types are: ELM32x, AutoTap, and J2534.

Create Debug Log File

This item allows the operator to create a debug log file, to aid in determining the cause of various OBD-II scan tool related problems.

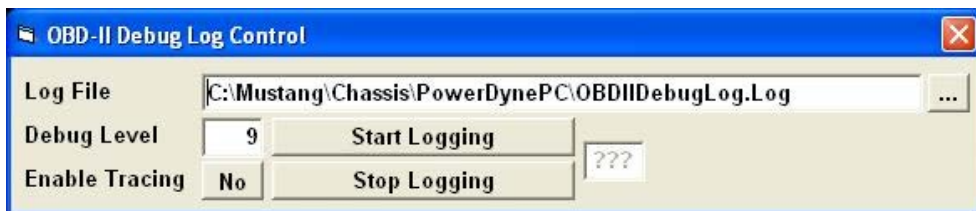

To create a log file: specify or select a log file to create, set “Debug Level” and “Enable Tracing” as instructed, and click “Start Logging” – then, connect, monitor channels, and disconnect from the OBD-II scan tool, then come back and click “Stop Logging” – email the log file you created to Mustang’s tech support.

DPA-III-Plus

Connect / DisConnect

These items allow the operator to connect to or disconnect from the DPA-III-Plus scan tool, using the older interface to this hardware. Users are encouraged to use the "RP1210" interface instead.


RP1210

J1708 – Connect / Disconnect

These items allow the operator to connect to or disconnect from J1708 via various Dearborn scan tools, using the newer “RP1210” interface.

J1708 – Channel Setup

This item allows the operator to specify which channels should be monitored via J1708.

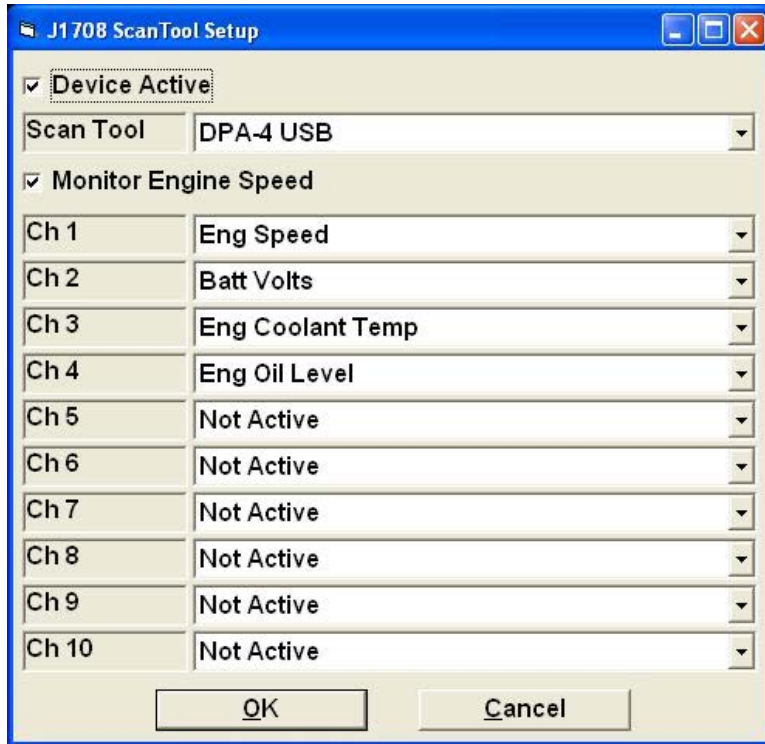


J1708 supports a fixed list of values, and all such values are available.

J1939 – Connect / Disconnect

These items allow the operator to connect to or disconnect from J1939 via various Dearborn scan tools, using the newer “RP1210” interface.

J1939 – Channel Setup

This item allows the operator to specify which channels should be monitored via J1939.

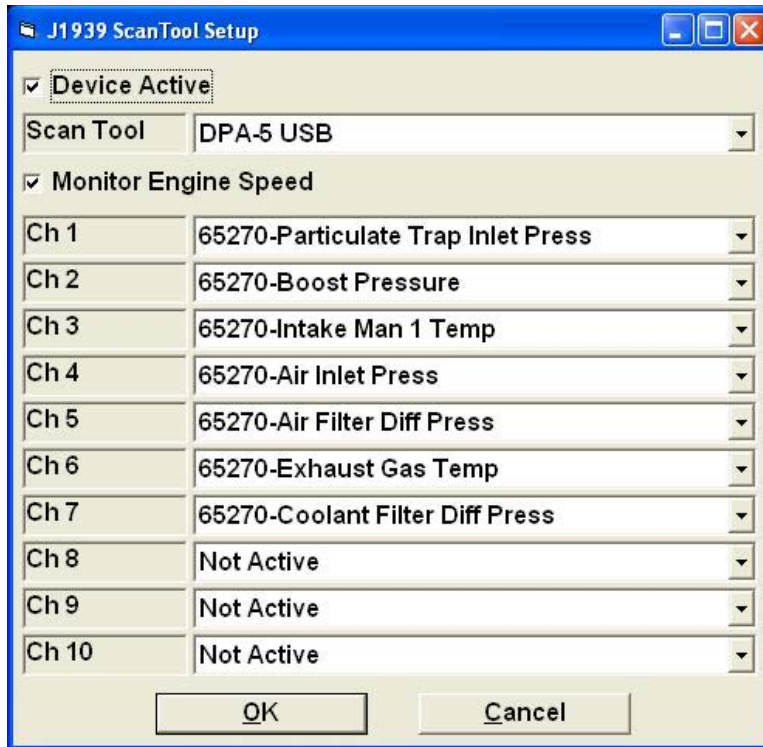


J1939 supports a (basically) fixed (but very long) list of values, and not all such values are available – if you have a need for a specific PGN, please contact Mustang to see about including it in the list of supported PGNs.

Generic CAN

The intended use of this interface is to allow for use of .DBC (.CANDB) files that describe some generic CAN bus. You can monitor 1..10 channels from a CAN bus, and acquire engine RPM as well, from any specified channel. These values will be placed in the system channel list on top of the OBD-II channels – so you cannot use both this interface and the OBD-II interface at the same time.

Connect

You use this screen to connect to a CAN bus. You must know the communications parameters, and have a valid .DBC file describing the data on the CAN bus. Connect first, then load the CAN database, then select channels to monitor. This interface only works with the “CANUSB” interface device, using the “D2XX” drivers (NOT the “VCP” = Virtual COM Port drivers).

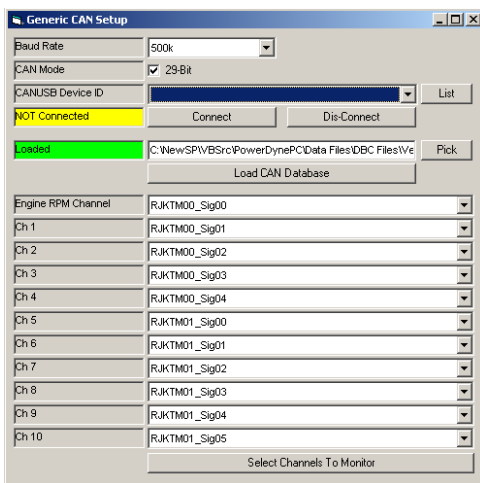


DisConnect

This menu item will disconnect and stop communication with the CAN bus.

Diagnostics

This screen shows diagnostic information about your CAN connection and database of signals.

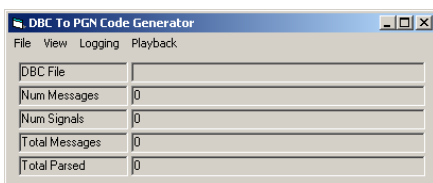

EFI Live FlashScan V2

The intended use of this interface is to allow for simultaneous access to OBD-II values from both the PowerDynePC software and a vehicle tuning tool, as well as to allow the vehicle tuning tool and the dynamometer software to share other values. (This interface has not been implemented by EFI Live as of 2017/05/22.)

Connect / Disconnect

These items allow the operator to connect to or disconnect from the EFI Live FlashScan V2 device. The user must specify an RS-232 “COM” port for communications.

Channel Setup


This item allows the operator to specify which channels should be shared between the tuning tool and the PowerDynePC software.



The list of channels is determined by the FlashScan V2 device, including the names. **To monitor engine RPM through this connection, the user must select the engine RPM source channel by name.**

Diagnostics

This item shows a diagnostics screen used for debugging this interface.

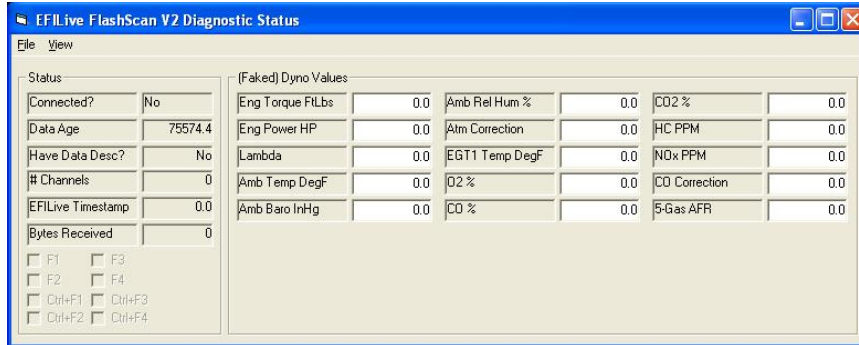

Please contact Mustang for assistance with this screen.

Display

This menu allows the operator to configure the display to their liking. The operator can select from a list of predefined configurations to choose from and also modify the display formats and display colors for the indicators that make up the configurations.


The operator can select from the following menu item in order to configure their display settings:

Menu	Meaning
Select Display Panel	Allows the operator to select from a predefined list of indicators; these indicators can be angular or linear gauges, graph or textboxes that display values.
Edit Display Configuration	Allows the operator to configure the display formats as well as the display colors for the different indicators that make up the display.
Playback Test Data	Opens the play-back control screen, to show recorded test data on the main display.
Channel Fault Options	Allows the operator to specify which channels generate a fault if their actual value is outside the range defined in Edit Display Configuration.
Use Per-Test Display Settings	(Not actually in use.)
Dyno Load Controller Status	Displays a window that can be used to see how well the dyno load controller is operating, chiefly for diagnostic and PID tuning use.
Throttle Controller Status	Displays a window that can be used to see how well the throttle controller is operating, chiefly for diagnostic and PID tuning use.
Brake Controller Status	Displays a window that can be used to see how well the brake controller is operating, chiefly for diagnostic and PID tuning use.


Speed Follower Status	Displays a window that can be used to see how well the dynamometer's speed-follower controller is operating, chiefly for diagnostic and PID tuning use.
Throttle Controller	Displays the window used to manually control the throttle controller.
Brake Controller	Displays the window used to manually control the brake controller.
Auxiliary Digital Output Control	Displays the window used to manually control the user-defined auxiliary digital output channels.

Select Display Panel

This menu item when selected allows the operator to select from a predefined list of indicators used to display channel data in real-time.

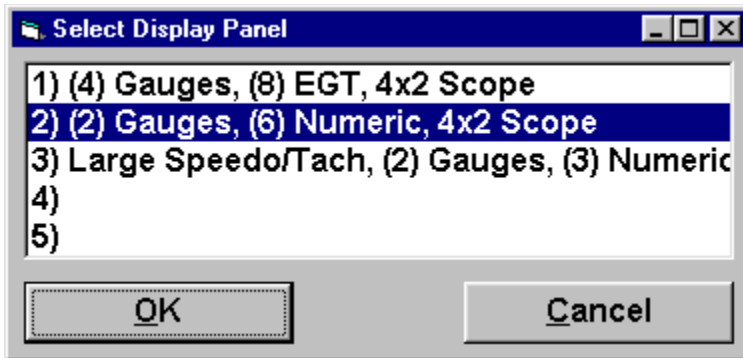

The operator can point and click on any items in the predefined list to display, after the operator has made their select and press the “OK” button, then that will be displayed on the top part of the screen.

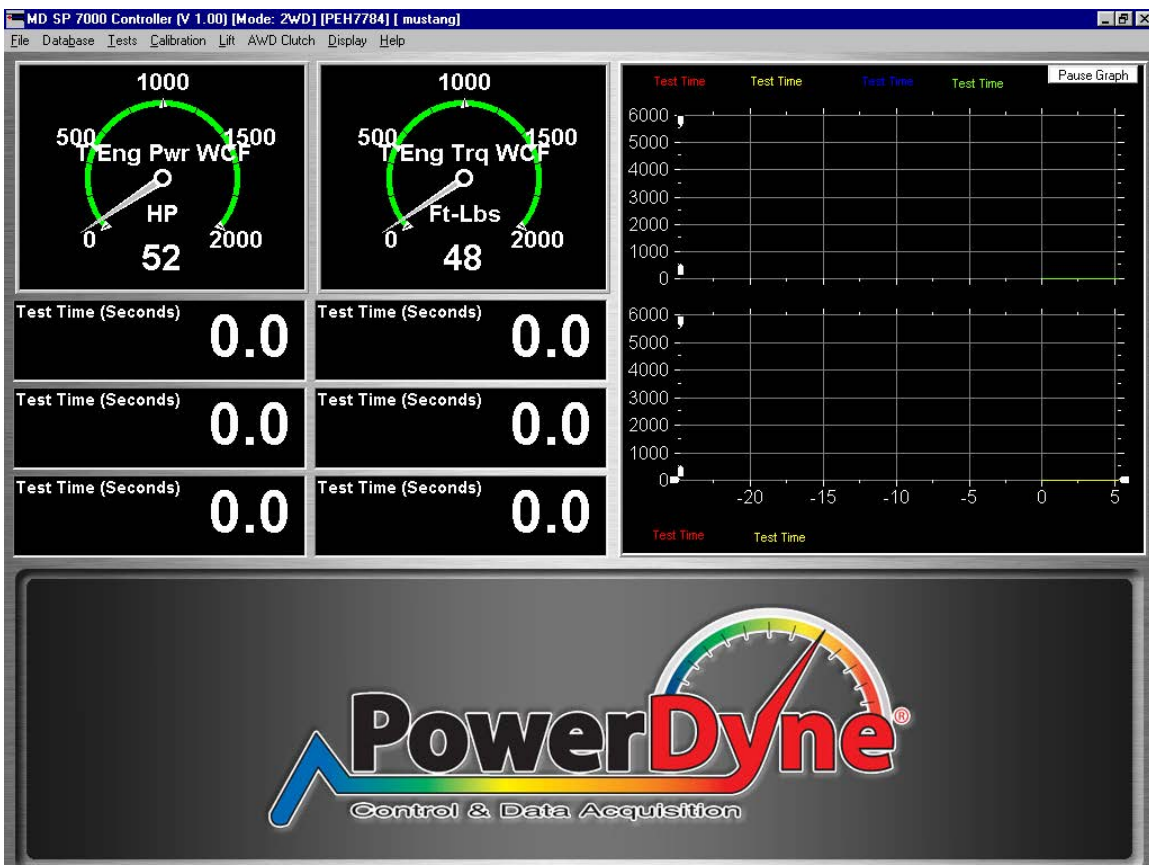


Note

The display panels can only be configured at Mustang Dynamometer, once one is created, then a new version would be sent to the customer that requested the change.

Edit Display Configuration

The screen allows the operator to select anyone of the different channels and modify how the data gets displayed.

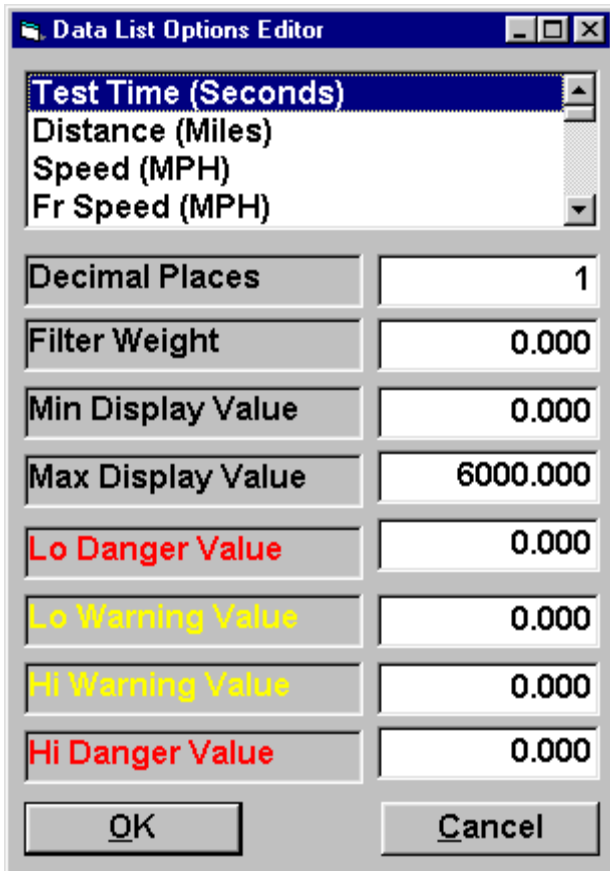

The list at the top of this screen shows the operator the complete list of channels available for display and recording in this system. Each channel can be selected, then configured, as shown below.

Screen Field	Meaning
Decimal Places	The number of decimal places to the right of the decimal point.
Filter Weight	This value will filter out any spikes and smooth out the data. This value must be between 0.000 and 0.999.
Min Display Value	The minimum value displayed on graphical displays (does not affect numeric displays).
Max Display Value	The maximum value displayed on graphical displays (does not affect numeric displays).
Lo Danger Value	This defines the minimum danger value displayed and is represented as a RED band on an angular, circular, or linear

	gauge. If faults are enabled for a channel, and the actual value goes below this value, a “Channel Fault” latched fault code will be generated.
Lo Warning Value	This defines the minimum warning value displayed and is represented as a YELLOW band on an angular, circular, or linear gauge.
Hi Warning Value	This defines the maximum warning value displayed and is represented as a YELLOW band on an angular, circular, or linear gauge.
Hi Danger Value	This defines the maximum danger value displayed and is represented as a RED band on an angular, circular, or linear gauge. If faults are enabled for a channel, and the actual value goes above this value, a “Channel Fault” latched fault code will be generated.

Playback Test Data

This window can be used to play recorded test data back on the main display.



Any test file that can be graphed, can be played back onto the main display using this screen.


Channel Fault Options

Any channel that is checked in this list will generate a “Channel Fault” latched fault code if its actual value goes outside of the min/max values specified in the [Edit Display Configuration](#) screen.



Dyno Load Controller Status

This window can be used to see how well the dyno load controller is operating, chiefly for diagnostic and PID tuning use.

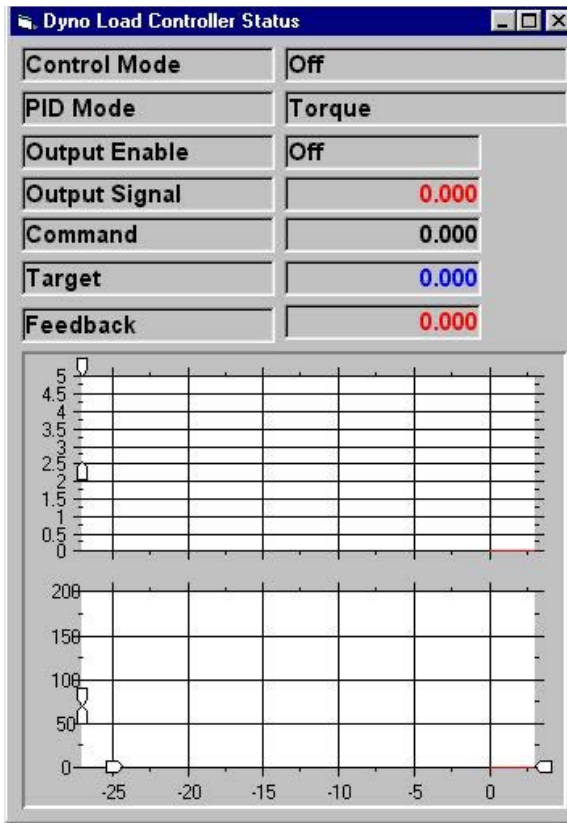

Note: Output signal is graphed in the top track, command, target and feedback are graphed in the bottom track, each in the same color as the numeric values are displayed in.

Control Mode

Shows the active mode of the controller.

PID Mode

Shows the PID mode that the active control mode uses.

Output Enable

Shows if the controller's output is enabled (should be enabled anytime a test is running, unless there is a system fault).

Output Signal

Shows the output value of the controller, normally a value between 0.000 and 5.000.

Command

The commanded value for the current mode, as specified by the operator.

Target


The ramped target for the controller – will approach the commanded value using the current ramping values.

Feedback

The feedback for the controlling PID loop. Should match the “Target” value.

Throttle Controller Status

This window can be used to see how well the throttle load controller is operating, chiefly for diagnostic and PID tuning use.

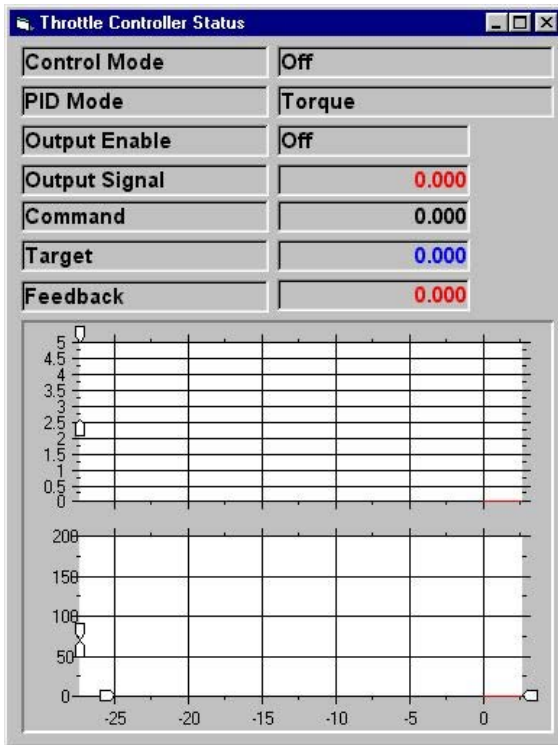

Note: Output signal is graphed in the top track, command, target and feedback are graphed in the bottom track, each in the same color as the numeric values are displayed in.

Control Mode

Shows the active mode of the controller.

PID Mode

Shows the PID mode that the active control mode uses.

Output Enable

Shows if the controller's output is enabled (should be enabled anytime a test is running, unless there is a system fault).

Output Signal

Shows the output value of the controller, normally a value between 0.000 and 5.000.

Command

The commanded value for the current mode, as specified by the operator.

Target


The ramped target for the controller – will approach the commanded value using the current ramping values.

Feedback

The feedback for the controlling PID loop. Should match the “Target” value.

Brake Controller Status

This window can be used to see how well the brake load controller is operating, chiefly for diagnostic and PID tuning use.

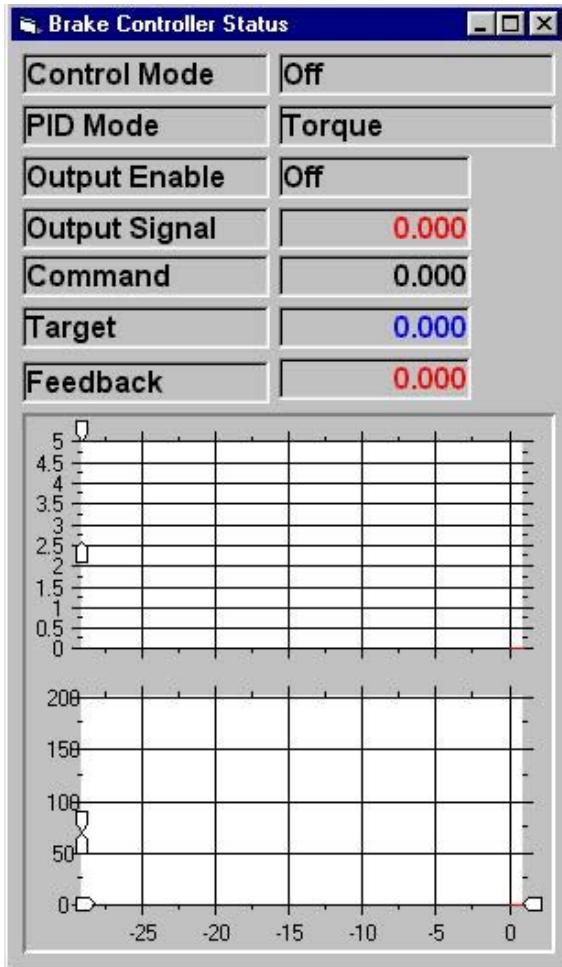

Note: Output signal is graphed in the top track, command, target and feedback are graphed in the bottom track, each in the same color as the numeric values are displayed in.

Control Mode

Shows the active mode of the controller.

PID Mode

Shows the PID mode that the active control mode uses.

Output Enable

Shows if the controller's output is enabled (should be enabled anytime a test is running, unless there is a system fault).

Output Signal

Shows the output value of the controller, normally a value between 0.000 and 5.000.

Command

The commanded value for the current mode, as specified by the operator.

Target

The ramped target for the controller – will approach the commanded value using the current ramping values.

Feedback

The feedback for the controlling PID loop. Should match the “Target” value.


Speed Follower Status

This window can be used to see how well the dynamometer's speed-follower controller is operating, chiefly for diagnostic and PID tuning use.

This is the same as the Dyno Load Controller Status display, but will only ever show "Speed" mode values.

Throttle Controller

This window can be used to control the throttle controller.

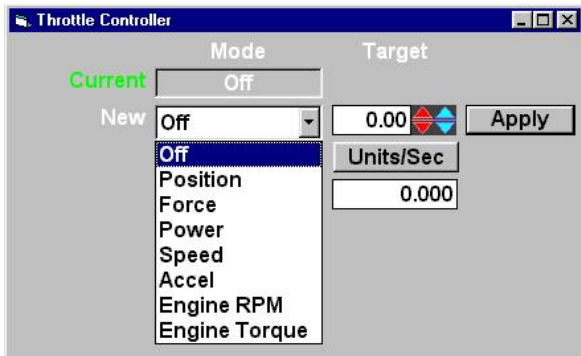

NOTE: This windows must NOT be displayed when the programmed force, programmed speed, or PRO Script tests are running, as interference between the programmed commands and the manual commands can occur.

Current

Shows the current control mode of the controller.

New

Lets the operator specify a new control mode.

Target

Lets the operator specify a target for the selected control mode.

Apply (button)

Lets the operator put the controller in the selected control mode, using the specified command value and ramping values.

Ramp By


Lets the operator specify ramping mode (units / second or fixed-time).

Units /Sec

Lets the operator specify ramping values (units / second to ramp at, or seconds to ramp over).

Brake Controller

This window can be used to control the brake controller.

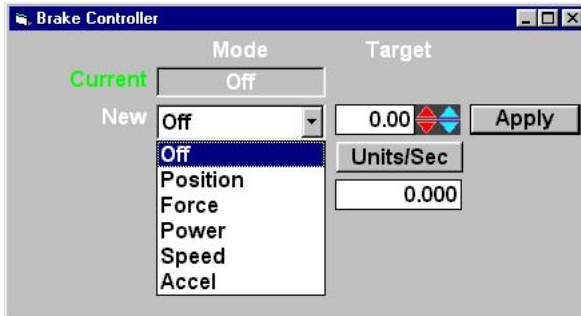

NOTE: This windows must NOT be displayed when the programmed force, programmed speed, or PRO Script tests are running, as interference between the programmed commands and the manual commands can occur.

Current

Shows the current control mode of the controller.

New

Lets the operator specify a new control mode.

Target

Lets the operator specify a target for the selected control mode.

Apply (button)

Lets the operator put the controller in the selected control mode, using the specified command value and ramping values.

Ramp By


Lets the operator specify ramping mode (units / second or fixed-time).

Units /Sec

Lets the operator specify ramping values (units / second to ramp at, or seconds to ramp over).

Auxiliary Digital Output Control

This window can be used to control the user-defined auxiliary analog output channels.

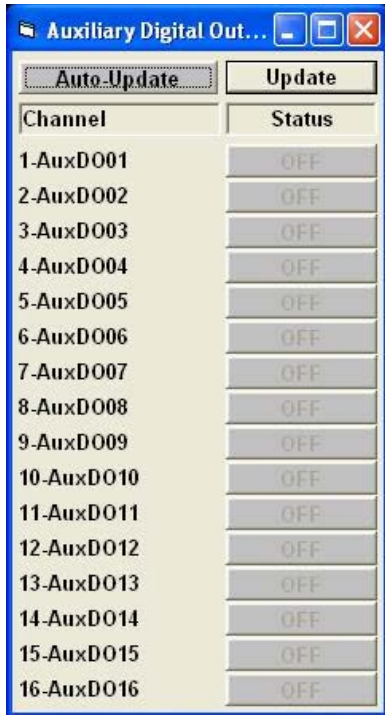

The names, channels, etc are configured in the [Auxiliary I/O Setup - Auxiliary Digital Output Setup](#) screen.

Help

This window can be used to view the “About” box, or open the software manual.

About Shows a standard “About” dialog box.

Software Manual Attempts to open the software manual, if installed.



Reset Fault

Clicking on this menu item will clear any latched fault, if possible.

Folders And Files Used By The System

The following is a detailed description of the menu hierarchy along with the files that go into each folder.

NOTE: All “Sub-Folder” values are relative to the main software installation folder, normally:

C:\Mustang\Chassis\PowerDynePC

The main application folder

File	Description
PowerDynePC	The main program executable.
MD110032.DLL	A library used to communicate with the ADA-1100 I/O board driver.
MD7KDisplay.DLL	A library used to provide the various display panels.
MDPopupMenu.DLL	A library used to provide pop-up menus.
MDSDATISmartTachDriver.DLL	A library used to communicate with the ATI SmartTach via the serial interface.
MDSMDTreeDriver.DLL	A library used to communicate with the Mustang Dynamometer drag racing lights (tree).
MDSPDataList.DLL	A library used to provide data list functions.
MDTypeTools.DLL	A library used in serial communications.
PD7000DataConvert.DLL	A program that imports test data files from an existing MD-7000 software installation.

The “Test Files” sub-folder

File	Description
PowerDynePC Test Index.MDB	A Microsoft Access database file used as an index to all existing test records. Can be replaced with a blank file without losing any test data – simply re-scan your test files to rebuild this index.
(yyyy-mm) Sub-Folders	All test results are kept in sub-folders named “yyyy-mm”. Each test file is named “Type-xx yyyy-mm-dd hh-mm-ss.TRB”, where

	<p>“xx” = the numeric identifier for each type of test the system can perform</p> <p>“yyyy-mm-dd hh-mm-ss” = the year, month, day, hour, minute and second the test was performed.</p>
--	--

The “Data Files” sub-folder

File	Description
PowerDynePC.Ini	The main configuration file for this application. Contains many different values, and is similar to the “MDSP7000.Ini” file used by the MD-7000 software.
ASM_CP01.INI	A small data file used by some library routines.
ASM_Hdr.Txt	A small data file used by some library routines.

The “Data Files\Control Scripts” sub-folder

File	Description
*.FCV	Programmed force curve files, used by the programmed force test.
*.SCV	Programmed speed curve files, used by the programmed force test.

The “Data Files\DB Files” sub-folder

File	Description
PowerDynePC Cos Owners Vehicles.MDB	A small database used to keep the lists of companies, customers and vehicles used. This file can be replaced by a blank database and all existing test records re-scanned to re-generate this index database.

The “Data Files\Display Configs” sub-folder

File	Description
*.Ini	These files all contain the settings for various display panels used by this software. Channel selections, display options, etc.

The “Data Files\Drivers Traces” sub-folder

File	Description
------	-------------

*.Trc	Driver's trace files for emissions testing, for example IM-240, FTP, etc.
*.Txt	Prompt files that are used with the *.Trc files to show the operator specific prompts at specific times during an emissions test. Generally, these should be named something like "IM-240 Prompts.Txt", so it is obvious that the prompt file is associated with "IM-240.Trc".

The "Data Files\Dyno Configs" sub-folder

File	Description
DynoConfig2WD.Cfg	Dynamometer settings specific to operation in 2WD mode. Contains copies of various dynamometer parameters.
DynoConfig4WD.Cfg	Dynamometer settings specific to operation in 4WD mode. Contains copies of various dynamometer parameters.
DynoConfigBike.Cfg	Dynamometer settings specific to operation in bike mode. Contains copies of various dynamometer parameters.

The "Data Files\Emissions Standards" sub-folder

File	Description
ASM_CP01.INI	A data file containing ASM cut-point information, used by library routines, but not by this software directly.

The "Data Files\Empty DB Files" sub-folder

File	Description
PowerDynePC Cos Owners Vehicles.MDB	A blank database file provided in the event that the companies, customers & vehicles database file becomes corrupted.
PowerDynePC Test Index.MDB	A blank database file provided in the event that the test index database file becomes corrupted.

The "Data Files\Graph Viewer" sub-folder

File	Description
TraceGraphViewer.Ini	A configuration file for the graph viewing screen – contains the default viewing options for that screen.
*.Ini	Optional other configuration files for the graph viewing screen – these options are not loaded automatically, but can be loaded manually using the options on the "File" menu.

The “Data Files\Hardware Configs” sub-folder

File	Description
110032BitConfig.Ini	The configuration file for the ADA-1100 I/O board driver.
BrakeController.Ini	The configuration file for the vehicle brake controller – includes PID, ramping and step-size values.
DynoLoadController.Ini	The configuration file for the dynamometer’s load controller – includes PID, ramping and step-size values.
ExtDACConfig.Ini	The configuration file for the optional I/O board used to drive various system channel values out on analog outputs to an external data acquisition system.
ThrottleController.Ini	The configuration file for the vehicle throttle controller – includes PID, ramping and step-size values.

The “Data Files\Icons” sub-folder

File	Description
*.ICO	Various icons used by this software.

The “Data Files\Images” sub-folder

File	Description
*.BMP, *.JPG, *.JPEG, *.GIF	Various images used by this software.

The “Data Files\Language Files” sub-folder

File	Description
*.LNG	Language translation files used by this software.

The “Data Files\Misc” sub-folder

File	Description
DataListOptions.Ini	Display and filtering options applied at the data-list layer (these affect all displayed and recorded values).
TestPicker.Ini	Configuration values used by the (old MID7000 style) test picking screen.
TraceDataOptions.Ini	Configuration values for the data recording facility – includes the maximum number of points to record, and

	which channels to record.
UnitConversionOptions.Ini	Configuration values relative to the display units that should be used for various types of values.

The “Data Files\OBDII Files” sub-folder

File	Description
OBDIIScanTool.Ini	Configuration values for the OBD-II interface.
POBDII.###	Data files used by the OBD-II interface library.
*.Dat	Data files containing PID validation data for any vehicles for which the operator has saved the PID validation data to file (to speed up future Connect operations – validation from file is much faster than validation via the OBD-II link).

The “Data Files\Parasitic Maps” sub-folder

File	Description
*.DPF	Dynamometer Parasitic Files – these files contain descriptions of the parasitic losses of the dynamometer in various configurations. We recommend that you use “Dyno.DPF” for dyno-only data, “Zero.DPF” for a blank parasitic losses file, and “<Vehicle_Name>.DPF” for vehicle-on-dyno parasitic losses data specific to a vehicle.

The “Data Files\PRO Script Files” sub-folder

File	Description
*.CSV	Spreadsheet-friendly “Comma Separated Values” format text files containing command scripts for the PRO Script Test routine.

The “Data Files\SmartTach Config Files” sub-folder

File	Description
All other *.Ini files	Configuration files used to configure the ATI SmartTach in various ways. The operator can create new configuration files specific to their needs.
SmartTachConfig.Ini	Configuration values for our serial connection to the ATI SmartTach.
Inductive.Ini	Contains configuration values that will be downloaded to the device when “Download Inductive Configuration” is selected in the menu system.

Optical.Ini	Contains configuration values that will be downloaded to the device when “Download Optical Configuration” is selected in the menu system.
TS1.Ini	Contains configuration values that will be downloaded to the device when “Download TS-1 Configuration” is selected in the menu system.

The “Data Files\SpeedGradeDriversTraces” sub-folder

File	Description
*.Txt	Text files containing grade-vs-distance information used to drive the driver’s aid during the programmed force test routine (only in use by 1 customer at present).

The “Data Files\Vehicle Image Files” sub-folder

File	Description
*.JPG	Image files for vehicle information records.

The “Data Files\Vehicle Lookup DB Files” sub-folder

File	Description
VehInfo.AccDB MotorcycleInfo.AccDB	(Encrypted) Access database files used to lookup vehicle information, for vehicle simulation loading, power corrections, etc.